

Indiana CDL Test Booklet

Skills Test



Pages 1-49

Knowledge Test



Pages 50-204

Table of Contents

Skills Test Chapter

Introduction	5
Pre-trip Inspection	5
Basic Control Skills Test	5
Road Test	5
Driver Instructions	5

Section 1: Vehicle Inspection Test

Purpose of the Vehicle Inspection Test	6
General Instructions	6
Safety Rules	6
Test Procedures	7
4 Point Air Brake Check	8 - 11
Scoring Standards	12 - 23
Memory Aid	24 - 25
Inspection Routine (Bus)	26
Inspection Items (Bus)	27
Inspection Routines (Straight Truck)	28
Inspection Items (Straight Truck)	29
Inspection Routines (Tractor/Trailer)	30
Inspection Items (Tractor/Trailer)	31
Truck/Trailer Connection	32

Section 2: Basic Control Skills Test

Purpose of the Basic Control Skills Test	33
General Instructions	33
Forward Stop/Straight Line Backing	34 - 35
Backward Serpentine	36
Alley Dock	37 - 38
Parallel Park (Conventional)	39 - 40
Scoring Standards	41

Section 3: Road Test

Purpose of Road Test	42
General Instructions	42
Grounds for Immediate Failure	43
Road Test Procedures	44
Scoring Standards	44 - 48
Road Test Scoring	46
CDL Classification System	47
Additional Information	48

To make an appointment for a skills test, please obtain a listing of the CDL third party test sites at any Indiana license branch.

Table of Contents

Knowledge Test Chapter

How to Get a Commercial Driver's License	50 - 58
--	---------

PART ONE

Section 1: Introduction	60
1.1 Commercial Driver License Tests	60
1.2 Other Safety Act Rules	61
Section 2: Driving Safely	63
2.1 Vehicle Inspection	64
2.2 Basic Control of Your Vehicle	78
2.3 Shifting Gears	80
2.4 Seeing	82
2.5 Communicating	84
2.6 Controlling Speed	87
2.7 Managing Space	90
2.8 Driving at Night	94
2.9 Driving in Fog	97
2.10 Driving in Winter	97
2.11 Driving in Very Hot Weather	99
2.12 Railroad Crossings	100
2.13 Mountain Driving	101
2.14 Seeing Hazards	103
2.15 Emergencies	107
2.16 Skid Control and Recovery	110
2.17 Accident Procedures	112
2.18 Fires	112
2.19 Staying Alert and Fit to Drive	114
2.20 Hazardous Materials Rules For All Commercial Drivers	117
Section 3: Transporting Cargo Safely	120
3.1 Inspecting Cargo	120
3.2 Weight & Balance	121
3.3 Securing Cargo	123
3.4 Other Cargo Needing Special Attention	124

PART TWO

Section 4: Transporting Passengers	126
4.1 Pre-trip Inspection	126
4.2 Loading and Trip Start	127
4.3 On the Road	129
4.4 After-trip Vehicle Inspection	130
4.5 Prohibited Practices	130
4.6 Use of Brake-door Interlocks	131
Section 5: Air Brakes	132
5.1 The Parts of an Air Brake System	132
5.2 Dual Air Brake	137
5.3 Inspecting Air Brake Systems	137
5.4 Using Air Brakes	139

Section 6:	Combination Vehicles	143
6.1	Driving Combination Vehicles Safely	143
6.2	Combination Vehicle Air Brakes	147
6.3	Coupling and Uncoupling	150
6.4	Inspecting a Combination Vehicle	156
Section 7:	Doubles and Triples	159
7.1	Pulling Double/Triple Trailers	159
7.2	Coupling and Uncoupling	160
7.3	Inspecting Doubles and Triples	163
7.4	Doubles/Triples Air Brake Check	164
Section 8:	Tank Vehicles	166
8.1	Inspecting Tank Vehicles	166
8.2	Driving Tank Vehicles	167
8.3	Safe Driving Rules	168
Section 9:	Hazardous Materials	169
9.1	The Intent of the Regulations	170
9.2	Hazardous Materials Transportation-Who Does What	171
9.3	Communication Rules	172
9.4	Loading and Unloading	184
9.5	Bulk Packaging Marking, Loading & Unloading	188
9.6	Hazardous Materials-Driving & Parking Rules	189
9.7	Hazardous Materials-Emergencies	193
	Appendix A Radioactive Separation Table	198
	Appendix B Table of Hazard Class Definitions	198
	Glossary	199

Skills Test Section

Introduction

All drivers of Commercial Motor Vehicles must have a Commercial Driver's License (CDL). To get a CDL, you must pass knowledge and skills tests. This portion of the manual will help you pass the skills test. There are three types of CDL skills tests; the pre-trip inspection test, the basic control skills test, and the road test. These are described in this manual. You must take these tests in the type of vehicle for which you intend to be licensed. Please arrive a few minutes early for your skills test. You will be required to fill out and sign the "Application for CDL Driver Skills Examination" form and the examiner will give you the general instructions before starting the skills test.

PRE-TRIP INSPECTION

Purpose. To see if you know whether the vehicle is safe to drive.

Test Procedure. You will be asked to do a pre-trip inspection on your vehicle and to explain to the examiner what you would inspect and why. The examiner will mark on a scoring form each item that you correctly inspect or explain. This manual tells you what you need to inspect.

BASIC CONTROL SKILLS TEST

Purpose. To evaluate your basic skills in controlling the vehicle.

Set-up. The test set-up consists of various exercises marked out by lines, traffic cones, or something similar. The exercises consist of forward, backing, and turning maneuvers.

The examiner will explain to you how each exercise is to be done. You will be scored on how well you stay within the exercise boundaries and how many pullups you make.

ROAD TEST

Purpose. To evaluate your ability to drive safely in a variety of on-the-road situations.

Test Procedures. The test drive is taken over a route approved by the State of Indiana. It will include left and right turns, intersections, railway crossings, curves, up and down grades, rural or semi-rural roads, city multi-lane streets, and expressway driving.

You will drive over the test route following instructions given by the examiner. The examiner will score specific tasks such as turns, merging into traffic, lane changes, and speed control, at specific places along the route. The examiner will also score whether you correctly do tasks such as signaling, searching for hazards, controlling speed, and lane positioning.

DRIVER INSTRUCTIONS: These are the general instructions the examiner will give you at the beginning of the test.

"The testing session will consist of three parts; a vehicle inspection test, a basic control skills test, and a road test. For the vehicle inspection test, I will ask you to do a thorough inspection of your vehicle. For the basic control skills test, I will have you do several backing and parking exercises. For the road test, we will go out on the road for a trip that will take 30 to 45 minutes."

"At all times during this test, when you are behind the wheel, you are in charge of the vehicle. I will never intentionally tell you to do something that might be unsafe."

"I will give you directions as we go along. Ask me to explain if you do not understand a direction, or if you have any questions."

Section 1

Vehicle Inspection Test

Purpose of the Vehicle Inspection Test

To successfully pass your skills test, you will need to conduct a pre-trip inspection on the vehicle you will be driving. The purpose of this inspection is to make sure the vehicle is safe to operate, and to see if you have the knowledge and skills to inspect your vehicle. The examiner will mark on a grading form each item that was inspected correctly. You must have inspected at least 80 percent of the total items on your vehicle to pass the Vehicle Inspection Test.

The material in this section will help you pass your Vehicle Inspection Test.

General Instructions

DRIVER INSTRUCTIONS:

This is what the examiner will tell you to do; “For the vehicle inspection, please conduct a thorough inspection of the vehicle. Each axle must be inspected separately. You may use the Vehicle Inspection Memory Aid if you want to. **IF YOU FAIL THE AIR BRAKE CHECK, IT WILL BE AN AUTOMATIC FAILURE.**

“As you do the inspection, point to the things you are inspecting, and explain what you are looking for.”

Begin by inspecting the front of the truck. Open the hood and inspect the engine compartment. Inspect the front axle systems on the driver’s side. **For safety reasons DO NOT raise the cab on a cab-over type vehicle.** When finished, close the hood and proceed down the driver’s side of the truck/bus. It is only necessary to inspect one side of the vehicle. As you proceed along the side of the vehicle, inspect each axle separately and completely. If any item is on the opposite side, describe the inspection of that item at the appropriate time. **For safety reasons, DO NOT get under the vehicle.** Inspect the rear of the vehicle. When you have completed inspecting the rear of the vehicle, tell the examiner you are finished with the exterior inspection. Proceed to the driver’s compartment. For the in-cab inspection, start the engine and physically check each item in the driver’s compartment (and passenger area of a bus). If your vehicle has air brakes, conclude your inspection with the four-point check. **If you miss any part of the four-point air brake check, it will be an AUTOMATIC FAILURE.**

The following rules should be observed when doing the inspection:

1. Always keep the examiner in sight. Make sure you stay where the examiner can always see and hear you.
2. **Never get under the truck**, in front of it, or behind it if there is any chance the truck may move.
3. Be careful when you point to items in the engine compartment. You do not have to make contact with the parts you are inspecting.
4. Use care getting in and out of the truck. Your mind may be on the test or the examiner, so watch your step.
5. You are responsible for your own safety while you do the inspection. Do not rely on others to warn you. The examiner may not see a hazard in time to warn you. **SAFETY FIRST!!!**

Safety Rules

This is a review of the inspection procedures.

1. The examiner provides the instructions.
2. Begin the inspection when you are ready. Follow these steps:
 - A. Inspect front of vehicle
 - B. Under the hood engine inspection
 - C. Inspect driver's side of vehicle including rear.
 - D. Perform in-cab vehicle inspection
3. As you inspect each item:
 - A. Point to the item.
 - B. Say the name of the item you are inspecting.
 - C. Tell the examiner what you are looking for.
 - D. Tell the examiner what you find.

You may use a Memory Aid during the inspection test provided there is no writing on it. There are two different aids, one for a tractor-trailer and one for a straight truck/bus. See pages 24 and 25 for memory aids.

Memory Aids

If you want to drive a truck or bus with air brakes, or pull a trailer with air brakes, you need to read, study and practice the 4 - Point Air Brake Check. You will be required to physically demonstrate and verbally explain each of the four points. **If you fail any part of the air brake check, this will result in an automatic failure ending your skills test.** You will be required to reschedule when you are ready to take the skills test again. You are responsible for the skills test fee and (if applicable) the truck rental fee.

4-Point Air Brake Check

4 - POINT AIR BRAKE CHECK

Note: Begin test with air pressure at or below 90 psi.




STEP 1

With the engine
running, let the
air pressure build

and

check that the air
compressor governor
cuts out between


100 - 125 PSI.

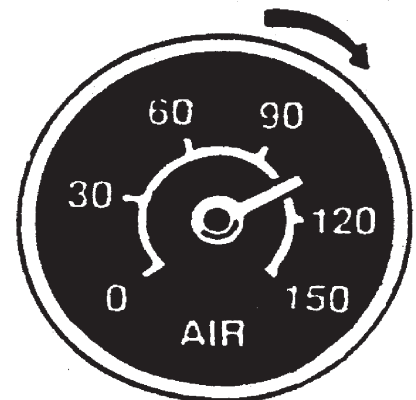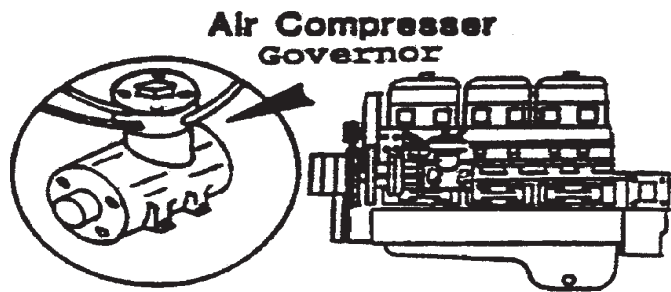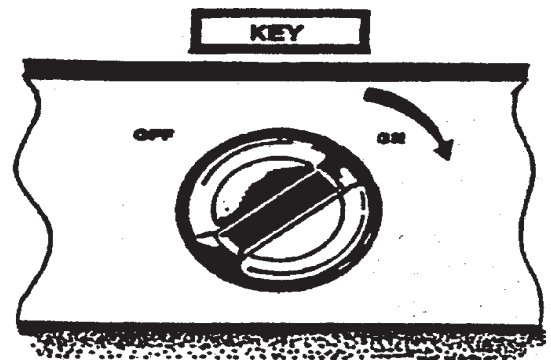

NOTE: IF THE GOVERNOR DOES NOT CUT OUT BETWEEN 100-125 PSI. THE AIR COMPRESSOR WILL KEEP PUMPING AIR AND BLOW OUT AN AIR TANK OR LINES.


STEP 2

Turn engine off,
turn key back on
so gauges work

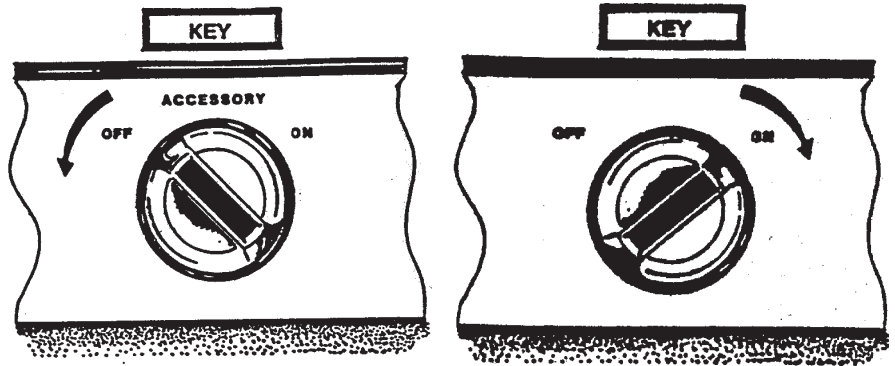


and

release brakes
(push in both valves)

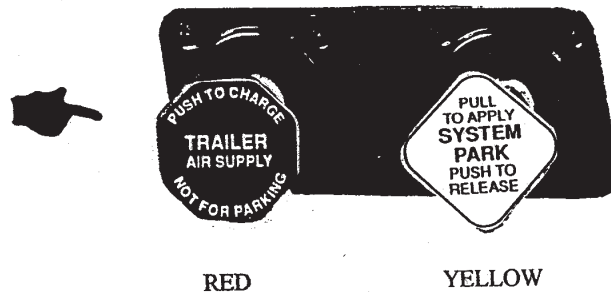


then

fully apply the foot
brake, hold to see if the
air pressure drops.

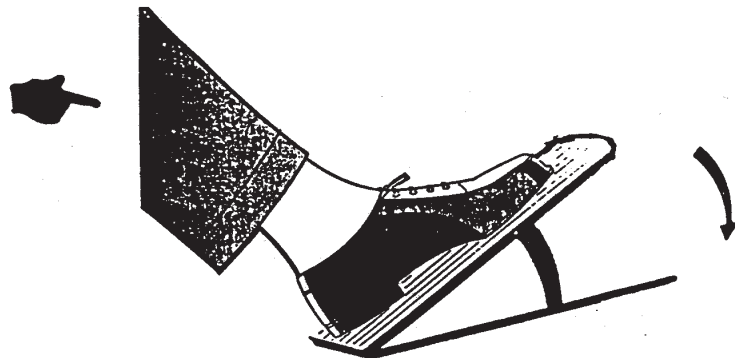

No more than 3 PSI
in one minute for a
single vehicle, or no
more than 4 PSI drop
for a **combination unit**.

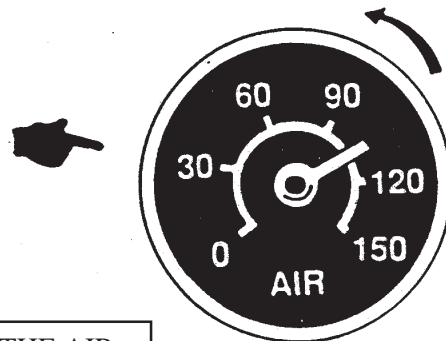

NOTE: AFTER FULLY APPLYING THE BRAKE IF THE AIR PRESSURE DROPS MORE THAN 3 PSI (SINGLE UNIT) OR 4 PSI (COMBINATION UNIT) YOU HAVE AN UNSAFE AIR LEAK IN THE SYSTEM.

STEP 3

Fan off air pressure
by pumping the foot
brake



to approximately
60 PSI

and



check that the
low air pressure
warning alarm and/
or light activates.




NOTE: YOUR LOW AIR PRESSURE WARNING LIGHT AND/OR ALARM SHOULD ACTIVATE AT APPROXIMATELY 60 PSI. THIS ALARM IS A WARNING THAT YOUR SYSTEM HAS A MAJOR LEAK AND IS LOSING AIR.

STEP 4


Continue to fan
off the air
pressure



to approximately
40 PSI

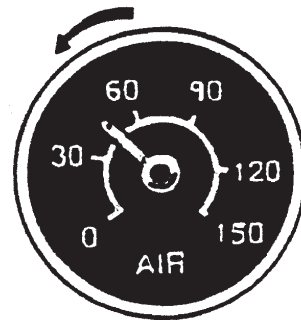

Look and Listen for
both values to pop
out.

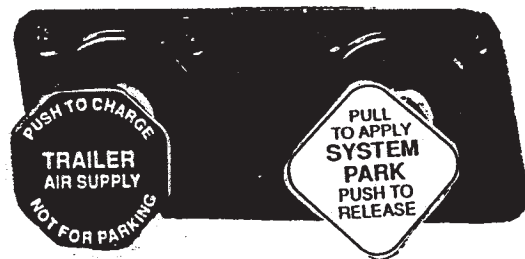

RED

YELLOW

NOTE: YOUR TRACTOR PROTECTION VALVE ON A (COMBINATION UNIT) OR PARKING BRAKE ON A (SINGLE UNIT) SHOULD POP OUT AT **APPROXIMATELY 40 PSI**, INSURING THAT YOUR VEHICLE WILL COME TO A STOP IF A LOSS OF AIR OCCURS.

IF YOU FAIL ANY PART OF THE AIR BRAKE CHECK, IT WILL BE AN AUTOMATIC FAILURE.

Vehicle Inspection Test
INSPECTION ITEMS
SCORING STANDARDS

AIR BRAKE CHECK (4 point)

Description: The procedure the driver uses to check the air brake system.

Scoring Standard: The driver performs the air brake system check in the following manner:

Note: Begin with air pressure at or below 90 psi.

STEP (1) Let air pressure build and check that the governor cuts out between 100-125 psi.

STEP (2) Turn engine off, turn key back on so gauges work and release all brake valves. Fully apply the foot brake to see if the air pressure drops more than 3 pounds in one minute for a single vehicle, or no more than 4 pounds in one minute for a combination unit.

STEP (3) Fan off the air pressure by pumping the foot brake to see if the low air pressure warning alarm activates at approximately 60 psi.

STEP (4) Continue to fan off the air pressure. At approximately 40 pounds pressure on a tractor trailer, both valves should close (pop out). On other vehicle types, the spring brake push-pull valve should pop.

AIR COMPRESSOR/BELT/GEAR

Description: Maintains air pressure in the air brake system.

Scoring Standard: With engine off, driver points to, touches, or presses belt to test that it is snug. Should note that the belt is not frayed, no visible cracks, loose fibers, or signs of wear. If belt appears worn and, if it deflects more than 1/2 to 3/4 of an inch slippage is probably excessive. Air compressor should be checked for securement and leakage. Driver should know if compressor is gear or belt driven.

AIR/ELECTRIC LINES

Description: Carry air and electricity to trailer.

Scoring Standard: Driver checks that air hoses are not cut, cracked, chafed or worn (steel braid should not show through); listens for audible air leaks. Air and electrical lines are not tangled, crimped or pinched, or being dragged against tractor parts. Electrical line insulation is not cut, cracked, chafed or worn (no electric conductor showing through). None of the air or electrical lines are spliced or taped.

AIR/ELECTRICAL CONNECTORS

Description: Connect air supplies and electrical power to trailer.

Scoring Standard: Driver checks that trailer air connectors are sealed and in good condition; checks that glad hands are locked in place, free of damage, and there are no audible air leaks. Checks that trailer electrical plug is firmly seated and locked in place.

AIR LEAK/LEVEL

Description: Air brake and air suspension systems.

Scoring Standard: No audible air leaks from brake system, or from suspension system air bags.
See that the vehicle is sitting level.

ALTERNATOR/ BELT

Description: Drives the alternator or generator.

Scoring Standard: With the engine off, driver points to, touches, or presses belt to test that the belt is snug. Should also note that the belt is not frayed, no visible cracks, loose fibers, or signs of wear. Should push belt with hand; if deflects more than 1/2 to 3/4 of an inch slippage is probably excessive. Check alternator for securement and frayed wires.

AMMETER/VOLTMETER

Description: Shows if alternator is functioning.

Scoring Standard: Driver checks that gauge shows alternator is charging; or warning light is off; needle will jump and flutter, then register "charge".

AXLE SEALS

Description: Seals for axle/wheel assembly lubrication.

Scoring Standard: No cracks or distortions in wheel/axle mounting, and signs of leaking lubricants. Check both inner and outer seals.

BATTERY / BOX

Description: Battery and Box or cage that holds battery in place.

Scoring Standard: Wherever located, sees that battery(ies) are secure, connections are tight, and cell caps are present.

Battery connections should not show signs of excessive corrosion.

Battery box and cover (or door) must be secure.

CATWALK SECURE

Description: Platform at rear of cab for driver to stand on when connecting or disconnecting trailer lines.

Scoring Standard: Catwalk is solid, steps securely bolted to tractor frame and clear of loose objects.

AIR CHAMBER (Brake)

Description: Converts air pressure to mechanical force to operate wheel brakes.

Scoring Standard: Not cracked or dented and securely mounted.

CLUTCH/GEARSHIFT

Description: Disengages engine from drive train so vehicle won't move, and reduces load on starting motor.

Scoring Standard: Depresses clutch before turning on the starter; keeps depressed until engine reaches idling speed. On an automatic transmission, the selector should be in the neutral/park position. Operates gear selector to determine that it goes into and out of gear properly.

COOLANT LEVEL

Description: Cools the engine

Scoring Standard: Driver looks at sight glass of reservoir, or removes the radiator cap and looks to see the level. Adequate level will show in sight glass, or be visible in the radiator when the cap is removed.

NOTE: If engine is hot do not remove radiator cap.

DOORS SECURE (Bus Baggage)

Description: Bus baggage compartment doors.

Scoring Standard: Baggage compartment doors closed securely.

DOORS, TIES SECURE, LIFTS

Description: Ties, and chains, cables, ropes, cinches, or other devices used to secure cargo (usually on a flat bed trailer).

Scoring Standard: Doors not bent or broken; hinges secure; latches secure and fully closed. Driver checks that there are no loose ties hanging from the side of the trailer; and/or that all cargo is securely tied down.

Vehicle Inspection Test

DRIVE SHAFT

Description: Transmits power from transmission to drive axle. Buses safety guard over drive shaft.

Scoring Standard: Shaft not bent or cracked; shaft couplings appear to be secure; Safety guards in place.

DRUM/ROTOR/BRAKE LINING

Description: Brake shoes rub on inside of drum to slow vehicle down.

Scoring Standard: No cracks or dents or holes; no loose or missing bolts. Brake linings (where visible) not worn dangerously thin. No less than 1/4" thickness. (1/8" for Disc Brakes).

EXHAUST SYSTEM

Description: External piping for conducting combustion gases from engine.

Scoring Standard: Outside visible parts are securely mounted; no cracks, holes, or severe dents.

FRAME (Truck/Trailer)

Description: Structural members for supporting vehicle body or trailer platform over wheels.

Scoring Standard: No cracks or bends in longitudinal frame members, no loose, cracked, bent, broken or missing cross members. On truck box or trailer frame; no signs of breaks or holes in box or trailer floor.

FUEL TANK /LEAKS

Description: Holds fuel.

Scoring Standard: Driver checks that tank is secure; caps are secure; no leaks from cap or under tank or damaged tank. Buses have tank guards.

HEADER BOARD

Description: Prevents cargo from shifting forward and injuring driver when the vehicle abruptly stops.

Scoring Standard: If required, is securely mounted, free of damage and adequate to contain or hold cargo in the event of panic stop. Canvas or tarp carrier if so equipped is securely mounted and lashed down.

HEATER/DEFROSTER

Description: Heats cab or passenger compartment, and prevents frost or condensation from forming on windshield.

Scoring Standard: Driver checks that heater/defroster is working.

HORN(s)

Description: Air and/or electrical horns for warning other drivers or pedestrians.

Scoring Standard: Driver checks that electric and/or air horns work.

BRAKE HOSES/LINES

Description: Brake lines carry air or hydraulic fluid to the brake hose; brake hose supplies the brake assembly.

Scoring Standard: Driver checks for cracked, worn or frayed hoses; and for secure couplings. Check that hoses/lines supply air or hydraulic fluid to brakes.

HUB OIL SEAL

Description: Seals in lubrication for wheel hub.

Scoring Standard: Driver checks to see wheel hub oil seal not leaking; and, if sight glass present, that oil level is adequate.

HYDRAULIC BRAKE CHECK

Description: Procedure to be followed to check hydraulic brakes.

Scoring Standard: Pumps the brake pedal three times, then holds it down for five seconds. The brake pedal should not move (depress) during the five seconds. The pedal should not move. If it does, there may be a leak or other problem.

KING PIN/APRON/GAP

Description: Attaches trailer to tractor (king pin) and provides surface for resting trailer on fifth wheel.

Scoring Standard: Driver checks that king pin does not appear bent; that apron lies flat on fifth wheel skid plate; and that visible part of apron is not bent, cracked or broken. Check that the trailer is laying flat on the fifth wheel skid plate (no gap).

Vehicle Inspection Test

LANDING GEAR

Description: Supports front of trailer when trailer is not coupled to a tractor.

Scoring Standard: Driver checks that landing gear is fully raised, no missing parts, support frame not bent or damaged; crank handle is present and secured; if power operated no air or hydraulic leaks.

LEAKS (Engine Compartment) / HOSES

Description: Fluid leaks from engine.

Scoring Standard: Driver checks for signs of fluid puddles or dripping fluids on the ground under the engine, or the underside of the engine. Inspects engine hoses for condition and leaks.

LIGHTING INDICATORS

Description: Dashboard indicator lights for signals, flashers, and headlight high beam.

Scoring Standard: Driver checks that dash indicators illuminate when corresponding lights are turned on.

LIGHTS (Front)

Description: Headlights, turn signals, clearance lights, and identification lights.

Scoring Standard: All lights illuminate and are clean. Headlights function on both high and low beams. No lenses cracked, broken, missing, and proper color.

LIGHTS, REFLECTORS (Sides & Rear)

Description: Lights and reflectors for showing vehicle clearances at night.

Scoring Standard: Driver checks that reflectors are clean; none are missing or broken; and they are of proper color (red on rear, amber elsewhere). Checks that rear running lights are clean, not broken, and are of proper color. Rear running lights must be checked separately from signal, flasher, license plate light and brake lights. (Bus check inside dome light).

LOCKING PINS (Fifth Wheel)

Description: Hold the sliding fifth wheel in fixed position along slider rails.

Scoring Standard: Driver looks for loose or missing pins in the slide mechanism of sliding fifth wheels; if air powered - no air leaks. Checks that fifth wheel is not so far forward that tractor frame will strike landing gear during turns.

LUG NUTS

Description: Hold wheel on axle.

Scoring Standard: Driver checks that all lug nuts are present; checks that lug nuts are not loose (look for rust trails around nuts); no cracks radiating from lug bolt holes; nor distortion of the bolt holes.

MIRRORS

Description: Side mirrors for rear view of traffic.

Scoring Standard: Driver checks for proper adjustment; not cracked or loose; visibility not impaired due to dirty mirrors.

MOUNTING BOLTS

Description: Hold fifth wheel mount on tractor frame.

Scoring Standard: Driver looks for loose or missing mounting brackets, clamps, bolts, or nuts; both fifth wheel and slide mounting appear solidly attached in place.

OIL LEVEL

Description: Dipstick used to measure amount of oil for engine lubrication.

Scoring Standard: With the engine stopped, driver uses dip stick to see where the oil level is relative to the full or refill mark.

OIL PRESSURE BUILDS

Description: Ensure that engine oil pressure is adequate.

Scoring Standard: Driver checks that oil pressure is building to normal; the gauge shows increasing or normal oil pressure; or warning light goes off. Engine oil temperature gauge (if present) should be a gradual rise to normal operating range.

PARKING BRAKE (Hydraulic or Air)

Description: Keeps vehicle from rolling when parked.

Scoring Standard: Driver checks that parking brake will hold vehicle by gently trying to pull forward with parking brake on.

Vehicle Inspection Test

PASSENGER EMERGENCY EXITS

Description: Bus doors, roof hatches, or push-out windows used for emergency exits.

Scoring Standards: Driver checks that all emergency exit doors, are firmly closed. Also warning buzzer and lights are operating. Check all warning devices.

PASSENGER ENTRY/LIFT

Description: Bus door(s) used for normal entry or exit.

Scoring Standard: Door correctly opens and closes; entry steps clear; treads not loose or worn out enough to trip passenger. Hand rails solidly mounted, step light operational.

- If equipped with a handicap lift, look for leaking, damaged, or missing parts and explains how lift should be checked for correct operation. Lift must be fully retracted and latched securely. Operation lights checked.

PASSENGER SEATING

Description: Passenger seats.

Scoring Standard: No broken seat frames; seats firmly attached to floor.

PINTLE HOOKS ASSEMBLY (Truck/Trailer)

Description: Coupling System between truck and trailer.

Scoring Standard: With trailer hooked to truck, driver will check all connections, safety devices and electrical or air connections.

PLATFORM (Fifth Wheel)

Description: Mounting holding the fifth wheel skid plate and locking jaws mechanism.

Scoring Standard: No cracks or breaks in the platform structure.

POWER STEERING FLUID

Description: Hydraulic fluid for assisting steering wheel action to front wheels.

Scoring Standard: With the engine stopped, driver pulls out the dip stick and sees where the fluid level is relative to the refill mark. Level must be above refill mark.

RELEASE ARM

Description: Releases fifth wheel locking jaws so that trailer can be uncoupled.

Scoring Standard: Driver checks that release arm is in the engaged position, and any safety latch is in place.

RIMS

Description: Retain tires on wheels.

Scoring Standard: Driver checks for damaged or bent rims; rims should not have cracks or welding repairs; no rust trails that indicate that rim is loose on wheel.

SAFETY BELT / EMERGENCY EQUIPMENT, F. E. T. (Fuses, Extinguisher and Triangles)

Description: Equipment for use during a breakdown, or at an accident scene.

Scoring Standard: Driver checks for spare electrical fuses (if used); 3 red reflective triangles; properly charged and rated fire extinguisher. Check for proper secured, mounted, and adjusted safety belt. (Buses check for First Aid Kit)

SAFETY LATCH / LOCKING JAWS

Description: Locks locking jaws closed.

Scoring Standard: Checks that fifth wheel locking jaws are securely locked and that the safety latch is engaged.

SHOCK ABSORBER

Description: Tubular suspension part which provides a smooth ride.

Scoring Standard: No cracks or leaks, or missing and broken mounting bolts.

SIGNAL AND BRAKE LIGHTS

Description: Brake lights, rear signal lights, and four-way flashers.

Scoring Standard: Driver checks that both brake lights come on when brakes applied; checks that each signal light flashes; and checks that four-way flashers work.

Vehicle Inspection Test

SLACK ADJUSTOR

Description: Linkage from brake chamber to brake shoe to activate brakes.

Scoring Standard: Driver checks for broken, loose, or missing parts; between push rod and adjuster arm should be a little over 90 degrees when brakes are applied. When pulled by hand, brake rod should not move more than approximately 1 inch.

SPACERS/SPACE

Description: Axle collar between dual wheels to keep wheels evenly separated.

Scoring Standard: Driver checks that dual wheels are evenly separated, and that tires are not touching one another. Look for any debris between tires.

SPLASH GUARDS/MUD FLAPS

Description: Devices used to prevent road materials from being thrown by vehicle tires.

Scoring Standard: If equipped, checks that splash guards or mud flaps are not damaged and mounted securely.

SPRING/AIR

Description: Leaf or coil springs to dampen wheel vibration forces created by rolling over road surface. Steel bar, or air bag that acts as a spring in place of leaf or coil springs.

Scoring Standard: Driver looks for broken leaves, leaves that have shifted and are in, or nearly in, contact with the tires, rim, brake drum, frame or body; missing or broken leaves in the leaf spring. For coil spring, driver looks for broken or destroyed spring. If vehicle is equipped with torsion bars, torque arms, or other types of suspension components, checks that they are not damaged and are mounted securely. Air bags not cut or leaking.

SPRING MOUNT

Description: All brackets, bolts, and bushings used for attaching spring to axle and vehicle frame.

Scoring Standard: Driver checks for cracked or broken spring hangers; broken, missing, or loose bolts; missing or damaged bushings; broken, loose, or missing axle mounting part.

STEERING BOX SECURE/HOSES

Description: Container for mechanism that transforms steering column action into wheel turning action.

Scoring Standard: Driver looks for missing nuts, bolts, cotter keys, etc., power steering fluid leaks; damage to power steering hose.

STEERING LINKAGE

Description: Transmits steering action from steering box to wheel.

Scoring Standard: Connecting links, arms, rods not worn or cracked; joints and sockets not worn or loose; no loose or missing nuts, bolts or cotter pins.

STEERING PLAY

Description: Procedure to check for excessive looseness in the steering linkages.

Scoring Standard: Non-power steering: driver works steering wheel back, and forth should have less than 5-10 degrees free play (approximately 2 inches at the rim of a 20 inch steering wheel). Power steering: with engine running driver works steering wheel from left to right and notes degree of free play that occurs before front left wheel barely moves, should be less than 5-10 degrees.

STOP ARM

Description: Stop arm and lights on school buses that operate when student pick-up lights are activated.

Scoring Standard: If equipped, check the stop arm to see that it is mounted securely to the frame of the vehicle.

Checks for loose fittings and damage.

Checks that stop arm extends fully when operated.

Checks that stop arm lights are operational.

STUDENT LIGHTS

Description: Strobe light, alternately flashing amber light and alternately flashing red lights on school buses.

Scoring Standard: Checks the strobe light or alternately flashing amber lights (if equipped) are operational and are not broken. Checks that alternately flashing red lights are operational and are not broken.

TANDEM RELEASE (Arm and Locking Pins)

Description: Siding mechanism and locking pins for sliding tandem axles on trailers.

Scoring Standard: If equipped, make sure the locking pins are locked in place and release arm is secured.

Vehicle Inspection Test

TEMPERATURE GAUGE

Description: Measures water temperature in engine cooling system.

Scoring Standard: Makes sure temperature gauge is working.

Temperature should begin to climb to the normal operating range or temperature light should be off.

TIRES I.C.D. (INFLATION, CONDITION AND DEPTH)

Description: Road wheel tires.

Scoring Standard: Driver checks tread depth (see note); tire inflation; tire condition; tread evenly worn; looks for cuts or other damage to the tread walls; valve caps and stem are not missing, broken or damaged; retread not separating from tire (no retreads on front wheels).

NOTE: Minimum tread depth is 4/32 inch on front tires, and 2/32 inch on other tires.

WATER PUMP

Description: Provide circulation of coolant within the engine.

Scoring Standard: With engine off, driver points to water pump. Checks for securement or leakage. Determining if water pump is gear or belt driven.

WINDSHIELD

Description: Windshield


Scoring Standard: Driver checks for cracks, dirt, and illegal stickers or other obstructions to view.

WIPERS/WASHERS

Description: Windshield Wipers.

Scoring Standard: Driver checks for worn rubber on blades; blades secure on wiper arm; and that wipers work. If equipped, check for windshield washer fluid and that windshield washers operate correctly.

Memory Aid

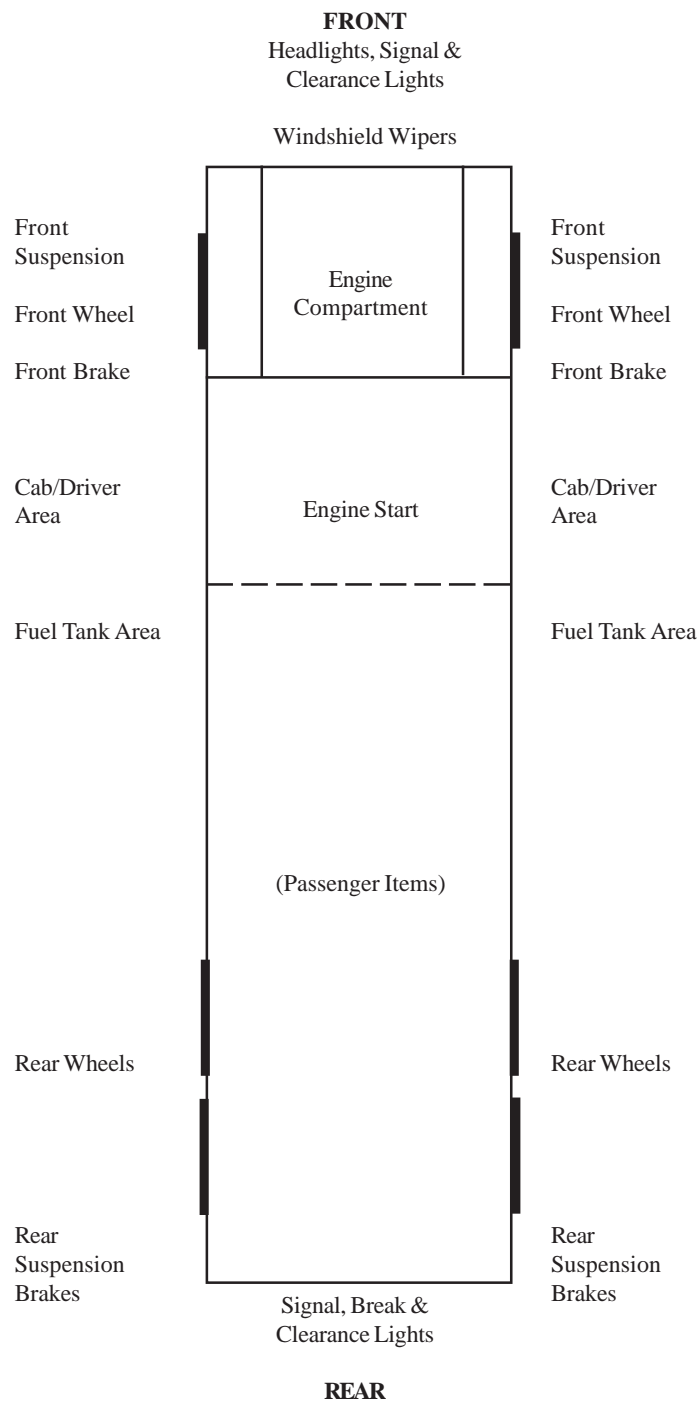


Straight Truck/School Bus

Memory Aid

Front of Vehicle

Headlights, Signals &
Clearance Lights

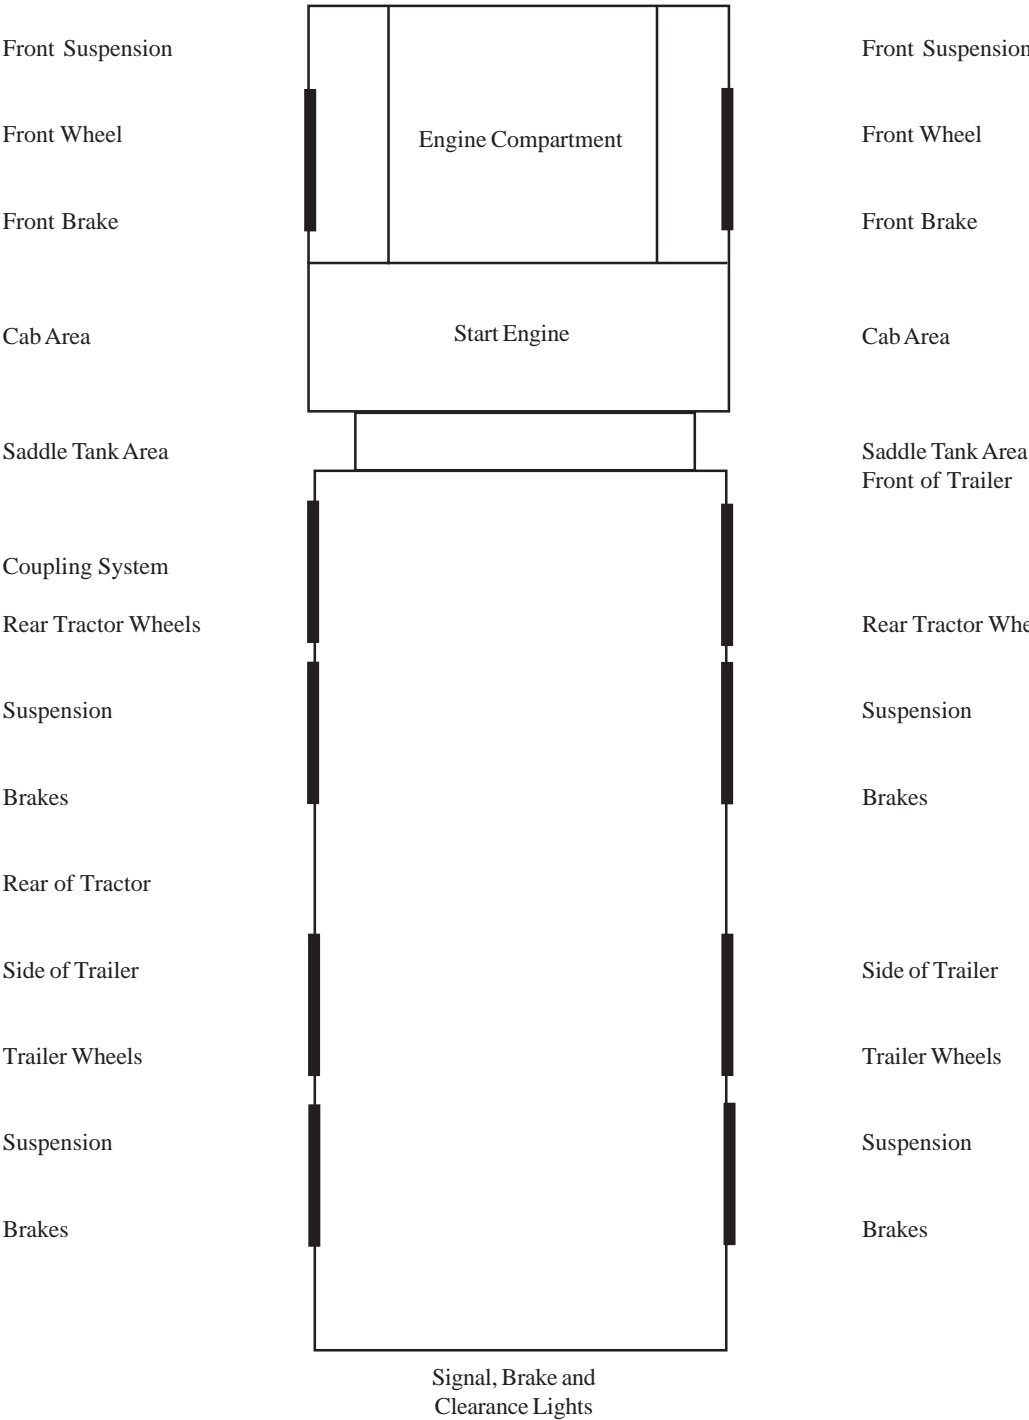


REAR OF TRAILER

Tractor - Trailer

Safety Note: If you are parked on a street, walk around so you are facing the oncoming traffic. Pay attention so you don't get run over.

**SUGGESTED INSPECTION ROUTINE:
BUS**

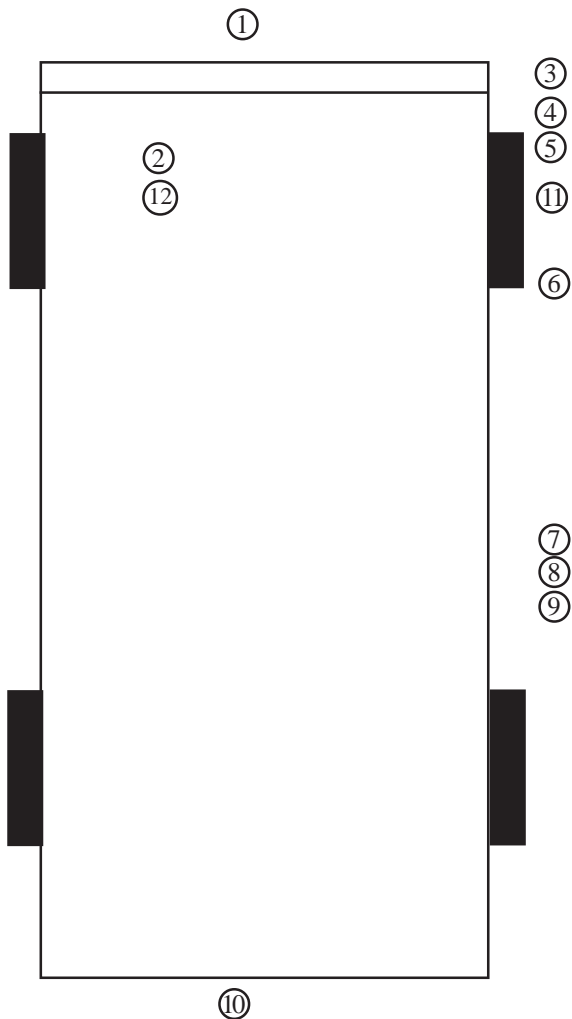

**INSPECTION
ROUTINES**

School Bus/Transit

1. Front of Bus
2. Engine Compartment Checks
3. Front Suspension
4. Front Brake Assembly
5. Front Wheel Assembly
6. Under Vehicle
7. Rear Suspension
8. Rear Brake Assembly
9. Rear Wheel Assembly
10. Rear of Bus
11. Driver/Fuel Area
12. Engine Start: (In-Cab Check)

**INSPECTION ITEMS
BUS**

1. FRONT OF BUS

- A. Lights
- B. Steering box / Hoses
- C. Steering linkage

2. ENGINE COMPARTMENT

- A. Oil level
- B. Coolant level
- C. Power steering fluid
- D. Water pump / Belt / Gear
- E. Alternator / Belt
- F. Air compressor / Belt / Gear
- G. Leaks/Hoses

3. FRONT SUSPENSION

- A. Springs
- B. Spring mounts
- C. Shock absorber

4. FRONT BRAKE ASSEMBLY

- A. Hoses / Lines
- B. Chamber
- C. Slack adjustor
- D. Drum / Linings / Rotor

5. FRONT WHEEL ASSEMBLY

- A. Tire (I.C.D.)
- B. Rim
- C. Lug nuts
- D. Hub oil seal

6. UNDER VEHICLE

- A. Drive shaft
- B. Exhaust system
- C. Frame

7. REAR SUSPENSION

- A. Spring air
- B. Spring mounts
- C. Torsion, Shocks

8. REAR BRAKE ASSEMBLY

- A. Hoses / Lines
- B. Brake Chamber
- C. Slack adjustor
- D. Drum / Linings / Rotor

9. REAR WHEEL ASSEMBLY

- A. Tires (I.C.D.)
- B. Rims
- C. Lug nuts
- D. Axle seals
- E. Spacers / Budd

10. REAR OF BUS

- A. Lights, reflectors
- B. Signal / Brake lights
- C. Splash Guards / Mud flaps

11. DRIVER / FUEL AREA

- A. Door, mirror
- B. Fuel tank secure
- C. Any fuel leaks
- D. Battery / Box

12. ENGINE START (In-Cab Checks)


- A. Passenger entry / Lift
- B. Emergency exits
- C. Seating
- D. Safety Belt, Equipment, F.E.T.
- E. Clutch / Gearshift
- F. Oil pressure builds
- G. Ammeter / Voltmeter
- H. Air brake check (4 point)
- I. Steering play
- J. Parking brake / Hydraulic
- K. Mirrors, windshield
- L. Wipers / Washers
- M. Lighting indicators
- N. Horns
- O. Heater / Defroster
- P. Student lights, stop arm
- Q. Coolant Temperature

NOTE: Inspection items may vary according to your equipment. This is only an example.

**INSPECTION
ROUTINES**

**SUGGESTED INSPECTION ROUTINE:
STRAIGHT TRUCK**

Straight Truck

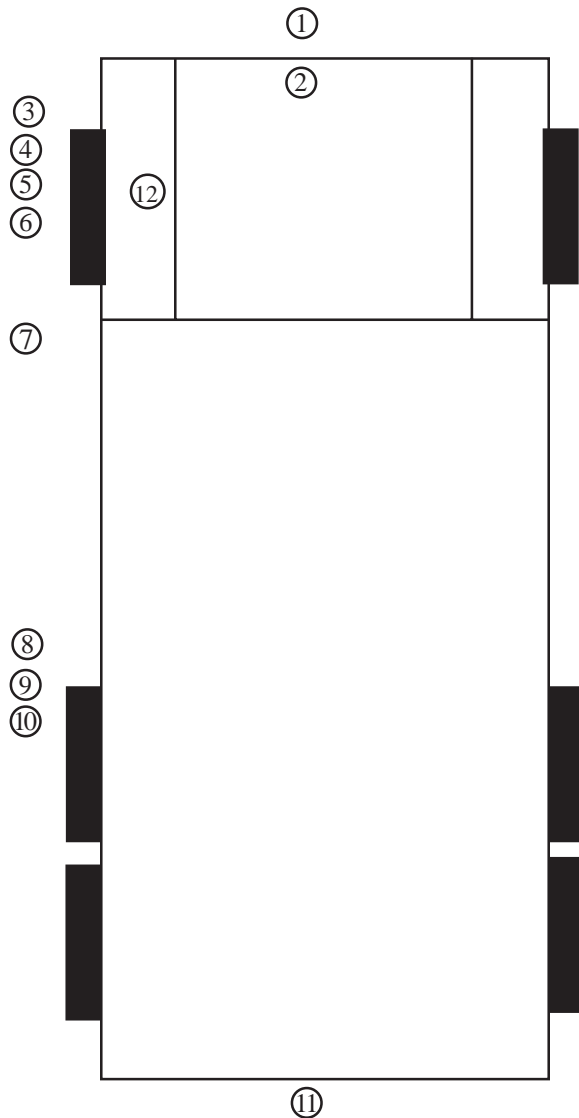

1. Front of Truck
2. Engine Compartment Checks
3. Front of Suspension
4. Front Brake Assembly
5. Front Wheel Assembly
6. Driver / Fuel Area
7. Under Vehicle
8. Rear Suspension (Each Axle Separately)
9. Rear Brake Assembly (Each Axle Separately)
10. Rear Wheel Assembly (Each Axle Separately)
11. Rear of Truck
12. Engine Start: (In-Cab Checks)

Vehicle Inspection Test

1. FRONT OF TRUCK

- A. Lights
- B. Steering box / Hoses
- C. Steering linkage

INSPECTION ITEMS

2. ENGINE COMPARTMENT

- A. Oil level
- B. Coolant level
- C. Power steering fluid
- D. Water pump / Belt / Gear
- E. Alternator / Belt
- F. Air compressor / Belt / Gear
- G. Leaks / Hoses

STRAIGHT TRUCK

3. FRONT SUSPENSION

- A. Springs
- B. Spring mounts
- C. Shock absorber

4. FRONT BRAKE ASSEMBLY

- A. Hoses / Lines
- B. Chamber
- C. Slack adjustor
- D. Drum / Linings / Rotor

5. FRONT WHEEL ASSEMBLY

- A. Tire (I.C.D.)
- B. Rim
- C. Lug nuts
- D. Hub oil seal

6. DRIVER / FUEL TANK AREA

- A. Door, mirror
- B. Fuel tank secure
- C. Any fuel leaks
- D. Battery / Box

7. UNDER VEHICLE

- A. Drive shaft
- B. Exhaust system
- C. Frame

8. REAR SUSPENSION (Each axle separately)

- A. Spring / Air / Torque
- B. Spring mounts
- C. Torsion, Shocks

9. REAR BRAKE ASSEMBLY (Each axle separately)

- A. Hoses / Lines
- B. Brake Chamber
- C. Slack adjustor
- D. Drum / Linings / Rotor

10. REAR WHEEL ASSEMBLY (Each axle separately)

- A. Tires (I.C.D.)
- B. Rims
- C. Lug nuts
- D. Axle seals
- E. Spacers/Budd

11. REAR OF TRUCK

- A. Lights, reflectors
- B. Signal / Brake lights
- C. Splash Guards / Mud flaps
- D. Doors, Ties, Lifts

12. ENGINE START (In-Cab Checks)


- A. Clutch / Gearshift
- B. Oil pressure builds
- C. Ammeter / Voltmeter
- D. Air brake check (4 point)
- E. Steering play
- F. Parking brake / Hydraulic
- G. Mirrors, windshield
- H. Wipers / Washers
- I. Lighting indicators
- J. Horns
- K. Heater / Defroster
- L. Safety Belt, Equipment, F.E.T.
- M. Coolant Temperature

NOTE: Inspection items may vary according to your equipment. This is only an example.

**INSPECTION
ROUTINES**

**SUGGESTED INSPECTION ROUTINE:
TRACTOR / TRAILER**

Tractor / Trailer

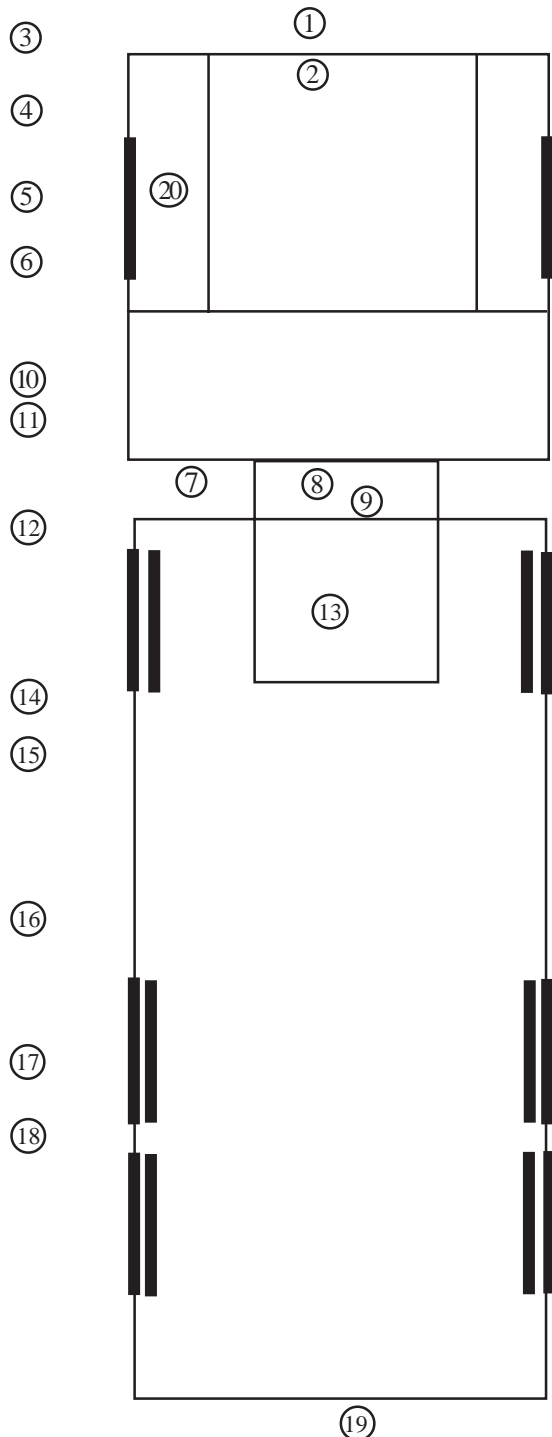

1. Front of Truck
2. Engine Compartment Checks
3. Front Suspension
4. Front Brake Assembly
5. Front Wheel Assembly
6. Driver / Fuel Area
7. Rear of Cab
8. Front of Trailer
9. Under Vehicle
10. Rear Suspension (Tractor)
11. Rear Brake Assembly (Tractor)
12. Rear Wheel Assembly (Tractor)
13. Coupling System
14. Rear of Tractor
15. Side of Trailer
16. Rear Suspension (Each Axle Separately)
17. Rear Brake Assembly (Each Axle Separately)
18. Rear Wheel Assembly (Each Axle Separately)
19. Rear of Trailer
20. Engine Start (In-Cab Checks)

INSPECTION ITEMS

TRACTOR / TRAILER

1. FRONT OF TRUCK

- A. Lights
- B. Steering box / Hoses
- C. Steering linkage

2. ENGINE COMPARTMENT

- A. Oil level
- B. Coolant level
- C. Power steering fluid
- D. Water pump / Belt / Gear
- E. Alternator / Belt
- F. Air compressor / Belt / Gear
- G. Leaks / Hoses

3. FRONT SUSPENSION

- A. Springs - Air
- B. Spring mounts
- C. Shock absorber

4. FRONT BRAKE ASSEMBLY

- A. Hoses / Lines
- B. Chamber
- C. Slack adjustor
- D. Drum / Linings / Rotor

5. FRONT WHEEL ASSEMBLY

- A. Tire (I.C.D.)
- B. Rim
- C. Lug nuts
- D. Hub oil seal

6. DRIVER/FUEL AREA

- A. Door, mirror
- B. Fuel tank secure / Leaks
- C. Battery / Box

7. REAR OF CAB

- A. Air / Electric Lines
- B. Catwalk
- C. Lights / Reflectors

8. FRONT OF TRAILER

- A. Air / Electric connect
- B. Header board
- C. Lights / Reflectors

9. UNDER VEHICLE

- A. Drive shaft
- B. Exhaust system
- C. Frame

10. REAR SUSPENSION

(Each axle separately)

- A. Spring / Air / Torsion
- B. Spring mounts
- C. Shocks

11. REAR BRAKE ASSEMBLY

(Each axle separately)

- A. Hoses / Lines
- B. Chamber
- C. Slack adjustor
- D. Drum / Linings

12. REAR WHEEL ASSEMBLY

(Each axle separately)

- A. Tires
- B. Rims
- C. Lug nuts
- D. Axle seals
- E. Spacers / Budd

13. COUPLING SYSTEM

- A. Mounting bolts
- B. Safety latch / Locking jaws
- C. Platform
- D. Release arm
- E. Kingpin / Apron / Gap
- F. Locking pins

14. REAR OF TRUCK

- A. Lights, reflectors
- B. Splash guard / Mud flaps

15. SIDE OF TRAILER

- A. Landing gear
- B. Lights, reflectors
- C. Doors, Ties, Lifts
- D. Frame, Tandem release

16. REAR SUSPENSION

(Each axle separately)

- A. Springs - Air / Torque
- B. Spring mounts

17. REAR BRAKE ASSEMBLY

(Each axle separately)

- A. Hoses / Lines
- B. Brake Chamber
- C. Slack adjustor
- D. Drum / Linings

18. REAR WHEEL ASSEMBLY

(Each axle separately)

- A. Tires (I.C.D.)
- B. Rims
- C. Lug nuts
- D. Axle seals
- E. Spacers / Budd

19. REAR OF TRAILER

- A. Lights, reflectors
- B. Doors, Ties, Lifts
- C. Splash guards / Mud flaps

20. ENGINE START (In-Cab Checks)


- A. Clutch / Gearshift
- B. Oil pressure builds
- C. Ammeter / Voltmeter
- D. Air brake check (4 point)
- E. Steering play
- F. Parking brake / Hydraulic
- G. Mirrors, windshield
- H. Wipers / Washers
- I. Lighting indicators (L.R4H)
- J. Horns (city / air)
- K. Heater / Defroster
- L. Safety belt / Emergency (F.E.T.)
- M. Coolant Temperature

NOTE: Inspection items may vary according to your equipment. This is only an example.


TRUCK/TRAILER CONNECTION

PINTLE HOOK ASSEMBLY

(SIDE VIEW)

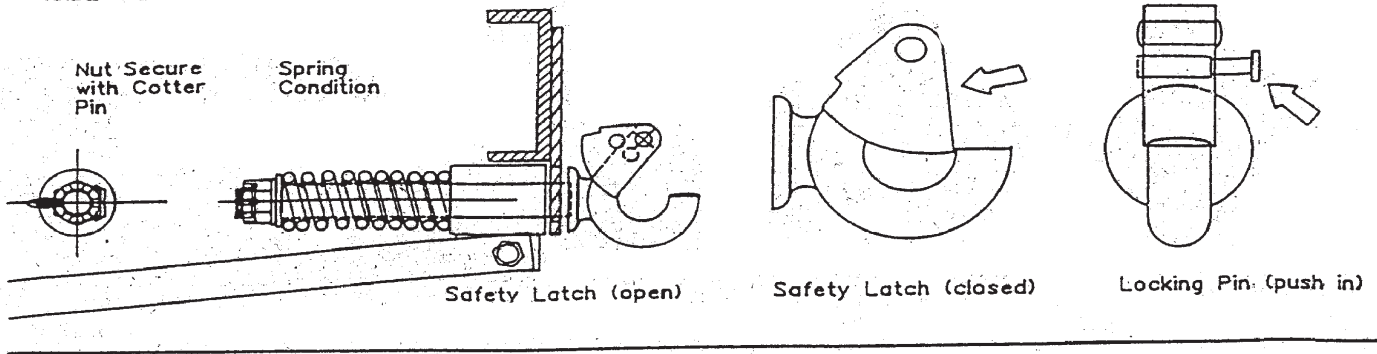


TRUCK (REAR VIEW)

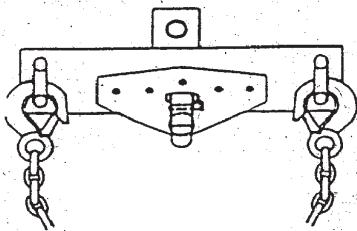


- Hook Condition
- Safety Latch (closed)
- Chain Condition
- Chain Length

SAFETY CHAINS

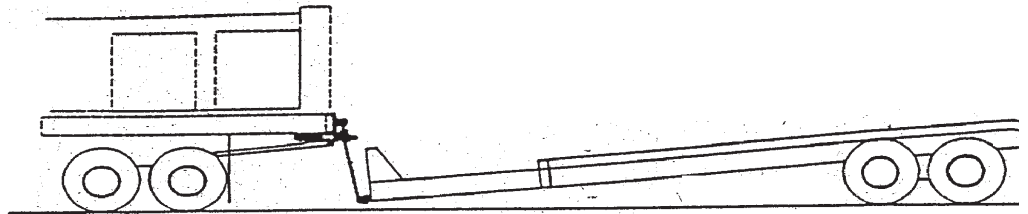


Safety chains must be capable of holding the trailer tongue off the ground in the event of truck/trailer separation.

COMPLETED COUPLING

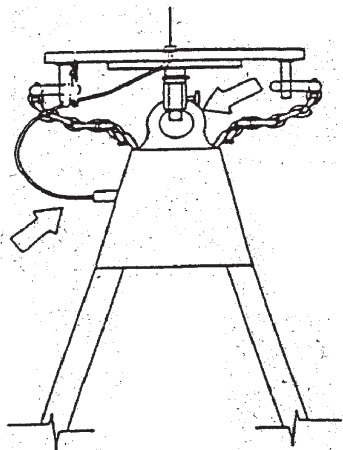

Pintle Eye Condition
Electric Brake Cable

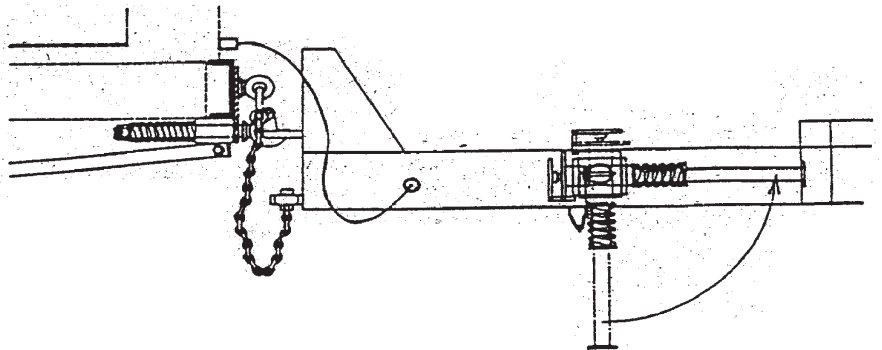

FINAL CHECK

- Pintle Eye in hook
- Safety Latch Closed
- Locking Pin (pushed in)
- Chains Connected
- Electric Brake Cable Connected
- Jack Stand in Travel Position and Locking Pin in Place
- Load and Tie-Downs Secured

Pintle Hook Scoring Standards

- | | |
|----------------------|--------------------------|
| safety chains | <input type="checkbox"/> |
| safety pins | <input type="checkbox"/> |
| disconnect wire | <input type="checkbox"/> |
| battery/switch | <input type="checkbox"/> |
| trailer tongue/bolts | <input type="checkbox"/> |
| hooks/bolts | <input type="checkbox"/> |

Final Check

- | | |
|---------------------------|----------------------------------|
| • Pintle Eye in hook | • Electric Brake Cable Connected |
| • Safety Latch Closed | • Jack Stand in Travel Position |
| • Locking Pin (pushed in) | and Locking Pin in Place |
| • Chains Connected | • Load and Tie-Downs Secured |

Section 2

Control Skills Test

PURPOSE OF THE BASIC CONTROL SKILLS TEST

The purpose of the basic control skills test is to evaluate your backing skills. It is a test of your ability to handle your vehicle safely. The test consists of various exercises to be completed in an area marked out by traffic cones and boundary lines. The exercises will include the following kinds of maneuvers:

- Forward Stop / Straight Line Backing
- Alley Dock
- Backward Serpentine
- Parallel Park (Conventional)

The examiner will explain the rules for each maneuver. You will be scored on your ability to perform each exercise.

GENERAL INSTRUCTIONS

DRIVER INSTRUCTIONS:

This test consists of a series of basic control exercises. **Do Not** go over any exercise lines or hit any of the cones. Remember it is better to do a pullup than to go over a boundary. The foot of each cone or marker marks the exercise boundary, so if any part of the vehicle goes over the boundary line you will be asked to pull forward before completing the exercise. The examiner will give you directions for each exercise as we come to it. When you complete each exercise, set your parking brake and sound your horn to let the examiner know you are done.

Normally when you operate alone, before backing you would be required to put on your parking brake, leave the vehicle, and walk to the rear to check that it's safe. For the test, I won't require you to do this. Stay in your vehicle until exercise is completed. If you see the examiner raise his/her arm like this (raise arm straight up, palm out), stop the vehicle.


This exercise has two parts. First, pull forward through the alley and stop as close as possible to the stop line at the end. Second, back out of the alley, without touching the boundaries of the alley.

Note: If you cross a boundary line or touch a boundary marker, you must stop and reposition your vehicle within the boundary lines before continuing.

**FORWARD STOP /
STRAIGHT LINE
BACKING**

DRIVER INSTRUCTIONS: (Forward Stop)

This is what the examiner will tell you to do: “Drive through the alley and try to stop with your front bumper as close as possible to the line at the end of the alley without going past the line. You may stop only once. (Don’t pull ahead once you’ve stopped.) Don’t lean out of the window or open the door to see better. When I get to the end of the alley, I’ll wave you forward.”

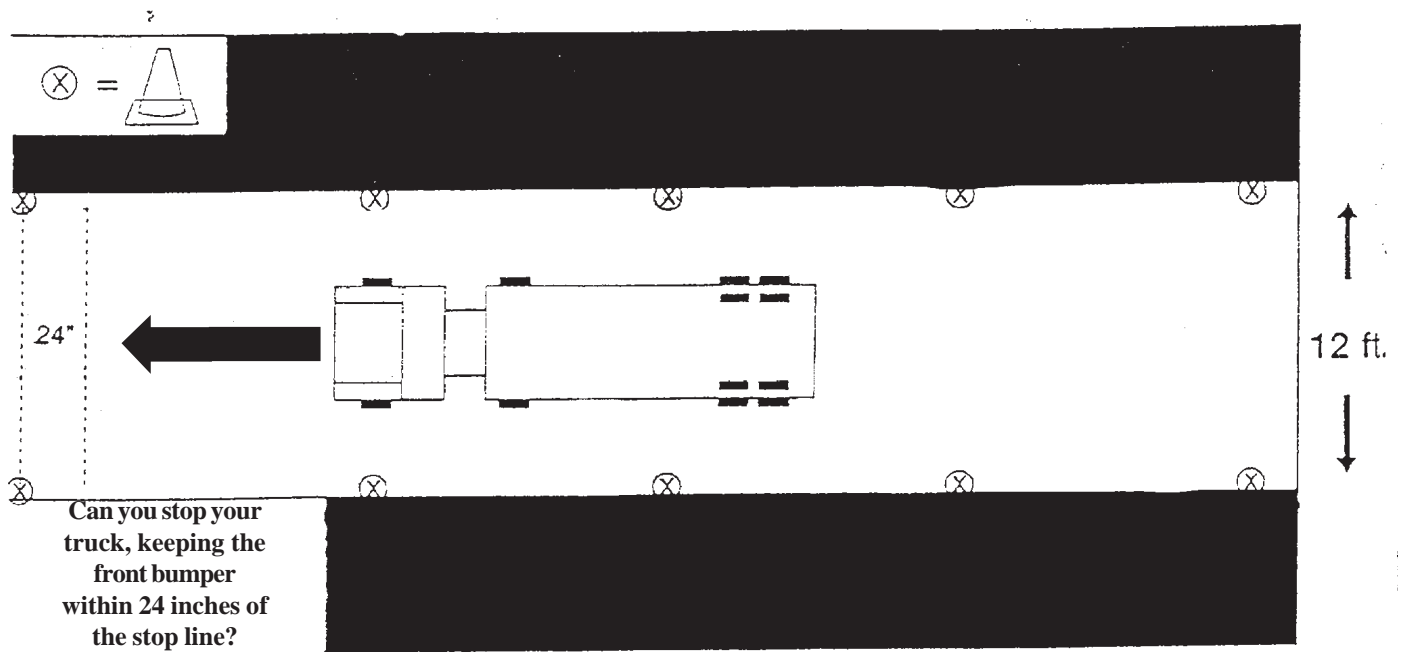

STRAIGHT LINE BACKING MANEUVER

FORWARD STOP MANEUVER


After you have stopped, the examiner will measure the distance between the bumper and the stop line, and record your score.

If your front bumper is not within 24 inches from the stop line, it will be scored as an error. If you cross the stop line, it will also be scored as an error.

**FORWARD STOP /
STRAIGHT LINE
BACKING**

DRIVER INSTRUCTIONS: (Straight Line Backing)

This is what the examiner will tell you to do: "Drive straight forward until the rear of your vehicle is about even with the stop line. I'll signal when you should stop. Then I'll wave you back. When I do, back down the alley. Do not touch either side of the alley with any part of your vehicle. Stop with your front bumper about even with the end of the alley."

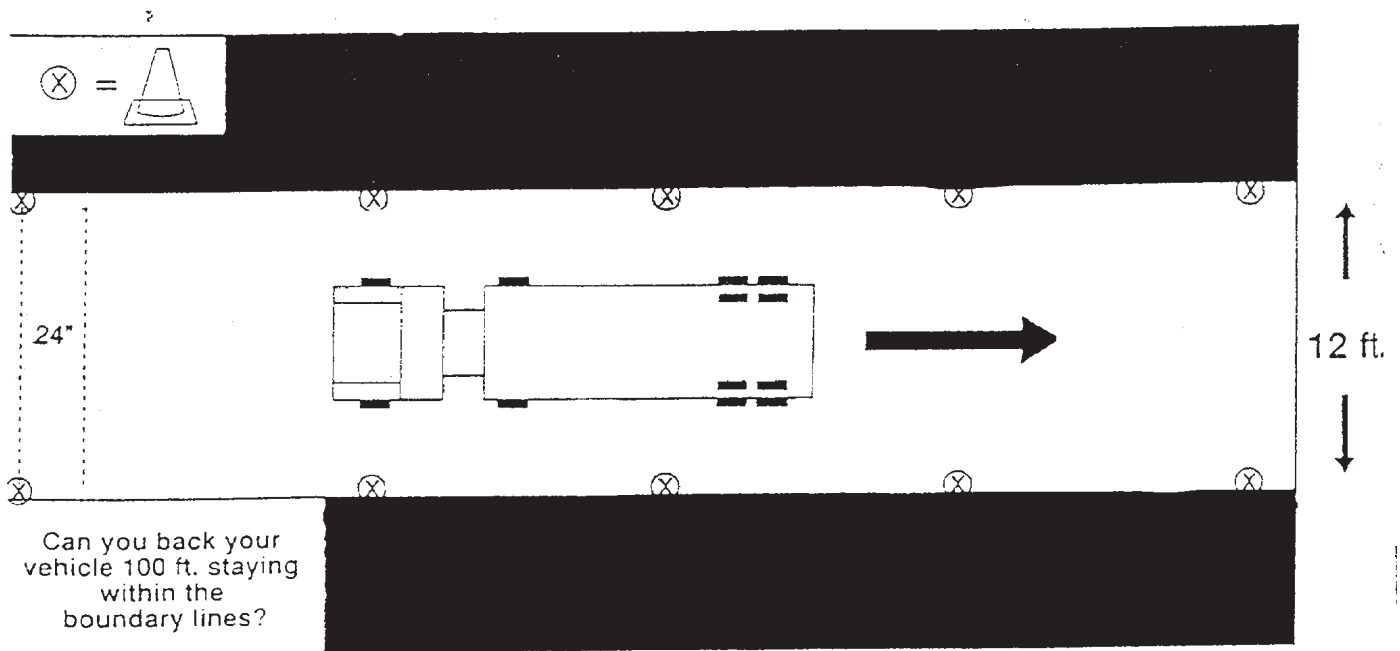

STRAIGHT LINE BACKING MANEUVER


The examiner will check to see if you touch or cross the boundary lines. If you do touch or cross any lines it will be scored as an error. If you stop and do any pullups it will also be scored as an error.

Basic Control Skills Test

The serpentine is a row of three cones. Set-up by pulling along the right side of the three cones and pull forward so that your vehicle is past the 3rd cone. Once you are set-up you are to back around the three cones in a serpentine manner without striking any cones or crossing any boundary lines.

DRIVER INSTRUCTIONS:

This is what the examiner will tell you to do: "I will adjust the distance between the cones for your vehicle. When I wave you forward, drive along the right side of this row of three cones. Stop when you get past the third cone. Then back up in a serpentine as shown in this diagram until you back past the first cone. Do not touch any cones or let any part of your vehicle pass over the cones as you back through. Also you must keep your vehicle within the boundary lines".

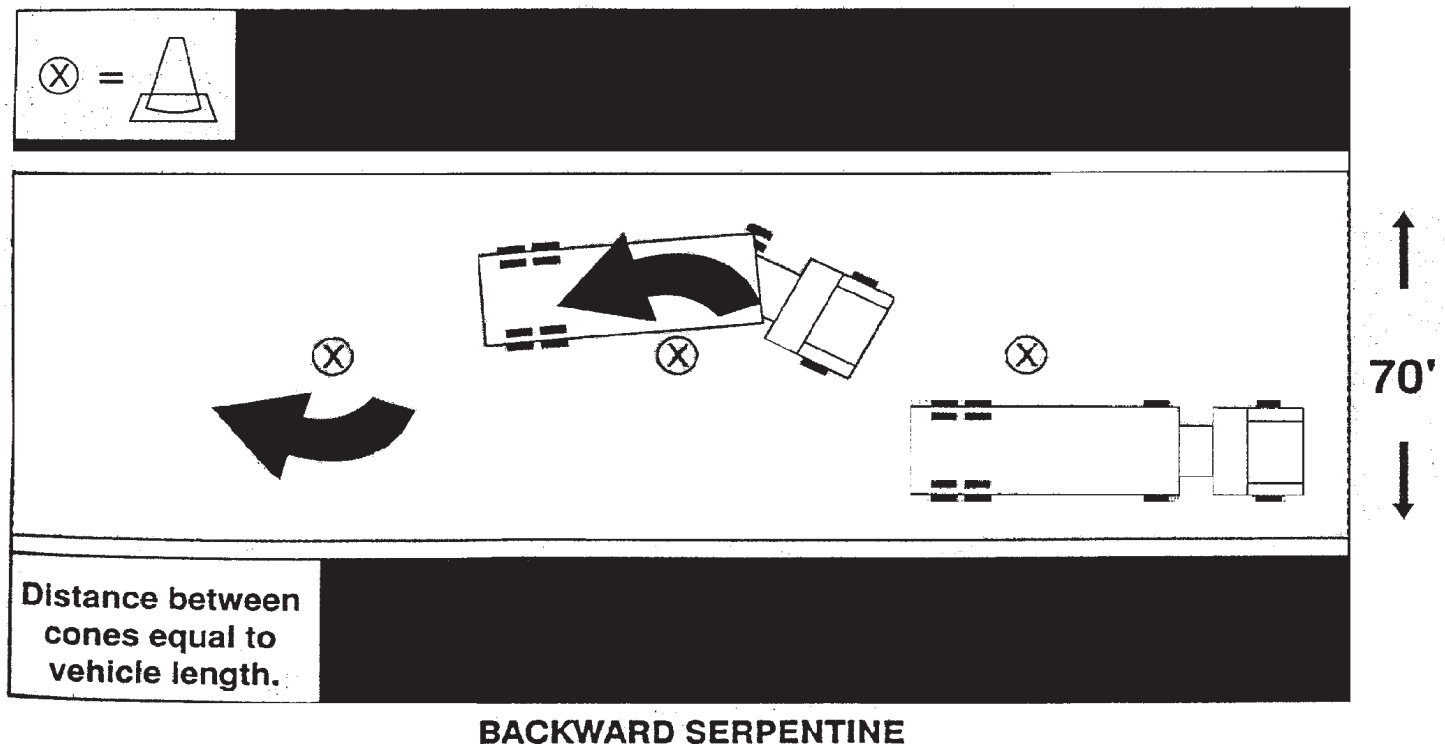


As you back through the serpentine the examiner will score an error each time you touch a cone, and each time you make any pullups.

ALLEY DOCK


The exercise requires you to drive by the alley so the entrance is on your left side. The object is to back into the alley dock without touching any markers or boundary lines. The driver will try to back into the alley dock and stop within two feet of the rear of the alley.

DRIVER INSTRUCTIONS:

This is what the examiner will tell you to do: "Drive by the entrance to the alley; then stop and back into it. (Driver is not allowed to set up at more than a 45 degree angle). Do not cross over any of the boundary lines of the alley. I will go over and stand at the entrance to the alley. When I wave you forward, come ahead, and back into the alley. Toot your horn when you are in position."

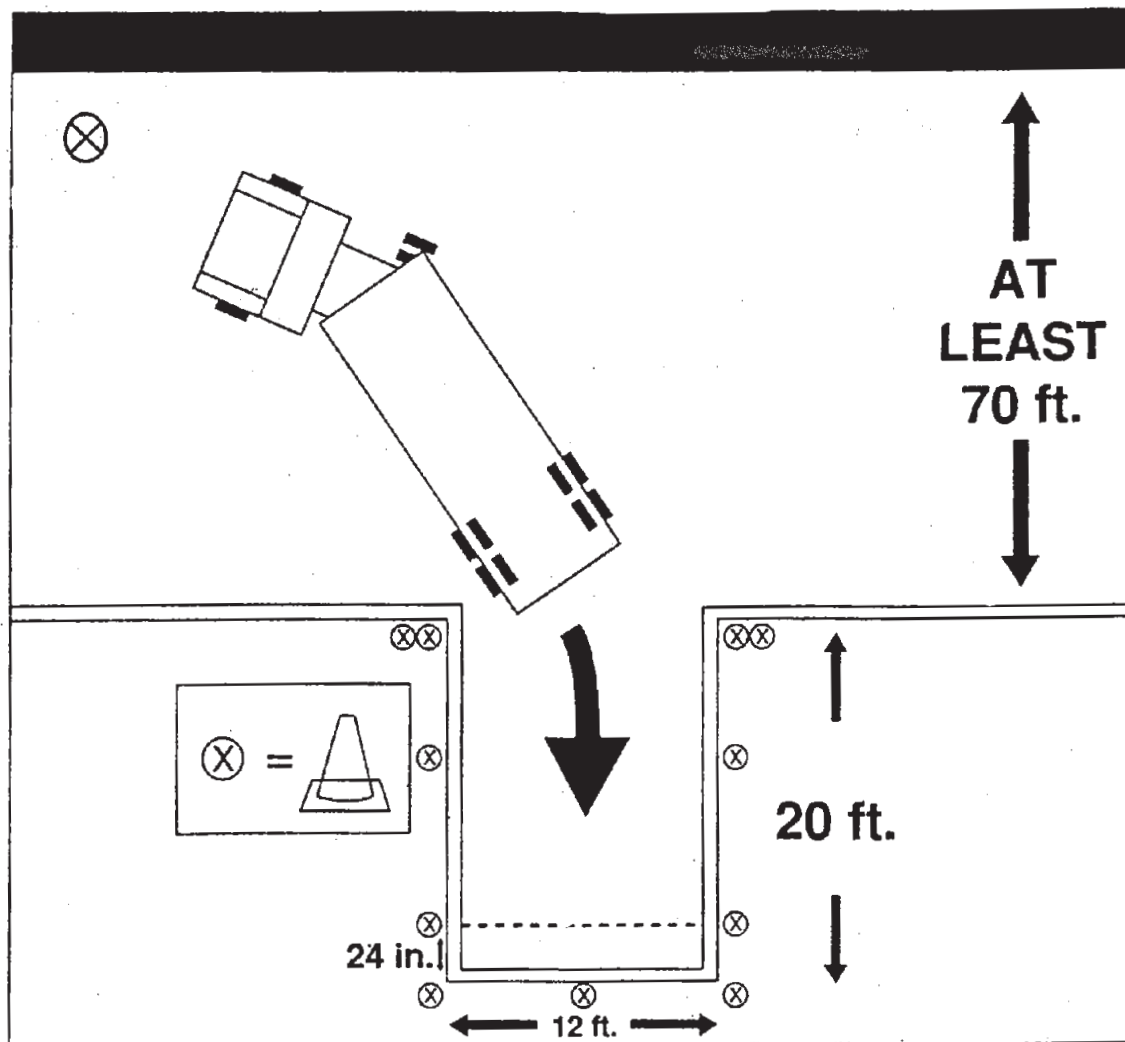**ALLEY DOCK MANEUVER**

ALLEY DOCK

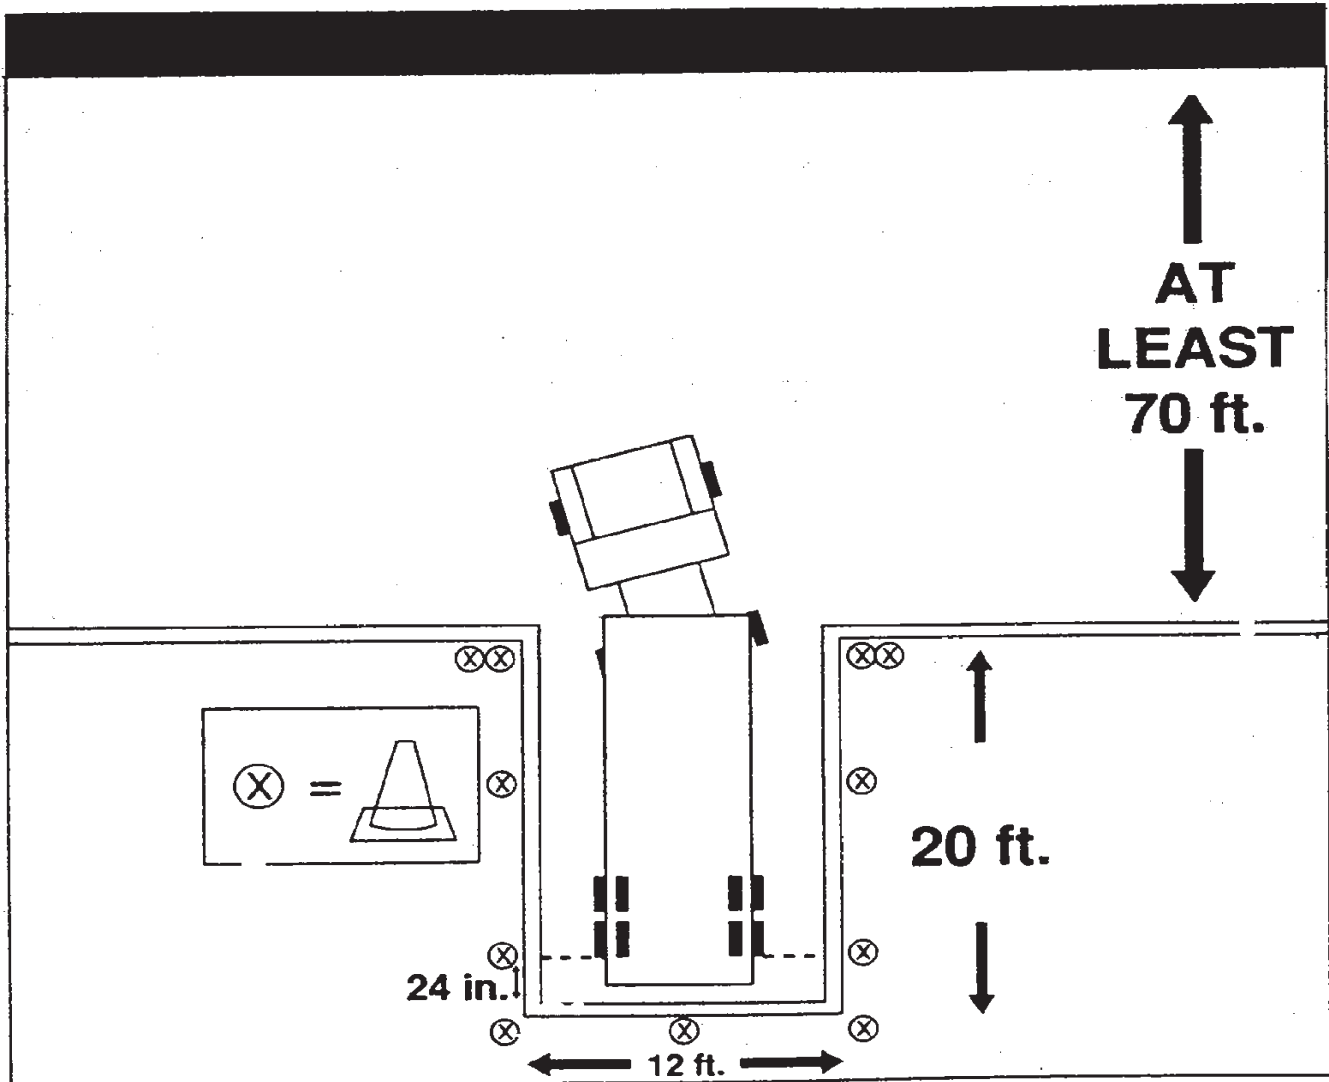

ALLEY DOCK MANEUVER

As you start backing in, the examiner will watch for any pullups or boundary lines being crossed. When you stop at the end of the exercise, the distance between the rear of your vehicle and the stop line will be graded. Your rear bumper should be within 24 inches of the stop line. An error will be scored against you anytime you make a pullup, cross a boundary line, or do not have the rear of your vehicle within 24 inches of the rear stop line.


**Parallel Park
(Conventional)**

In this maneuver, the parking space is on the right side of your truck. The exercise simulates parking your vehicle in a parking space on a street. The space will be 10 feet longer than your trailer length. Tractor trailers will only be backing the trailer into the space. Straight trucks and buses will back the whole vehicle into the space. (Vehicle length plus 10 feet)

DRIVER INSTRUCTIONS:


This is what the examiner will tell you to do: (For a straight truck or bus) “Drive by the parking space and back into it. Try to get your vehicle as close as possible to the rear and to the curb of the space without crossing the lines or hitting the cones. Try to get your vehicle completely into the space. I am going over to the space to adjust it for the length of your vehicle. When I wave you forward, come ahead and then back into the space.”

(For a tractor-trailer) “Drive by the parking space and back the trailer into it. You only have to get the trailer into the space. You can jackknife the tractor at any angle you want so long as you get the trailer into the space. Try to get your trailer as close as possible to the rear and the curb of the space without any part of your vehicle crossing the lines or hitting the cones. Try to get the trailer completely in the space. I am going over to the space to adjust it for the length of your trailer. When I wave you forward, come ahead and then back into the space.”

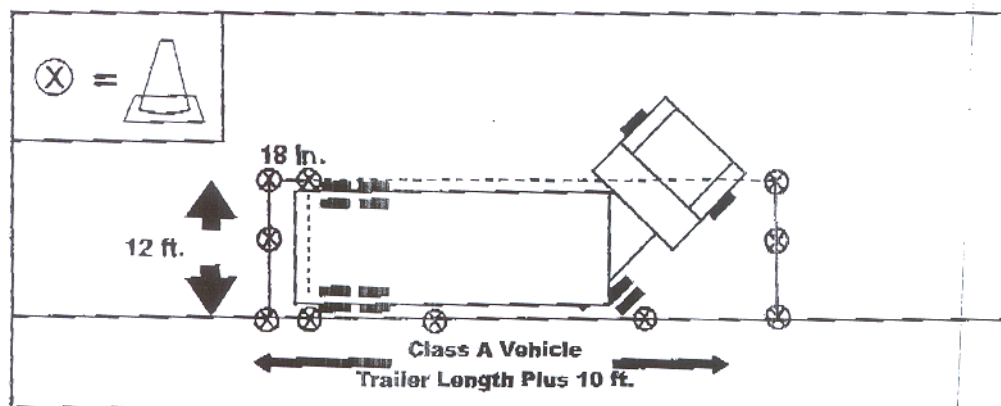

PARALLEL PARK (Conventional)

**Parallel Park
(Conventional)**

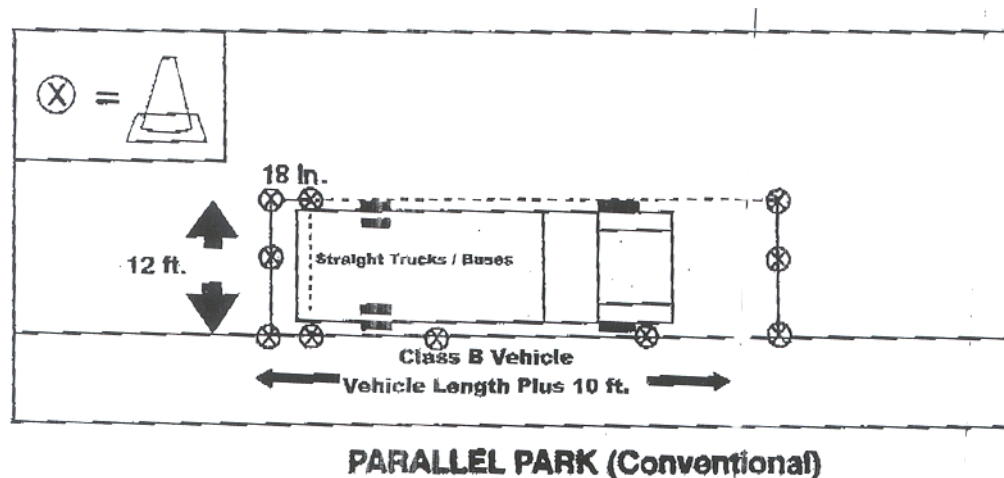

After you set-up and start backing, the examiner will score an error each time for a pullup, and crossing any boundary lines. You will also be scored an error after you have completed the exercise for not having the trailer/vehicle inside the parallel park and if you do not have the rear of your vehicle within 18 inches of the rear stop line.

**SCORING
STANDARDS**

The Basic Control Skills Test consists of 4 different exercises.

- Straight Line Backing
- Alley Dock
- Conventional parallel park
- Backward serpentine

Remember, errors are pull-ups, crossing lines or hitting cones (encroachments), not having vehicle in rear of dock, stop lines. If you go over 12 points for all 4 maneuvers combined, you have failed.

Section 3

Road Test

Purpose of the Road Test

The purpose of the road test is to evaluate your ability to drive safely and lawfully in on-the-road traffic situations. The test drive is taken over a route approved by the State of Indiana. It may include left and right turns, intersections, railway crossings, curves, up and down grades, rural or semi-rural roads, city multi-lane streets, and expressway driving. You will need to take the road test in the type of vehicle for which you intend to be licensed. Since safety is of the highest priority, if you do not obey a traffic law or if you cause an accident during the test, you will automatically fail the road test.

DRIVER INSTRUCTIONS:

General Instructions

This is what the examiner will tell you to do; “During the road test, I will give you directions as we go along. I will always give directions for turns and so on as far in advance as possible.” “Along the way I will point out a location, and ask you to pretend it is the top of a steep hill that you will be going down. I will ask you to go through the motions of what you would do if it were a real hill, and at the same time tell me what you are doing as you do it. The fact that there is this pretend hill, doesn’t mean that there are no real hills on the route we’ll take”.

Additional instructions for Bus and Hazmat endorsements.

“I will also point out another location, and ask you to pretend it is a railroad crossing. I will ask you to go through the motions of what you would do if it was a real railroad crossing, and at the same time tell me what you are doing as you do it. There will be no trick directions to get you to do something illegal or unsafe. As we go along, I will be making various marks on the test form. When you see this, it doesn’t necessarily mean you have done anything wrong. It is best for you to concentrate on driving, and not worry about what I am doing”.

**GROUND FOR
IMMEDIATE
FAILURE (GFIF)**

The Grounds for Immediate Failure (GFIF) deals with serious errors. Whenever an error of this type occurs, the test is stopped. Errors which will be grounds for immediate failure are listed below:

1. Committing a moving traffic violation or disobeying signs and signals.
2. Having an avoidable accident or incident.
3. Any dangerous action or unsafe behavior.
4. Driving vehicle over sidewalks or curbs.
5. Refusing to wear seat belt.
6. Other.

Road Test

ROAD TEST PROCEDURES

The Road Test is taken over a route approved by the State of Indiana. As you are driving, you must follow instructions given by the examiner and concentrate on what you are doing. The examiner will score specific tasks such as turns, merging into traffic, lane changes, and speed control, at specific places along the route. The examiner will also score whether you correctly do tasks such as signaling, searching for hazards, controlling speed, and lane positioning.

The Road Test route is planned so that certain maneuvers are scored only at selected locations on the route. The examiner will not grade against you for a maneuver that is performed improperly if it occurs at a location other than the pre-selected location. There is one exception: an error that is grounds for “Immediate Failure” will be scored anywhere along the test route.

SCORING STANDARDS

EXPRESSWAY

Merge On

Traffic check, Speed,
Signal, Spacing, No stop

Lane Changes (1 ea. left 1 ea. right)

Traffic check, signal, spacing, smooth lane change, cancel signal.

Exit

Traffic check, signal, smooth merge to exit lane, decelerate in exit lane, ramp speed, spacing, cancel signal.

DRIVE UP GRADE

Proper gear, keep right, 4-ways if slow, traffic checks.

DRIVE DOWN GRADE

In proper gear, brake, clutch, steady speed, traffic checks.

BRIDGE / UNDERPASS

Knows weight / clearance / sign

**SCORING
STANDARDS**

CURVE

Speed: enter, through, stay in lane, traffic checks.

START / STOP ON GRADE

Approach

Traffic check, signal on, correct lane, deceleration, not coast.

Stop

Parallel, not roll, signal off, 4-ways on, parking brake on.

Resume

Traffic check, 4-ways off, signal, parking brake released, not stall engine, traffic check, accelerate, not roll back.

URBAN / RURAL SECTIONS

Regular traffic checks, selects proper lane, keeps vehicle in lane, speed, following distance.

Lane Changes (1ea. left / 1ea. right.)

Traffic check, signal, space, smooth change.

INTERSECTIONS

Stopping

Traffic check, declaration, coast, gap, stop line, full stop.

Driving Through

Traffic check, yield, lane, gear, accelerate.

TURNS (4 left / 4 right)

Approach

Traffic check, signal, decelerate, coast, lane positioning.

If Stop Is Necessary

Gap, stop line, full stop, wheels straight, gears.

Turning

Traffic check, both hands on wheel, gears, speed, too wide / too short.

Complete Turn

Traffic check, correct lane, cancel signal, accelerate.

GENERAL DRIVING BEHAVIOR

**SCORING
STANDARDS**

- Used clutch properly (shifting, double clutched, didn't ride).
 - Used gears properly (did not rev/lug engine, clash gears, or coast).
 - Used brakes properly (smooth braking, no riding or pumping).
 - Proper steering (both hands on wheel, no over/under control).
 - Proper lane usage (not over lanes, stop lines, etc., correct lane).
-

You are scored on your ability to drive safely. For each driving error you make at a specific scoring location, points will be deducted.

**ROAD TEST
SCORING**

Scoring Example

Curve:
Speed Enter, Through,
Stay in Lane Ø = 1 point off
Traffic Checks Ø = 1 point off
No Errors

Total	<u>2 points off</u>
-------	---------------------

This example would indicate that the examinee did not stay in his lane going through a graded curve. The example also states that the examinee did not watch his mirrors through the curve.

You are allowed to miss 25 points maximum. Anything over 25 points means you have failed the road test.

 


**TO MAKE AN APPOINTMENT FOR A SKILLS TEST, PLEASE OBTAIN
A LISTING OF THE CDL THIRD PARTY TEST SITES AT ANY INDIANA
LICENSE BRANCH.**

CDL CLASSIFICATION SYSTEM

CDL OFFICE & CDL HELP DESK
INDIANA DEPARTMENT OF REVENUE
5252 DECATUR BLVD., STE. R
INDIANAPOLIS, INDIANA 46241

To: ALL HOLDERS OF CHAUFFEUR'S OR PUBLIC PASSENGER CHAUFFEUR'S LICENSES

The Commercial Motor Vehicle Safety Act of 1986 required all states to adopt a classified driving licensing system which allows for the licensing of commercial motor vehicle operators. The Act defines a commercial motor vehicle; as: (1) having a gross vehicle weight rating (GVWR) of at least 26,001 lbs.; (2) vehicle designed to transport 16 or more passengers including the driver; or (3) any size vehicle carrying hazardous materials which requires placarding.

GROUP:	DESCRIPTION:
A-	Any combination of vehicles with a GVWR of 26,001 or more pounds provided the GVWR of the vehicle(s) being towed is in excess of 10,000 pounds. (Holders of a Group A license may, with any appropriate endorsements, operate all vehicles within Group B and C.) Examples include but are not limited to: 
B-	Any single vehicle with a GVWR of 26,001 or more pounds, or any such vehicle towing a vehicle not in excess of 10,000 pounds GVWR. (Holders of a Group B license may, with any appropriate endorsements, operate all vehicles within Group C.) Examples include but are not limited to: 
C-	Any single vehicle less than 26,001 pounds GVWR, or any such vehicle towing a vehicle not in excess of 10,000 pounds GVWR. This group applies to vehicles which are placarded for hazardous materials or designed to transport 16 or more persons, including the operator. Examples include but are not limited to: 

The representative vehicle for the skills test must meet the written description for that group. The silhouettes typify, but do not fully cover, the types of vehicles falling within each group.

FEES:	
-Four (4) year commercial driver's license	\$ 30.00
-Addition of a commercial driver's license endorsement, or removal of a CDL restriction, other than at the time of application	\$ 20.00
-Commercial driver's license learner's permit	\$ 16.00
-Amendment to a commercial driver's license learner's permit, including the additional or removal of a CDL endorsement or restriction, other than at the time of application	\$ 10.00
-Duplicate or amended license	\$ 10.00
-Skills and Road Test	\$100.00
-Rental fees, if third party is required to provide the vehicle	\$ 25.00

UNLIMITED TESTING FOR WRITTEN EXAM:

The written test, general knowledge and endorsements, may be taken once every 24 hours with no charge until the license is issued. **CDL MEDICAL INFORMATION - Please see beginning of CDL Manual, or call (317)615-7335.** A medical examiner's certificate for intrastate or interstate must be presented for CDL upgrades, additional CDL endorsements, duplicate or any kind of amended CDL or CDL Learner's Permit.

COMMERCIAL DRIVERS LICENSE: WAIVERS

FARMERS (and their farm hands in the farmer's vehicle):

- Those operators of a farm vehicle which is
- controlled and operated by a farmer;
 - used to transport either agricultural products, farm machinery, farm supplies or (some combination thereof) to or from a farm;
 - not used in the operation of a common or contractor motor carrier; and
 - used within 150 miles of the person's farm.

FIREFIGHTERS AND OPERATORS OF EMERGENCY EQUIPMENT:

The FHWA believes it not contrary to the public interest to waive operators of firefighting and other emergency equipment from the requirements of the Act. Drivers who operate emergency or fire equipment which is necessary to the preservation of life or property or the execution of emergency governmental functions performed under emergency conditions.

MILITARY PERSONNEL:

All non-civilian operators of equipment owned or operated by the Department of Defense are waived from the Act's requirements. This applies to any active duty military personnel, and members of the reserves and national guard on active duty including personnel on full time national guard duty.

RECREATIONAL VEHICLES:

- Operators of a motor vehicle that:
- is registered as a recreational vehicle;
 - is used primarily to transport the owner's family members or guests and their possessions for nonbusiness purposes.

OBTAINING A COMMERCIAL DRIVER'S LICENSE

In order to obtain a commercial driver's license the applicant must:

1. Produce his/her current driver's license.
2. Any one of the following documents can be used to verify your Social Security number.
 1. Your social security card.
 2. A NUMI Report stamped and issued from the Social Security Administration (SSA) office in Baltimore, Maryland.
 3. Verification of Social Security Number Letter signed and stamped from an **Indiana** SSA District Office.
3. Present proof of a current physical examination.
4. Complete all necessary written and driving tests. Waiving of the driving tests ended on March 31, 1992. All drivers issued a commercial driver's license after that date must complete the driving skills tests.

GRANDFATHERING ENDED MARCH 31, 1992.

BE SURE TO READ THE CDL SKILLS TEST SECTION OF THE MANUAL. If you fail the CDL Skills or Road Test, you will be required to pay the entire fee to retest.

For Additional Information or Assistance:

Indiana Department of Revenue

Motor Carrier Services Division
5252 Decatur Blvd., Suite R
Indianapolis, IN 46241
(317) 615-7200

Indiana State Police

Commercial Vehicle Enforcement Division
5252 Decatur Blvd., Suite J
Indianapolis, IN 46241
(317) 615-7373
1-800-523-2226
Fax: (317) 821-2350
Website: www.state.in.us/isp/cmv

Federal Office of Motor Carriers

(Federal Dept. of Transportation)
575 N. Pennsylvania, Suite 261
Indianapolis, IN 46204
(317) 226-7474
Fax: (317) 226-5006

Intrastate Carrier Services

Indiana USDOT (317) 615-7350
Superload Permits (317) 615-7325
Motor Carrier Fuel Tax (317) 615-7345
Indiana Operating Authority (317) 615-7290
Oversize/Overweight Vehicle Permitting (317) 615-7320

Interstate Carrier Services

IRP (317) 615-7340
IFTA (317) 615-7345
SSRS (317) 615-7350
Superload Permits (317) 615-7325
Commercial Driver's License (317) 615-7335
Oversize/Overweight Vehicle Permitting (317) 615-7320

Fax Numbers

IRP/IFTA (317) 821-2335
Insurance (317) 821-2339
Commercial Driver's License (317) 821-2340
Oversize/Overweight/Superload (317) 821-2336

TaxFax: (317) 233-2329

Website Address: www.in.gov/dor/

Knowledge Test Section

How to Get A Commercial Driver's License

On April 1, 1992, all drivers of Commercial Motor Vehicles must have a Commercial Driver's License (CDL). To get a CDL, you will need to pass the written knowledge tests, skills test and a DOT physical examination. This manual is a study guide for passing the written knowledge tests and the CDL skills tests. The booklet and a physical examination form may be obtained at any Indiana license branch and from the Department of Revenue, Motor Carrier Services' website at www.in.gov/dor/mcs/formlist.html.

1. A driver must have a valid Indiana operator's license.
2. A driver must have a valid United States Social Security Card. Copies of a Social Security card are not valid and will not be accepted. Check with any Indiana Bureau of Motor Vehicles License Branch for current requirements of "Proof of Social Security Number".
3. A driver must pass a DOT physical examination prior to applying for an initial Commercial Driver's License (CDL) and every two (2) years thereafter. The driver must provide the valid DOT physical examination for filing with the Department of Revenue (DOR) to maintain commercial driving privileges.
4. A driver must obtain a Commercial Driver's License permit from the Bureau of Motor Vehicles. To obtain a CDL permit a driver will have to take one or more of the written knowledge tests:
 - A. The General knowledge test must be taken by all drivers.
 - B. The Passenger transport test must be taken by all bus drivers.
 - C. The air brakes test if the vehicle a driver is driving has air brakes.
 - D. The combination vehicle test for combination vehicles.
 - E. The hazardous material test if a driver is required to haul waste and hazardous materials.
 - F. The tanker test if a driver is required to haul liquids in bulk.
 - G. The doubles/triples test if a driver is required to pull double or triple trailers.
5. After a driver has acquired a CDL PERMIT, the driver then must take a skills test in a vehicle representative of the class of license which the driver will receive. The skills test must be taken at an approved State Third Party Test Site and will consist of three parts:
 - A. The pre-trip inspection test.
 - B. The basic control skills test.
 - C. The road trip test.

If a driver fails the skills test, the driver may take the test again the next day. A driver must only test once a day. A driver will be responsible for all costs each time that driver has to take a skills test. After a driver has passed the skills test, the examiner will validate a certification form which is to be taken to the Bureau of Motor Vehicles.
6. After a driver has passed all tests, the driver needs to take their Indiana operators license, CDL permit, and DOT/CDL physical to any Indiana License Branch. At that time, if the driver has a valid driver's license status, the License Branch will issue the driver their CDL.

NOTE:

If the Commercial Driver's License has been expired, disqualified, canceled, revoked, or invalidated for more than one (1) year, the holder must pass all knowledge and skills exams prior to issuance of the CDL license.
(140 IAC 7-3-17)

TO MAKE AN APPOINTMENT FOR A SKILLS TEST, PLEASE OBTAIN A LISTING OF THE CDL THIRD PARTY TEST SITES AT SELECTED INDIANA LICENSE BRANCH'S.

Implied Consent to Alcohol Testing

383.72 When fully implemented, April 1, 1992, “Any person who holds a CDL shall be deemed to have consented to such testing as is required of him/her by any State or jurisdiction in the enforcement of 383.51 (b)(2)(i) and 392.5 (a)(2). Consent is implied by driving a commercial motor vehicle.”

383.51 (b)(2)(i) “Driving a commercial motor vehicle while under the influence of alcohol.” This shall include:

- (A) Driving a commercial motor vehicle while the person’s alcohol is 0.04 percent or more; or
- (B) Driving under the influence of alcohol, as prescribed by State law; or
- (C) Refusal to undergo such testing as is required by any State or jurisdiction in the enforcement of 383.51 (b)(2)(i)(A) or (B), or 392.5 (a)(2).

392.5 (a)(2) “No person shall consume an intoxicating beverage regardless of its alcohol content, be under the influence of an intoxicating beverage, or have any measured alcohol concentration or any detected presence of alcohol, while on duty, or operating, or in physical control of a motor vehicle.”

Source: Federal Motor Carrier Safety Regulations, Parts 383, 390, 397, 399.
U.S. Department of Transportation, Federal Highway Administration.

Providing Physical Examination

In an effort to protect the integrity of medical reporting and to monitor the medical status of individuals who hold CDL’s, the State of Indiana Bureau of Motor Vehicles, the Federal Highway Administration, and the Department of Transportation have entered into a medical review program. This program will allow the Revenue Department to track medical histories to ensure compliance with federal and state medical requirements of the Commercial Driver’s License.

The program will now require a CDL applicant or a CDL driver to:

1. Provide a copy of the DOT physical examination form when making application for a CDL permit and every two (2) years thereafter.
2. Sign an information release for the Department of Revenue and supply the physician’s address, phone number and state license number (Indiana forms have space for this information, but the DOR will accept any DOT physical examination form as long as this information is provided - OUT OF STATE PHYSICALS NEED TO HAVE THE PHYSICIAN’S NAME, ADDRESS AND PHONE NUMBER.)
3. DOT Physical Examination forms are available at all license branches and on the DOR Motor Carrier Services Website at www.in.gov/dor/mcs/formlist.html.

All Physical Examination Forms must have:

1. Date of examination.
2. The driver’s correct name and date of birth.
3. Doctor’s signature, phone number, and Physician’s state license number (OUT OF STATE PHYSICALS NEED TO LIST THE PHYSICIAN’S STATE LICENSE NUMBER!)
4. The driver’s signature on the DOR signature release line and the driver’s Social Security Number.
5. Out of state physicals will be accepted, but the individual must still sign an information release for the DOR and supply their Social Security Number. This information may be added anywhere on the long form as long as it is clearly visible. (Ex: top of form or on the margins) The release may say: I authorize this information to be released to the Indiana DOR.

If a physical form is missing any of this information, a Commercial Driver’s License MAY NOT BE ISSUED. This program is for all CDL licenses.

If an individual comes into the branch without a copy of the DOT Physical Examination form, the clerk must tell him to contact the physician or the company that is responsible for the physical. An individual may then do one of

the following:

1. Mail to: CDL Medical Section
5252 Decatur Blvd., Suite R
Indianapolis, IN 46241
2. Fax to CDL at 317-821-2340

All information will be confidential!

If you have any questions, please call the CDL Medical Section Help Desk at: 317-615-7335.

DOT Physical Examination Information is now automated (317) 615-7433

Commercial drivers with a CDL and authorized companies can now check the processing status of a DOT physical examination form by calling the Indiana Department of Revenue, Motor Carrier Services Division, CDL Section's Voice Response Unit (VRU) at (317) 615-7433.

Companies must register with the CDL Section and receive an authorization number. Authorization application forms are available from the CDL Section by calling (317) 615-7335, or you may download the application form from our web site at www.in.gov/dor/mcs/formlist.html.

Waiver of Certain Physical Defects

A person who is not physically qualified to drive under FMCSR 391.41 (b)(1) or (2) and who is otherwise qualified to drive a commercial motor vehicle, may drive a commercial motor vehicle if the Regional Director, Motor Carrier Safety, has granted a waiver to that person.

An example would be a person requiring a prosthetic or orthotic device. Such a driver is not automatically disqualified from operating a commercial motor vehicle. The State of Indiana, in conjunction with the Federal Highway Administration, will conduct a physical waiver examination, provided all waiver requirements are met.

For specific information regarding the application, call the Federal Highway Administration (Indiana Office) at (317) 226-7474. Please contact the Department of Revenue Commercial Driver's License Medical Section for additional information or assistance at (317) 615-7335.

Commercial Driver's License Federal Motor Carrier Safety Regulations Driver Disqualifications and Penalties

Disqualifying Offenses

383.51 (b)(1) A driver who is convicted of a **disqualifying offense** specified in paragraph (b)(2) of this section is disqualified for the period of time specified in paragraph (b)(3) of this section, if the offense was committed while operating a Commercial Motor Vehicle.

(b)(2) The following offenses are disqualifying offenses:

- (i) Driving a Commercial Motor Vehicle while under the influence of alcohol.
- (ii) Driving a Commercial Motor Vehicle while under the influence of a controlled substance.
- (iii) Leaving the scene of an accident involving a Commercial Motor Vehicle.
- (iv) A felony involving the use of a Commercial Motor Vehicle (other than (v) below).
- (v) The use of a Commercial Motor Vehicle in the commission of a felony involving manufacturing, distribution, or dispensing of a controlled substance.

(b)(3) Duration of disqualification:

- (i) First Offenders - a driver who is convicted of an offense described above in (b)(2)(i)

through (iv) is disqualified for a period of one year provided the vehicle was not transporting hazardous materials required to be placarded.

- (ii) First Offenders transporting hazardous materials - driver who is convicted of an offense described above in (b)(2)(i) through (iv) is disqualified for a period of three years if the vehicle was transporting hazardous materials required to be placarded.
- (iii) First Offenders of controlled substance felonies - a driver who is convicted of an offense described in (b)(2)(v) is disqualified for life.
- (iv) Second Offenders - a driver who is convicted on an offense described in (b)(2)(i) through (b)(2)(iv) is disqualified for life if the driver had been convicted once before in a separate incident of any offense described in (b)(2)(iv).

Serious Offenses

383.5

Serious Traffic Violations - Definitions

- (a) Excessive speeding - involving any single offense for any speed of 15 miles per hour or more above the posted speed limit.
- (b) Reckless driving as defined by state or local law or regulation, including but not limited to offenses of driving a Commercial Motor Vehicle in willful or wanton disregard for the safety of persons or property.
- (c) Improper or erratic traffic lane changes.
- (d) Following the vehicle ahead too closely.
- (e) A violation, arising in connection with a fatal accident, of state or local law relating to motor vehicle traffic control (other than a parking violation) (serious traffic violations exclude vehicle weight and defect violations).

383.51 (c)(1) A driver who is convicted of serious traffic violations is disqualified for the period of time specified in (c)(2), if the offenses were committed while operating a Commercial Motor Vehicle.

- (c)(2)(i) Second violation - a driver who, during any three year period, is convicted of two serious traffic violations in separate incidents, is disqualified for a period of 60 days.
- (c)(2)(ii) Third violation - a driver who, during any three year period, is convicted of three serious traffic violations in separate incidents, is disqualified for a period of 120 days.

Disqualification for Violation of Out-Of-Service Orders

383.51 (d)(1) A driver who is convicted of violating an out-of-service order while driving a commercial motor vehicle is disqualified for the period of time specified in paragraph (d)(2) of this section.

383.51 (d)(2) Duration of disqualification for violation of out-of-service orders.

- (d)(2)(i) First violation - a driver is disqualified for not less than 90 days nor more than one year if the driver is convicted of the first violation of an out-of-service order.
- (ii) Second violation - a driver is disqualified for not less than one year nor more than five years if, during any 10-year period, the driver is convicted of two violations of out-of-service orders in separate incidents.
- (iii) Third or subsequent violation - a driver is disqualified for not less than three years nor more than five years if, during any 10-year period, the driver is convicted of three or more violations of out-of-service orders in separate incidents.
- (iv) Special rule for hazardous materials and passenger offenses - a driver is disqualified for a period of not less than 180 days nor more than two years if the driver is convicted of a first violation of

an out-of-service order while transporting hazardous materials required to be placarded under the Hazardous Materials Transportation Act (49 U.S.C. 5101 *et. seq.*), or while operating motor vehicles designed to transport more than 15 passengers, including the driver. A driver is disqualified for a period of not less than three years nor more than five years if, during any 10-year period, the driver is convicted of any subsequent violation of out-of-service order, in separate incidents, while transporting hazardous materials required to be placarded under the Hazardous Materials Transportation Act (49 U.S.C. 5101 *et. seq.*) or while operating motor vehicles designed to transport more than 15 passengers, including the driver.

Disqualification for Railroad-Highway Grade Crossing Violation

383.51 (e)(1) A driver who is convicted of operating a CMV in violation of a Federal, State, or local law or regulation pertaining to one of the following six offenses at a railroad-highway grade crossing must be disqualified for a period of time specified in paragraph (e)(2) of this section:

- (e)(1)(i)** For drivers who are not required to always stop, failing to slow down and check that the tracks are clear of an approaching train;
- (ii)** For drivers who are not required to always stop, failing to stop before reaching the crossing, if the tracks are not clear;
- (iii)** For drivers who are always required to stop, failing to stop before driving onto the crossing;
- (iv)** For all drivers, failing to have sufficient space to drive completely through the crossing without stopping;
- (v)** For all drivers, failing to obey a traffic control device or the directions of an enforcement official at the crossing;
- (vi)** For all drivers, failing to negotiate a crossing because of insufficient undercarriage clearance.

383.51 (e)(2) Duration of disqualification for railroad-highway grade crossing violation.

- (e)(2)(i)** First violation - A driver must be disqualified for not less than 60 days if the driver is convicted of a first violation of a railroad highway grade crossing violation.
- (ii)** Second violation - A driver must be disqualified for not less than 120 days if, during any three-year period, the driver is convicted of a second railroad-highway grade crossing violation in separate incidents.
- (iii)** Third or subsequent violation - a driver must be disqualified for not less than 1 year if, during any three-year period, the driver is convicted of a third or subsequent railroad-highway grade crossing violation in separate incidents.

Effective July 1, 2001, Indiana Code Sections 9-24-6-6 and 9-24-6-7 were amended to include railroad violations as disqualifying serious offenses. A commercial motor vehicle (CMV) driver convicted of violating a federal, state or local law pertaining to railroad-highway grade crossings will be disqualified from operation a CMV.

The following are now serious offenses:

- For drivers who are not required to always stop at a railroad crossing:
 - (A) Stopping in a railroad crossing
 - (B) Failure to stop before reaching the railroad crossing, if the railroad tracks are not clear of an approaching train.
- For all drivers, whether or not they are required to always stop at a railroad crossing, to do any of the following:
 - (A) Stopping in a railroad crossing.
 - (B) Failing to obey a traffic control device or failing to obey the directions of a law enforcement officer at a railroad crossing.
 - (C) Stopping in a railroad crossing because of insufficient undercarriage clearance.

If a CMV driver is convicted of any of the above serious offenses the disqualification periods are as follows:

- Conviction of a first violation during any three (3) year period, disqualification for sixty (60) days,
- Conviction of a second violation in separate incidents during any three (3) year period, disqualification for one hundred and twenty (120) days.
- Conviction of a third violation in separate incidents during any three (3) year period, disqualification for one (1) year.

Indiana Operation Lifesaver






Preventing railroad grade crossing accidents is up to you. Under Federal Motor Carrier Safety Regulations Title 49 part 392.10 states: Drivers of commercial motor vehicles requiring placards or transporting passengers.....shall not.... “cross a railroad track or tracks at grade unless he/she first: Stops the vehicle within 50 feet of, and not closer than 15 feet to, the tracks; thereafter listens and looks in each direction along the tracks for an approaching train; and is certain that no train is approaching. When it is safe to do so, the driver may drive the vehicle across the tracks in a gear that permits the vehicle to complete the crossing without a change of gears.”

Every year hundreds of accidents at railroad grade crossings can be avoided if drivers follow these simple procedures:

1. Expect a train on any track at any time, day or night.
2. Never get trapped on a grade crossing. When traffic is heavy, wait on the approach to a crossing until you are sure you can clear the crossing.
3. Look for a second train. After the last car of a train passes, check both directions to see if another train is approaching.
4. Never drive around crossing gates. If the gates are down, do not cross the tracks.
5. Never shift gears on the crossing.
6. Watch for vehicles that must stop at a crossing. Be prepared to stop when following buses or trucks which are required to stop at railroad crossings.
7. Never race a train to the crossing.

As always, safe driving practices on the road can help to avoid accidents. As a driver on Indiana roads and highways, you have a responsibility to practice safe driving. Remember, a life could depend on it. If you should have any questions on Operation Lifesaver, please contact the office at (317) 267-4357.

How To Use This Manual

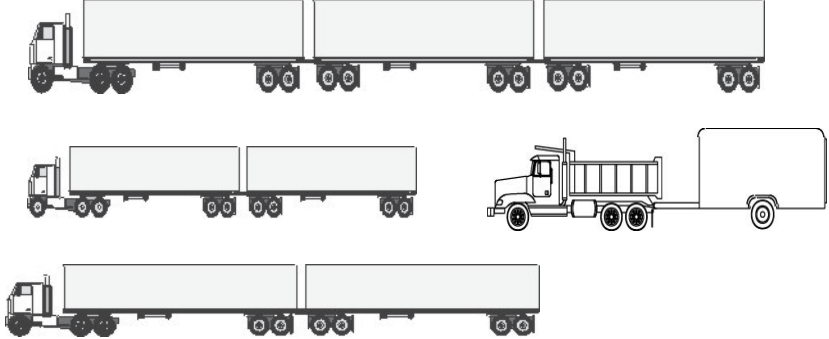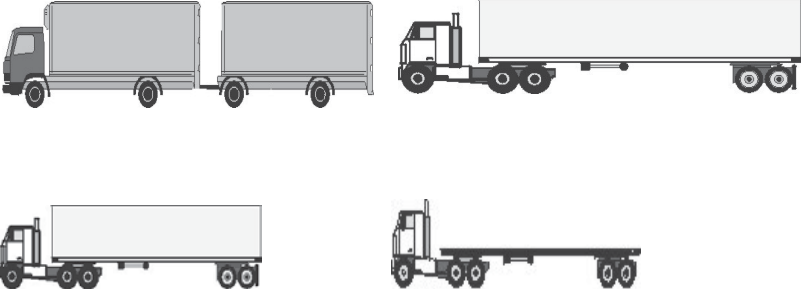
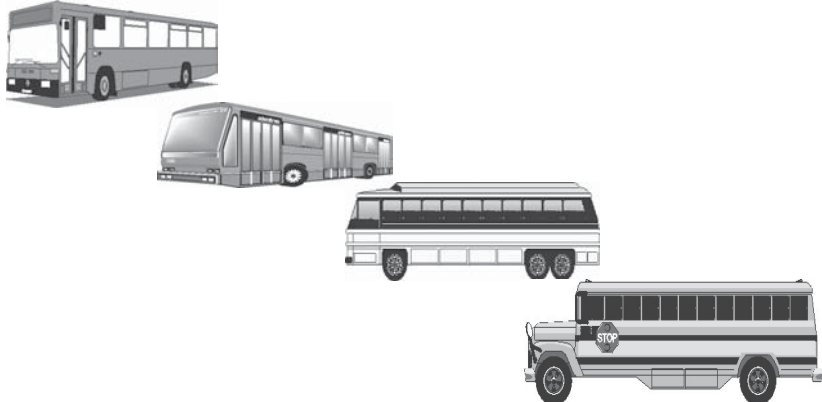
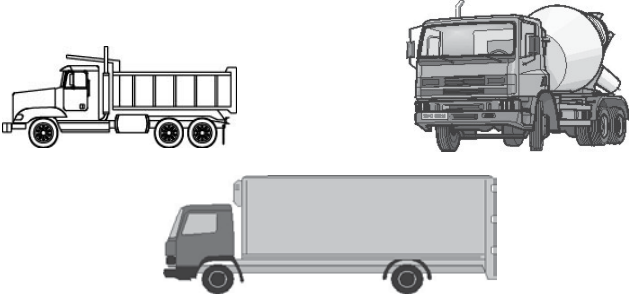

 
If you want to get a license to drive this type of vehicle or a similar tank vehicle *	Study these sections of the driver's manual
	<p>Section 1: Introduction Section 2: Driving Safely Section 3: Cargo* Section 5: Air Brakes Section 6: Combination Vehicles Section 9: Haz Mat (If needed)</p>
	<p>Section 1: Introduction Section 2: Driving Safely Section 3: Cargo* Section 5: Air Brakes Section 6: Combination Vehicles (except double/triple trailer info) Section 9: Haz Mat (if needed)</p>
	<p>Section 1: Introduction Section 2: Driving Safely Section 3: Cargo Section 4: Passengers Section 5: Air Brakes (if needed) Section 6: Combination Vehicles (if needed)</p>
	<p>Section 1: Introduction Section 2: Driving Safely Section 3: Cargo* Section 5: Air Brakes (if needed) Section 9: Haz Mat (if needed)</p>
	<p>Section 1: Introduction Section 2: Driving Safely Section 3: Cargo* Section 9: Haz Mat</p>

*If you want a tank vehicle endorsement, study especially Section 3.4

*If the vehicle used for testing is NOT a semi-trailer, license must show an "S" restriction. "No-Semi"

Figure 1-1. How To Use This Manual

Figure 2-1
Vehicle Groups (FMCSR 383.91) and Associated CDL Tests

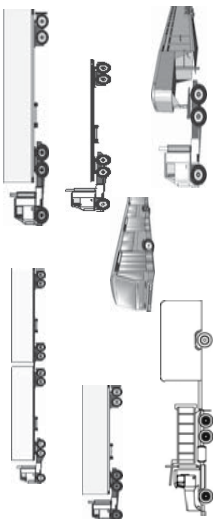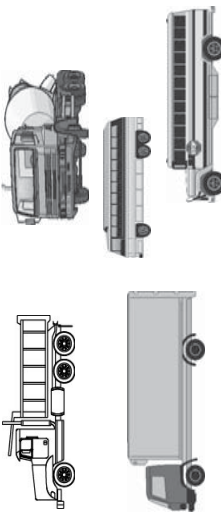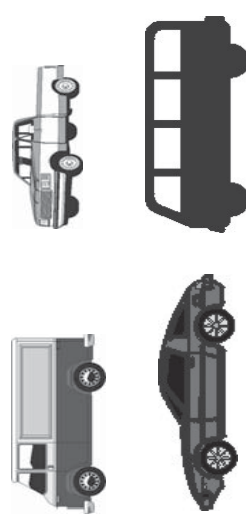VEHICLE GROUPS (FMCSR 383.91) AND ASSOCIATED CDL TESTS				
GROUP	VEHICLE DESCRIPTION	TYPICAL VEHICLE GROUP	KNOWLEDGE/TESTS REQUIRED	SKILLS/TESTS REQUIRED
A	Any combination of vehicles with a GCWR of 26,001 or more pounds provided the GVWR of the vehicle(s) being towed is in excess of 10,000 pounds.		<ul style="list-style-type: none"> General Knowledge Combination Vehicles Air Brakes (if equipped)* Passenger Transport (if applicable) 	<ul style="list-style-type: none"> Vehicle Inspection Basic Control Skills Road
B	Any single vehicle with a GVWR of 26,001 or more pounds or any such vehicle towing a vehicle not in excess of 10,000 pounds GVWR.		<ul style="list-style-type: none"> General Knowledge Air brakes (if equipped)* Passenger Transport (if applicable) 	<ul style="list-style-type: none"> Vehicle Inspection Basic Control Skills Road
C	Any single vehicle, or combination of vehicles, that does not meet the definition of group A or group B as contained herein, but that either is designed to transport 16 or more passengers including the driver, or is placarded for hazardous materials.		<ul style="list-style-type: none"> General Knowledge Air Brakes (if equipped)* Hazardous Materials (if applicable) Passenger Transport (if applicable) 	<ul style="list-style-type: none"> Vehicle Inspection Basic Control Skills Road
ENDORSEMENTS				
T	Combination vehicles with double or triple trailers.		<ul style="list-style-type: none"> Doubles/Triples 	Skills tests applicable to class of vehicle brought in for testing.
N	Vehicles used to haul liquids or gaseous materials in permanent tanks or in portable tanks having a rating capacity of 1,000 gallons or more.		<ul style="list-style-type: none"> Tank Vehicle 	
P			<ul style="list-style-type: none"> Passenger Transport 	
H			<ul style="list-style-type: none"> Hazardous Materials 	
X			<ul style="list-style-type: none"> Tank Vehicle Hazardous Materials 	




*If the vehicle used for testing is not equipped with air brakes, license must show an air brake RESTRICTION.

CDL CLASSIFICATION SYSTEM

CDL OFFICE & CDL HELP DESK
INDIANA DEPARTMENT OF REVENUE
5252 DECATUR BLVD., STE. R
INDIANAPOLIS, INDIANA 46241

To: ALL HOLDERS OF CHAUFFEUR'S OR PUBLIC PASSENGER CHAUFFEUR'S LICENSES

The Commercial Motor Vehicle Safety Act of 1986 required all states to adopt a classified driving licensing system which allows for the licensing of commercial motor vehicle operators. The Act defines a commercial motor vehicle; as: (1) having a gross vehicle weight rating (GVWR) of at least 26,001 lbs.; (2) vehicle designed to transport 16 or more passengers including the driver; or (3) any size vehicle carrying hazardous materials which requires placarding.

GROUP:	DESCRIPTION:
A-	Any combination of vehicles with a GCWR of 26,001 or more pounds provided the GVWR of the vehicle(s) being towed is in excess of 10,000 pounds. (Holders of a Group A license may, with any appropriate endorsements, operate all vehicles within Group B and C.) Examples include but are not limited to:
	 <ul style="list-style-type: none">- Tractor-Semi-trailer- Truck & Trailer- Related Endorsements- Double / Triple Trailers- Tank Vehicles- HAZMAT- Passenger Vehicles
B-	Any single vehicle with a GVWR of 26,001 or more pounds, or any such vehicle towing a vehicle not in excess of 10,000 pounds GVWR. (Holders of a Group B license may, with any appropriate endorsements, operate all vehicles within Group C.) Examples include but are not limited to:
	 <ul style="list-style-type: none">- Straight trucks 26,001 or more pounds GVWR- Buses 26,001 or more pounds, 16 passengers including the driver- Trailer not in excess of 10,000 pounds GVWR- Related endorsements- Tank Vehicles- HAZMAT- Passenger Vehicles
C-	Any single vehicle less than 26,001 pounds GVWR, or any such vehicle towing a vehicle not in excess of 10,000 pounds GVWR. This group applies to vehicles which are placarded for hazardous materials or designed to transport 16 or more persons, including the operator. Examples include but are not limited to:
	 <ul style="list-style-type: none">- Single or combination vehicles, less than 26,001 pounds GVWR- Buses less than 26,001 GVWR and designed to transport 16 or more passengers including the driver- Related endorsements- HAZMAT- Passenger Vehicles

The representative vehicle for the skills test must meet the written description for that group. The silhouettes typify, but do not fully cover, the types of vehicles falling within each group.

FEES:	
-Four (4) year commercial driver's license	\$ 30.00
-Addition of a commercial driver's license endorsement, or removal of a CDL restriction, other than at the time of application	\$ 20.00
-Commercial driver's license learner's permit	\$ 16.00
-Amendment to a commercial driver's license learner's permit, including the additional or removal or a CDL endorsement or restriction, other than at the time of application	\$ 10.00
-Duplicate or amended license	\$ 10.00
-Skills and Road Test	\$100.00
-Rental fees, if third party is required to provide the vehicle	\$ 25.00

UNLIMITED TESTING FOR WRITTEN EXAM:
The written test, general knowledge and endorsements, may be taken once every 24 hours with no charge until the license is issued. **CDL MEDICAL INFORMATION - Please see page 51 & 52 of CDL Booklet, or call (317)615-7335.** A medical examiner's certificate for intrastate or interstate must be presented for CDL upgrades, addition of CDL endorsement, duplicate or any kind of amended CDL or CDL Learner's Permit.

COMMERCIAL DRIVERS LICENSE: WAIVERS

FARMERS (and their farm hands in the farmer's vehicle):

- Those operators of a farm vehicle which is
- controlled and operated by a farmer;
- used to transport either agricultural products, farm machinery, farm supplies or (some combination thereof) to or from a farm;
- not used in the operation of a common or contractor motor carrier; and
- used within 150 miles of the person's farm.

FIREFIGHTERS AND OPERATORS OF EMERGENCY EQUIPMENT:

The FHWA believes it not contrary to the public interest to waive operators of firefighting and other emergency equipment from the requirements of the Act. Drivers who operate emergency or fire equipment which is necessary to the preservation of life or property or the execution of emergency governmental functions performed under emergency conditions.

MILITARY PERSONNEL:

All non-civilian operators of equipment owned or operated by the Department of Defense are waived from the Act's requirements. This applies to any active duty military personnel, and members of the reserves and national guard on active duty including personnel on full time national guard duty.

RECREATIONAL VEHICLES:

- Operators of a motor vehicle that:
- is registered as a recreational vehicle;
- is used primarily to transport the owner's family members or guests and their possessions for nonbusiness purposes.

OBTAINING A COMMERCIAL DRIVER'S LICENSE

In order to obtain a commercial driver's license the applicant must:

1. Produce his/her current driver's license.
2. Any one of the following documents can be used to verify your Social Security number:
 1. Your social security card.
 2. A NUMI Report stamped and issued from the Social Security Administration (SSA) office in Baltimore, Maryland.
 3. Verification of Social Security Number Letter signed and stamped from an **Indiana** SSA District Office.

Present proof of a current physical examination.
Complete all necessary written and driving tests. Waiving of the driving tests ended on March 31, 1992. All drivers issued a commercial driver's license after that date must complete the driving skills tests.

GRANDEATHERING ENDED MARCH 31, 1992.

BE SURE TO READ THE CDL SKILLS SECTION. If you fail the CDL Skills or Road Test, you will be required to pay the entire fee to retest.

PART ONE

1. Introduction
2. Driving Safely
3. Transporting Cargo Safely

**THIS PART IS FOR ALL
COMMERCIAL DRIVERS**

Section 1: Introduction

This Section Explains

- Commercial Driver License Test
- Other Safety Rules

There is a federal requirement that each state have minimum standards for the licensing of commercial drivers. This manual provides driver license testing information for drivers who wish to have a Commercial Driver License (CDL). The manual does NOT provide information on all the federal and state requirements needed before you can drive a Commercial Motor Vehicle (CMV). You may have to contact the Bureau of Motor Vehicles for additional information.

You must have a CDL to operate:

- A single vehicle with a gross vehicle weight rating (GVWR) of more than 26,000 pounds.
- A trailer with a GVWR of more than 10,000 pounds if the gross combination weight rating is more than 26,000 pounds.
- A vehicle designed to transport 16 persons or more (including the driver).
- Any size vehicle which requires hazardous materials placards.

To get a CDL, you must pass knowledge and skills tests. This manual will help you pass the tests.

1.1 Commercial Driver License Tests

- Knowledge Tests

You will have to take one or more knowledge tests, depending on what class of license and what endorsements you need. The CDL knowledge tests include:

- The General Knowledge Test, taken by all applicants.
- The Passenger Transport Test, taken by all bus driver applicants.
- The Air Brakes Test, which you must take if your vehicle has air brakes.
- The Combination Vehicles Test, which is required if you want to drive combination vehicles.
- The Hazardous Materials Test, required if you want to haul hazardous material or waste in amounts which require placarding.
- The Tanker Test, required if you want to haul liquids in bulk.
- The Doubles/Triples Test, required if you want to pull double or triple trailers.

If you pass the required knowledge test(s), you can take the CDL skills tests.

There are three types of general skills that will be tested: pre-trip inspection, basic vehicle control, and on-road driving. You must take these tests in the type of vehicle for which you wish to be licensed. The skills test information is included at the beginning of this manual, or may be obtained from the DOR, Motor Carrier Services Website at www.in.gov/dor/mcs/formlist.html.

Pre-trip Vehicle Inspection. You will be tested to see if you know whether your vehicle is safe to drive. You will be asked to do a pre-trip inspection of your vehicle and explain to the examiner what you would inspect and why. The CDL Skills Test Section will tell you what to inspect and how to inspect it.

Basic Vehicle Control. You will be tested on your skill to control the vehicle. You will be asked to move your vehicle forward, backward, and turn it within a defined area. These areas may be marked with traffic lanes, cones, barriers, or something similar. The examiner will tell you how each control test is to be done. The CDL Skills Test Section explains more about this test

On-Road Test. You will be tested on your skill to safely drive your vehicle in a variety of traffic situations. The situations may include left and right turns, intersections, railway crossings, curves, up and down grades, single or multi-lane roads, streets, or highways. The examiner will tell you where to drive. The CDL Skills Test Section explains more about this test.

- **Skills Test**

There are other federal and state rules which affect drivers operating CMVs in all states.

1.2 Other Safety Act Rules


- You cannot have more than one license. If you break this rule, a court may fine you up to \$5,000 or put you in jail. Keep your home state license and return any others.
- You must notify your employer within 30 days of a conviction for any traffic violations (except parking). This is true no matter what type of vehicle you were driving.
- You must notify your motor vehicle licensing agency within 30 days if you are convicted in any other jurisdiction of any traffic violation (except parking). This is true no matter what type of vehicle you were driving.
- You must notify your employer if your license is suspended, revoked, or canceled, or if you are disqualified from driving.
- You must give your employer information on all driving jobs you have held for the past 10 years. You must do this when you apply for a commercial driving job.
- No one can drive a commercial motor vehicle without a CDL. A court may fine you up to \$5,000 or put you in jail for breaking this rule.
- Your employer may not let you drive a commercial motor vehicle if you have more than one license or if your CDL is suspended or revoked. A court may fine the employer up to \$5,000 or put him/her in jail for breaking this rule.

- All states are connected to one computerized system to share information about CDL drivers. The States will check on drivers' accident records and be sure that drivers' don't get more than one CDL.
- **Serious Traffic Violations**
 - You will lose your CDL for at least one year for a first offense: If you are convicted of driving a CMV under the influence of alcohol or a controlled substance (for example, illegal drugs).
 - If you leave the scene of an accident involving a CMV you were driving.
 - If you used a CMV to commit a felony.
 - If the offense occurs while you are operating a CMV that is placarded for hazardous materials, you will lose your CDL for at least 3 years. You will lose your CDL for life for a second offense. You will also lose your CDL for life if you use a CMV to commit a felony involving controlled substances.
- **Disqualifications**
 - You will lose your CDL:
 - For at least 60 days if you have committed 2 serious traffic violations within a 3 year period involving a CMV.
 - For at least 120 days for 3 serious traffic violations within a 3-year period.
 - "Serious traffic violations" are excessive speeding, reckless driving, and traffic offenses committed in a CMV in connection with fatal traffic accidents.
 - It is illegal to operate a CMV if your Blood Alcohol Concentration (BAC) is .04% or more. You will lose your CDL for one year for your first offense. You will lose it for life for your second offense. If your blood alcohol concentration is less than 0.04 percent but you have any detectable amount, you will be put out-of-service for 24 hours.
- **Implied Consent**
 - If you operate a CMV, you shall be deemed to have given your consent to alcohol testing for the above mentioned violations.

These rules will improve highway safety for you and for all highway users.

Section 2

Driving Safely

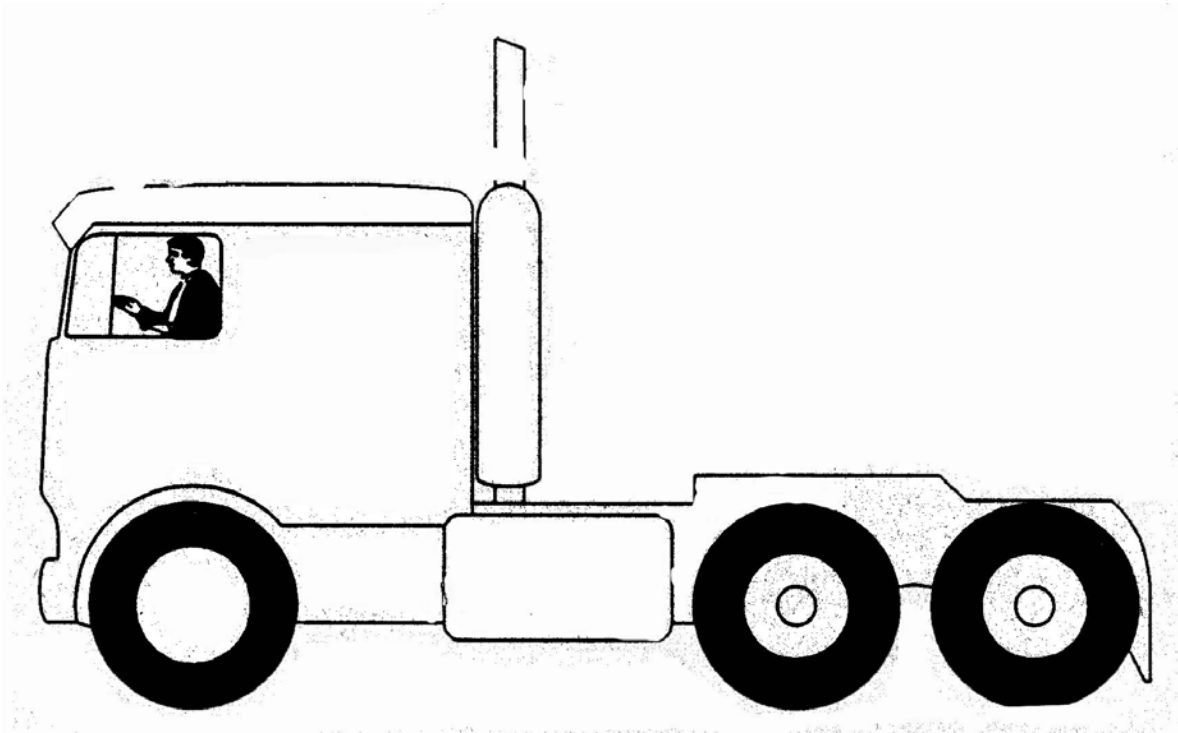

THIS SECTION IS FOR ALL COMMERCIAL DRIVERS

Section 2: Driving Safely

This Section Covers

- Vehicle Inspection
- Vehicle Control
- Shifting Gears
- Seeing
- Communicating
- Speed & Space Management
- Night Driving
- Winter Driving
- Mountain Driving
- Emergencies
- Staying Alert

This section contains knowledge and safe driving information that all commercial drivers should know. You must pass a test on this information to get a CDL.

This section does **NOT** have specific information on air brakes, combination vehicles, doubles, or passenger vehicles. You must read other sections of this manual to learn about them.

This section does have basic information on hazardous materials (HazMat) that all drivers should know. If you need a HazMat endorsement, you should study Section 9.

2.1 Vehicle Inspection

Safety is the most important reason you inspect your vehicle - safety for yourself and for other road users.

- Why Inspect?

A vehicle defect found during an inspection could save you problems later. You could have a breakdown on the road that will cost time and dollars, or even worse, a crash caused by the defect.

Federal and state laws require that drivers inspect their vehicles. Federal and state inspectors also may inspect your vehicles. If they judge the vehicle to be unsafe, they will put it “out of service” until it is fixed.

- Types of Vehicle Inspection

Pre-trip Inspection. A pre-trip inspection will help you find problems that could cause a crash or breakdown.

During a Trip. For safety you should:

- Watch gauges for signs of trouble.
- Use your senses to check for problems (look, listen, smell, feel).
- Check critical items when you stop:
 - Tires, wheels and rims.
 - Brakes.
 - Lights and reflectors.
 - Brake and electrical connections to trailer.
 - Trailer coupling devices.
 - Cargo securement devices.

After-Trip Inspection and Report. You do an after-trip inspection at the end of the trip, day, or tour of duty on each vehicle you operated. It may include filling out a vehicle condition report listing any problems you find. The inspection report helps the motor carrier know when the vehicle needs repairs.

Tire Problems

- Too much or too little air pressure.
 - Bad wear. You need at least 4/32 inch tread depth in every major groove on front wheels. You need 2/32 inch on other wheels. No fabric should show through the tread or sidewall.
 - Cuts or other damage.
 - Tread separation.
 - Dual tires that come in contact with each other or parts of the vehicle.
 - Mismatched sizes.
 - Radial and bias-ply tires used together.
 - Cut or cracked valve stems.
 - Regrooved, recapped, or retreaded tires on the front wheels of a bus. These are prohibited.
- What to Look For

Wheel and Rim Problems

- Damaged rims.
- Rust around wheel nuts may mean the nuts are loose - check tightness. After a tire has been changed, stop a short while later and recheck tightness of nuts.
- Missing clamps, spacers, studs, lugs mean danger.
- Mismatched, bent, cracked, lock rings are dangerous.
- Wheels or rims that have had welding repairs are not safe.

Bad Brake Drums or Shoes

- Cracked drums.
- Shoes or pads with oil, grease, brake fluid on them.
- Shoes worn dangerously thin, missing or broken.

Steering System Defects (See Figure 2-1)

- Missing nuts, bolts, cotter keys or other parts.
- Bent, loose, or broken parts, such as steering column, steering gear box, or tie rods.

- If power steering equipped - hoses, pumps, and fluid level; check for leaks.
- Steering wheel play of more than 10 degrees (approximately 2 inches movement at the rim of a 20-inch steering wheel) can make it hard to steer.

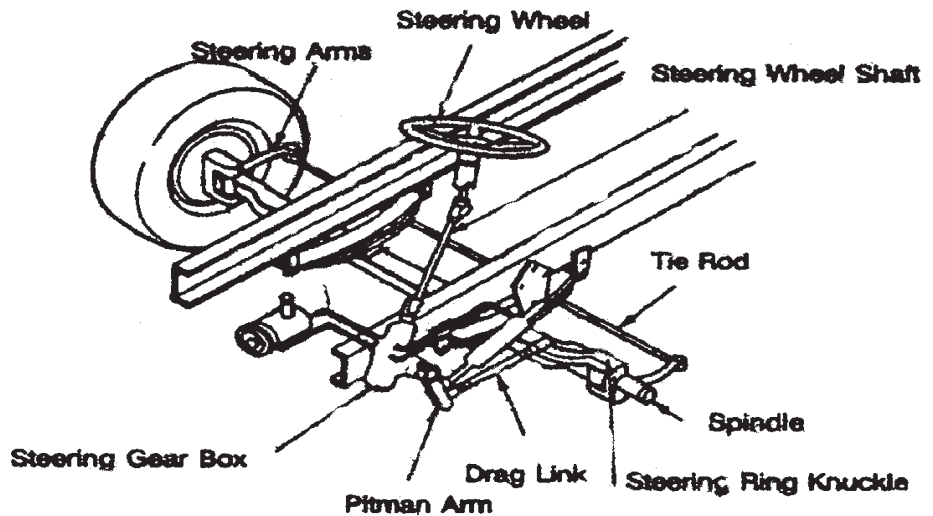


Figure 2-1

Examples of Steering System
Key Parts

Suspension System Defects. The suspension system holds up the vehicle and its load. It keeps the axles in place. Therefore, broken suspension parts can be extremely dangerous. Look for:

- Spring hangers (Figure 2-2) that allow movement of axle from proper position.
- Cracked or broken spring hangers.
- Missing or broken leaves in any leaf spring.
- Broken leaves in a multi-leaf spring or leaves that have shifted so they might hit a tire or other part.
- Leaking shock absorbers (Figure 2-4).
- Torque rod or arm, U-bolts, spring hangers and other axle positioning parts that are cracked, damaged, or missing (Figure 2-2 and 2-4).
- Air suspension systems that are damaged and/or leaking.
- Any loose, cracked, broken or missing frame members.

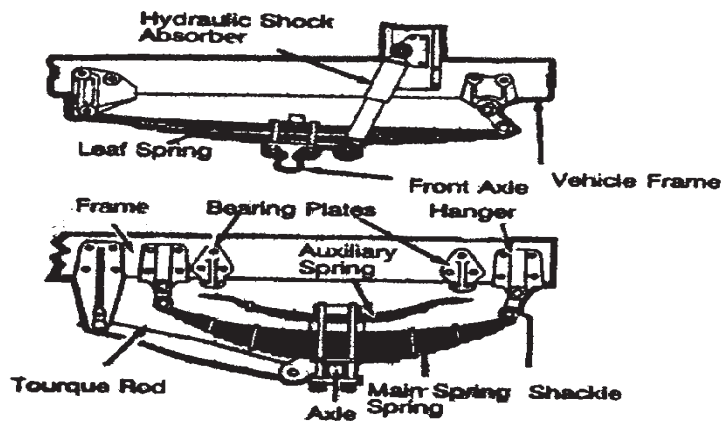


Figure 2-2

Key Suspension Parts

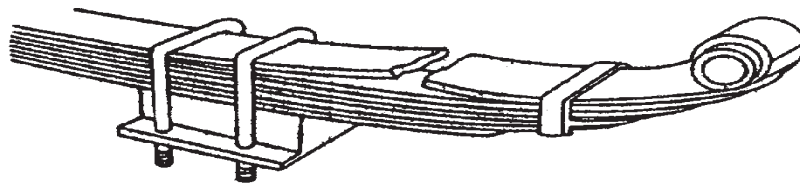


Figure 2-3

Safety Defect:
Broken Leaf in Leaf Spring

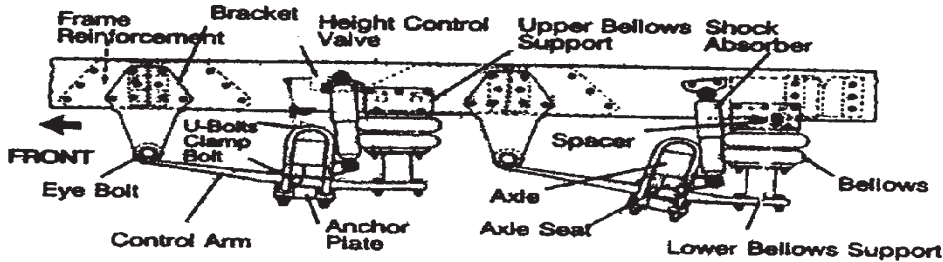


Figure 2-4

Air Suspension Parts

Exhaust System Defects A broken exhaust system can let poison fumes into the cab or sleeper berth. Look for:

- Loose, broken, or missing exhaust pipes, mufflers, tailpipes or vertical stacks.
- Loose, broken, or missing mounting brackets, clamps, bolts or nuts.
- Exhaust system parts rubbing against fuel system parts, tires or other moving parts of vehicle.
- Exhaust system parts that are leaking.

Emergency Equipment Vehicles must be equipped with emergency equipment. Look for:

- Fire extinguisher(s).

- Spare electrical fuses (unless equipped with circuit breakers).
- Warning devices for parked vehicles (for example, three reflective warning triangles).

Cargo (Trucks) You must make sure the truck is not over loaded and the cargo is balanced and secured before each trip. If the cargo contains hazardous materials, you must inspect for proper papers and placarding.

- CDL Pre-trip Vehicle Inspection Test

In order to obtain a CDL you will be required to pass a pre-trip vehicle inspection test. You will be tested to see if you know whether your vehicle is safe to drive. You will be asked to do a pre-trip inspection of your vehicle and explain to the examiner what you would inspect and why. The CDL Skills Test manual tells you what to inspect and how to inspect it. You may use the guides shown in figures 2-5, 2-6 and 2-7 as memory aids when taking your test.

- A 7-Step Inspection Method

Method of inspection You should do a pre-trip inspection the same way each time so you will learn all the steps and be less likely to forget something. The following seven-step procedure should be a useful guide. Guides are shown in Figures 2-5, 2-6 and 2-7.

Approaching the vehicle Notice general condition. Look for damage or vehicle leaning to one side. Look under the vehicle for fresh oil, coolant, grease or fuel leaks. Check the area around the vehicle for hazards to vehicle movement (people, other vehicles, objects, low hanging wires or limbs, etc.)

1: Vehicle Overview

Review last vehicle inspection report Drivers may have to make a vehicle inspection report in writing each day. The motor carrier must repair any items in the report that affects safety and certify on the report that repairs were made or were unnecessary. You must sign the report only if defects were noted and certified to be repaired or not needed to be repaired.

Test Your Knowledge
<ol style="list-style-type: none"> 1. What is the most important reason for doing vehicle inspections? 2. What things should you check during a trip? 3. Name some key steering system parts. 4. Name some suspension system defects. 5. What three kinds of emergency equipment must you have? 6. What is the minimum tread depth for front tires? 7. For other tires?
These questions may be on the test. If you can't answer all of these questions, reread the last four pages.

Vehicle Inspection Guide (Key Locations To Inspect)

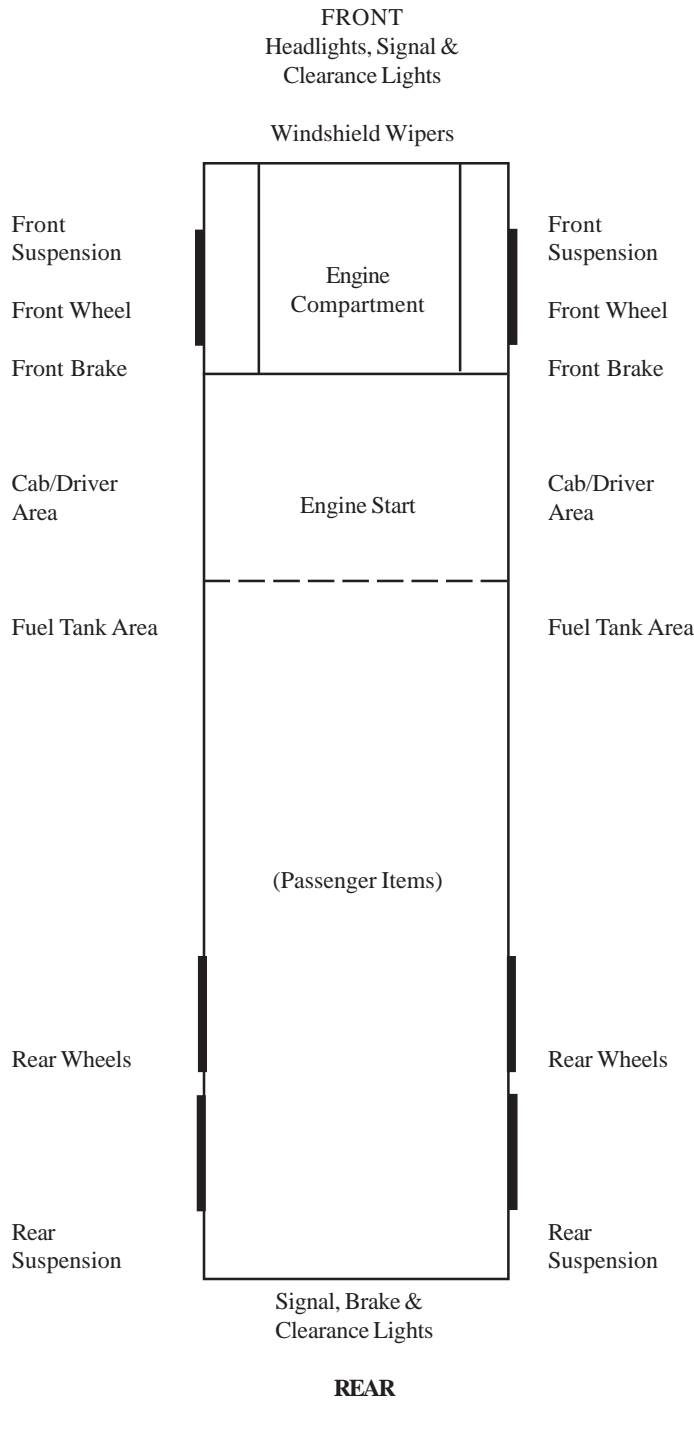


Figure 2-5. Straight Truck/School Bus

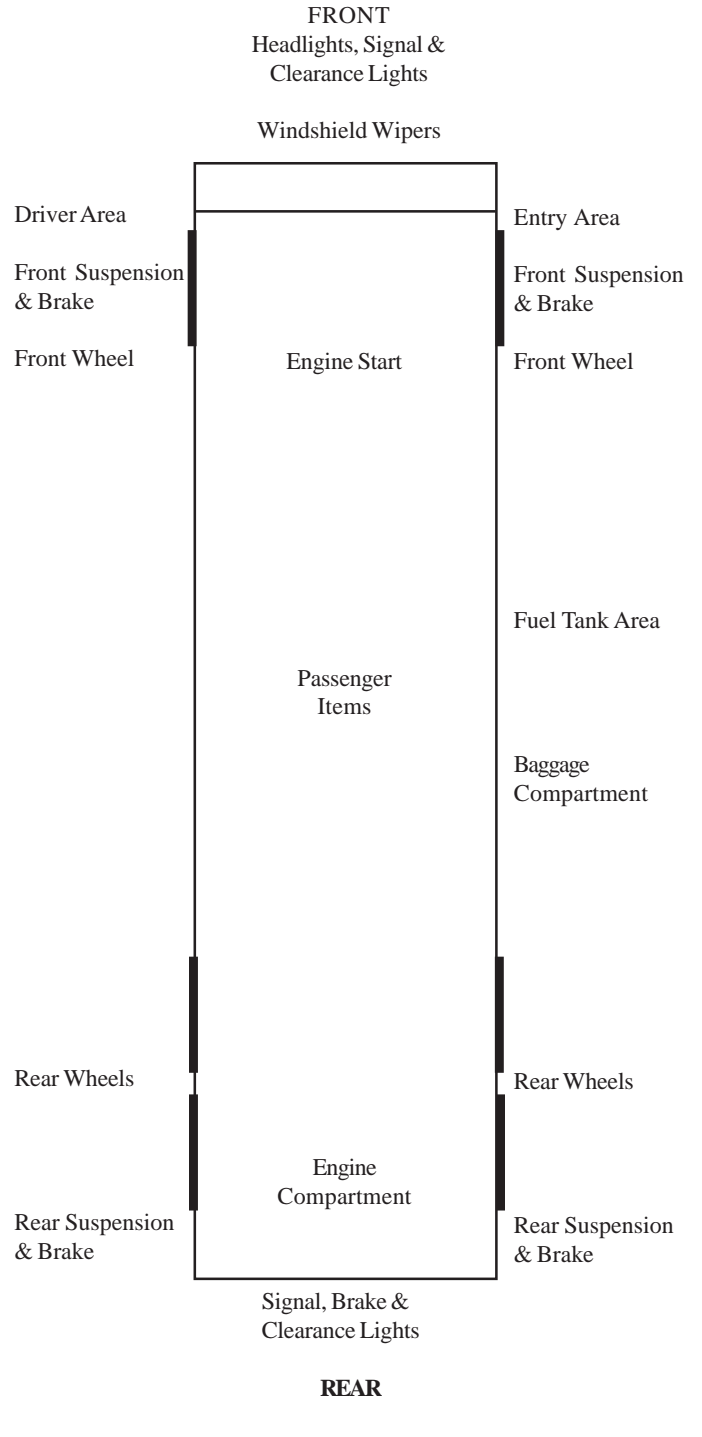


Figure 2-6. Transit Bus

Safety Note: Always put vehicle key in your pocket
- or someone might move the vehicle while you are
checking underneath it.

**Vehicle Inspection Guide
(Key Locations to Inspect)**

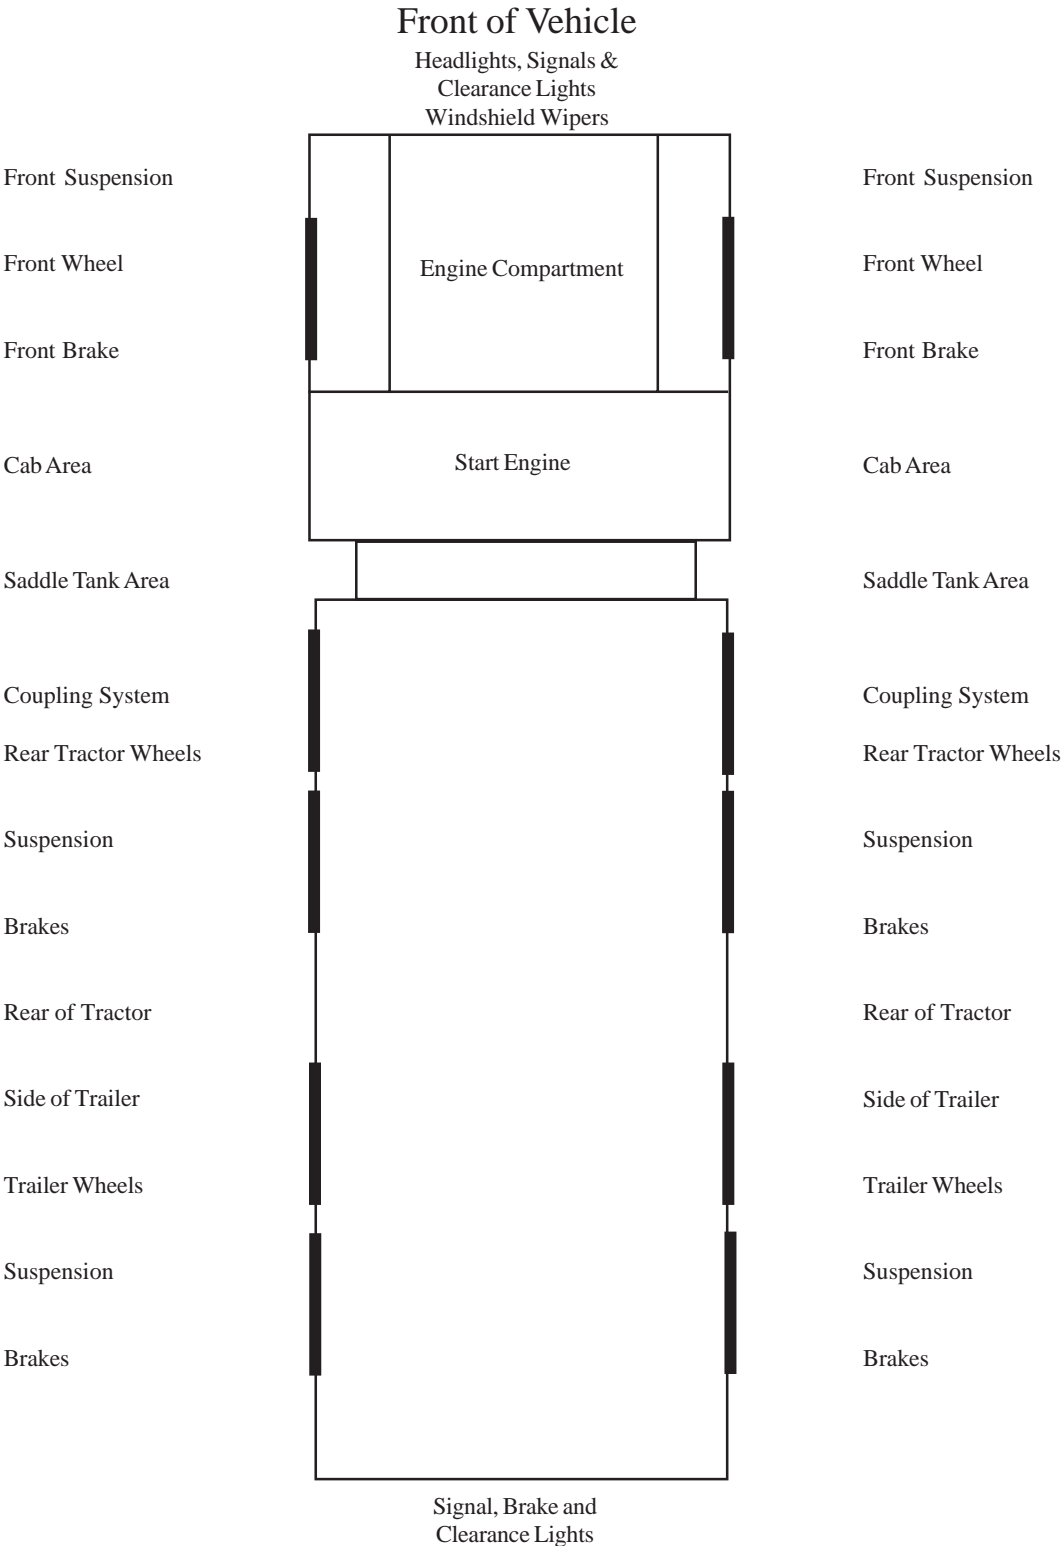


Figure 2-7. Tractor - Trailer

Safety Note: If you are parked on a street, walk around so you are facing the oncoming traffic. Pay attention so you don't get run over.

Check that the parking brakes are on and/or wheels chocked. You will have to raise the hood, or open the engine compartment door. Check the following:

2: Check Engine Compartment

- Engine oil level.
- Coolant level in radiator; condition of hoses.
- Power steering fluid level; hose condition (if so equipped).
- Windshield washer fluid level.
- Battery fluid level, connections and tie downs (battery may be located elsewhere).
- Automatic transmission fluid level (may require engine to be running).
- Check belts for tightness and excessive wear (alternator, water pump, air compressor) -- learn how much “give” the belts should have when adjusted right, and check each one. (1/2 to 3/4 in.)
- Leaks in the engine compartment (fuel, coolant, oil, power steering fluid, hydraulic fluid, battery fluid).
- Cracked, worn electrical wiring insulation.

Lower and secure hood, cab, or engine compartment door.

Get In and Start the Engine

- Make sure parking brake is on.
- Put gearshift in neutral (or “park” if automatic).
- Start engine; listen for unusual noises.

3: Start Engine and Inspect Inside the Cab

Look at the Gauges

- **Oil pressure.** Should come up to normal within seconds after engine is started.
- **Ammeter and/or voltmeter.** Should be in normal range(s).
- **Coolant temperature.** Should begin gradual rise to normal operating range.
- **Engine oil temperature.** Should begin gradual rise to normal operating range.
- **Warning lights and buzzers.** Oil, coolant, charging circuit warning lights should go out right away.

Check Condition of Controls Check all of the following for looseness, sticking, damage, or improper setting:

- Steering wheel.
- Clutch.
- Accelerator (“gas pedal”).
- Brake controls.
 - Foot brake.
 - Trailer brake (if vehicle has one).
 - Parking brake.
 - Retarder controls (if vehicle has them).
- Transmission controls.
- Interaxle differential lock (if vehicle has one).
- Horn(s).
- Windshield wiper/washer.
- Lights.
 - Headlights.
 - Dimmer switch.
 - Turn signal.
 - 4-way flashers.
 - Clearance, identification, marker light switch(s).

Check Mirrors and Windshield Inspect mirrors and windshield for cracks, dirt, illegal stickers or other obstructions to seeing. Clean and adjust as necessary.

Check Emergency Equipment

- Check for safety equipment:
 - Spare electrical fuses (unless vehicle has circuit breakers).
 - Three red reflective triangles.
 - Properly charged and rated fire extinguisher.
- Check for optional items such as:
 - Tire chains (where winter conditions require them).
 - Tire changing equipment.
 - List of emergency phone numbers.
 - Accident reporting kit (packet).

4: Turn off Engine and Check Lights

Make sure the parking brake is set, turn off the engine, and take the key with you. Turn on headlights (low beams) and four-way flashers, and get out.

- Go to front of vehicle and check that low beams are on and both of the four-way flashers are working.
- Push dimmer switch and check that high beams work.
- Turn off headlights and four-way, hazard warning flashers.

- Turn on parking, clearance, side-marker and identification lights.
- Turn on right turn signal, and start walkaround inspection.

General

5: Do Walkaround Inspection

- Walk around and inspect.
- Clean all lights, reflectors and glass as you go along.

Left Front Side

- Driver's door glass should be clean.
- Door latches or locks work properly.
- Left front wheel.
 - Condition of wheel and rim - missing, bent, broken studs, clamps, lugs, any signs of misalignment.
 - Condition of tires - properly inflated, valve stem and cap OK, no serious cuts, bulges, tread wear.
 - Use wrench to test rust-streaked lug nuts, indicating looseness.
 - Hub oil level OK, no leaks.
- Left front suspension.
 - Condition of spring, spring hangers, shackles, u-bolts.
 - Shock absorber condition.
- Left front brake.
 - Condition of brake drum.
 - Condition of hoses.

Front

- Condition of front axle.
- Condition of steering system.
 - No loose, worn, belt, damaged or missing parts.
 - Must grab steering mechanism to test for looseness.
- Condition of windshield.
 - Check for damage and clean if dirty.
 - Check windshield wiper arms for proper spring tension.
 - Check wiper blades for damage, "stiff" rubber, and securement.
- Lights and reflectors.
 - Parking, clearance and identification lights clean, operating and proper color (amber at front).
 - Reflectors clean and proper color (amber at front).
- Right front turn signal light clean, operating, and proper color (amber or white on signals facing forward).

Right Side

- Right front: check all items as done on left front.
- Primary and safety cab locks engaged (if cab-over-engine design).
- Right fuel tank(s).
 - Securely mounted, not damaged or leaking.
 - Fuel crossover line secure.
 - Tank(s) contain enough fuel.
 - Cap(s) on and secure.
- Condition of visible parts.
 - Rear of engine -- not leaking.
 - Transmission -- not leaking.
 - Exhaust system -- secure, not leaking, not touching wires, fuel or airlines.
 - Frame and cross members -- no bends, cracks.
 - Air lines and electrical wiring -- secured against snagging, rubbing, wearing.
 - Spare tire carrier or rack not damaged (if so equipped).
 - Spare tire and/or wheel securely mounted in rack.
 - Spare tire and wheel adequate (proper size, properly inflated).
- Cargo securement (trucks).
 - Cargo properly blocked, braced, tied, chained, etc.
 - Header board adequate, secure (if required).
 - Side boards, stakes strong enough, free of damage, properly set in place (if so equipped).
 - Canvas or tarp (if required) properly secured to prevent tearing, billowing or blocking of mirrors.
 - If oversize, all required signs (flags, lamps, and reflector) must be safely and properly mounted and all required permits in driver's possession.
 - Curbside cargo compartment doors securely closed, latched/locked, required security seals in place.

Right Rear

- Condition of wheels and rims -- no missing, bent, broken spacers, studs, clamps, lugs.
- Condition of tires -- properly inflated, valve stems and caps OK, no serious cuts, bulges, tread wear, tires not rubbing each other and nothing wedged between them.
- Tires same type, e.g., not mixed radial and bias types.
- Tires evenly matched (same sizes).
- Wheel bearing/seals not leaking.

- Suspension.
 - Condition of spring(s), spring hangers, shackles and U-bolts.
 - Axle secure.
 - Powered axle(s) not leaking lube (gear oil).
 - Condition of torque rod arms, bushings.
 - Condition of shock absorber(s).
 - If retractable axle equipped, check condition of lift mechanism.
If air powered, check for leaks.
- Brakes.
 - Brake adjustment.
 - Condition of brake drum(s).
 - Condition of hoses - look for any wear due to rubbing.
- Lights and reflectors.
 - Side-marker lights clean, operating and proper color (red at rear, other amber).
 - Side-marker reflectors clean and proper color (red at rear, others amber).

Rear

- Lights and reflectors.
 - Rear clearance and identification lights clean, operating and proper color (red at rear).
 - Reflectors clean and proper color (red at rear).
 - Taillights clean, operating and proper color (red at rear).
 - Right rear turn signal operating, and proper color (red, yellow, or amber at rear).
- License plate(s) present, clean and secured.
- Splash guards present, not damaged, properly fastened, not dragging on ground or rubbing tires.
- Cargo secure (trucks).
 - Cargo properly blocked, braced, tied, chained, etc.
 - Tailboards up and properly secured.
 - End gates free of damage, properly secured in stake sockets.
 - Canvas or tarp (if required) properly secured to prevent tearing or billowing to block either the rearview mirrors or to cover rear lights.
 - safely and properly mounted and all required permits are in driver's possession.
 - Rear doors securely closed, latched/locked.

Left Side

- Check all items as done on right side, plus:
 - Battery(s) (if not mounted in engine compartment).
 - Battery(s) box securely mounted to vehicle.
 - Box has secure cover.
 - Battery(s) secured against movement.
 - Battery(s) not broken or leaking
 - Fluid in battery(s) at proper level (except maintenance-free type).
 - Cell caps present and securely tightened (except maintenance-free type).
 - Vents in cell caps free of foreign material (except maintenance free type).

6: Check Signal Lights

Get In and Turn Off Lights

- Turn off all lights.
- Turn on stop lights (apply trailer hand brake, or have a helper put on the brake pedal).
- Turn on left turn signal lights.

Get Out and Check Lights

- Left front turn signal light clean, operating and proper color (amber or white on signal facing the front).
- Left turn signal light and both stop lights clean, operating and proper color (red, yellow, or amber).

7: Start the Engine and Check Brake System

Get In Vehicle

- Turn off lights not needed for driving.
- Check for all required papers, trip manifests, permits, etc.
- Secure all loose articles in cab (they might interfere with operation of the controls, or hit you in a crash).
- Start the engine.

Test for Hydraulic Leaks If the vehicle has hydraulic brakes, pump the brake pedal three times. Then apply firm pressure to the pedal and hold for five seconds. The pedal should not move. If it does, there may be a leak or other problems. Get it fixed before driving.

If the vehicle has air brakes, do the checks described in Section 5.

Test Parking Brake

- Fasten seat belt.
- Allow vehicle to move forward slowly.
- Apply parking brake.
- If it doesn't stop vehicle, it is faulty; get fixed.

Test Service Brake Stopping Action

- Go about five miles per hour.
- Push brake pedal firmly.
- "Pulling" to one side or the other can mean brake trouble.
- Any unusual brake pedal "feel" or delayed stopping action can mean trouble.

This completes the pre-trip inspection.

If you find anything unsafe during the pre-trip inspection, get it fixed. Federal and state laws forbid operating an unsafe vehicle.

Check Vehicle Operation Regularly

You should check:

- Instruments.
- Air pressure gauge (if you have air brakes).
- Temperature gauges.
- Ammeter/voltmeter.
- Mirrors.
- Tires.
- Cargo, cargo covers.

- Inspection During a Trip

If you see, hear, smell, or feel anything that might mean trouble, check it out.

Safety Inspection

- Drivers of trucks and truck-tractors when transporting cargo must inspect the securement of the cargo within the first 25 miles of a trip and every 150 miles or every 3 hours (whichever comes first) afterward.
- After-trip Inspection & Report

You may have to make a written report each day on the condition of the vehicle(s) you drove. Report anything affecting safety or possibly leading to mechanical breakdown.

The vehicle inspection report tells the motor carrier about problems that may need fixing. Keep a copy of your report in the vehicle for one day. That way, the next driver can learn about any problems you have found.

Test Your Knowledge

1. Name some things you should check on the front of your vehicle during the walkaround inspection.
2. What should wheel bearing seals be checked for?
3. How many red reflective triangles should you carry?
4. How do you test hydraulic brakes for leaks?
5. Can you bring the “vehicle inspection memory aid” with you to the test?
6. Why put the starter switch key in you pocket during the pre-trip inspection?

These questions may be on the test. If you can’t answer all of these questions, reread about the 7-step inspection method.

2.2 Basic Control of Your Vehicle

To drive a vehicle safely, you must be able to control its speed and direction. Safe operation of a commercial vehicle requires skill in:

- Accelerating.
- Steering.
- Shifting gears.
- Braking.

Fasten your seatbelt when on the road. Apply the parking brake when you leave your vehicle.

Don't roll back when you start. You may hit someone behind you. Partly engage the clutch before you take your right foot off the brake. Put on the parking brake whenever necessary to keep from rolling back. Release the parking brake only when you have applied enough engine power to keep from rolling back. On a tractor-trailer equipped with a trailer brake hand valve, the hand valve can be applied to keep from rolling back.

- Accelerating

Speed up smoothly and gradually so the vehicle does not jerk. Rough acceleration can cause mechanical damage. When pulling a trailer, rough acceleration can damage the coupling.

Speed up very gradually when traction is poor, as in rain or snow. If you use too much power, the drive wheels may spin. You can lose control. If the drive wheels begin to spin, take your foot off the accelerator.

Hold the wheel properly. Hold the steering wheel firmly with both hands. Your hands should be at 3 and 9 o'clock positions on the wheel. If you hit a curb or a pothole (chuckhole), the wheel could pull away from your hands unless you have a firm hold.

- Steering

Because you cannot see everything behind your vehicle, **backing is always dangerous**. Avoid backing whenever you can. When you park, try to park so you will be able to pull forward when you leave. When you have to back, here are a few simple safety rules:

- Backing Safely

- Look at your path.
- Back slowly.
- Back the turn toward the driver's side whenever possible.
- Use a helper whenever possible.

These rules are explained in turn below.

Look at your path. Look at your line of travel before you begin. Get out and walk around the vehicle. Check your clearance to the sides and over head in and near the path your vehicle will take.

Back slowly. Always back as slowly as possible. Use the lowest reverse gear. That way you can more easily correct any steering errors. You also can stop quickly if necessary.

Back and turn toward the driver's side. Back to the driver's side so you can see better. Backing toward the right side is very dangerous because you can't see as well. If you back and turn toward the driver's side, you can watch the rear of your vehicle by looking out the side window. Use driver-side backing -- even if it means going around the block to put your vehicle in this position. The added safety is worth it.

Use a helper. Use a helper when you can. There are blind spots you can't see. That's why a helper is important.

The helper should stand near the back of your vehicle where you can see the helper. Before you begin backing, work out a set of hand signals that you both understand. Agree on a signal for “stop”.

- Backing with a Trailer

Backing with a trailer. When backing a car, straight truck or bus, you turn the top of the steering wheel toward the direction you want to go. When backing a trailer, you turn the steering wheel in the opposite direction. Once the trailer starts to turn, you must turn the wheel the other way to follow the trailer.

When you back with a trailer, try to position your vehicle so you can back in a straight line. If you must back on a curved path, back toward the driver’s side so you can see.

Back slowly. This will let you make corrections before you get too far off course.

Use the mirrors. The mirrors will help you see whether the trailer is drifting to one side or the other.

Correct drift immediately. As soon as you see the trailer getting off the proper path, correct it by turning the top of the steering wheel in the direction of the drift.

Pull forward. When backing a trailer, make pull-ups to reposition your vehicle as needed.

Test Your Knowledge
<ol style="list-style-type: none">1. Why should you back toward the driver’s side?2. What is a pull-up?3. If stopped on a hill, how can you start moving without rolling back?4. When backing, why is it important to use a helper?5. What’s the most important hand signal that you and the helper should agree on?
These questions may be on the test. If you can’t answer them all, reread 2.2 Basic Control of Your Vehicle.

2.3. Shifting Gears

Correct shifting of gears is important. If you can’t get your vehicle into the right gear while driving, you will have less control.

- Manual Transmissions

Basic method for shifting up. Most heavy vehicles with manual transmissions require double clutching to change gears. This is the basic method:

1. Release accelerator, push in clutch and shift to neutral at the same time.
2. Release clutch.
3. Let engine and gears **slow down** to the RPM required for the next gear (this takes practice).

4. Push in clutch and shift to the higher gear at the same time.
5. Release clutch and press accelerator at the same time.

Shifting gears using double clutching requires practice. If you remain too long in neutral, you may have difficulty putting the vehicle into the next gear. If so, don't try to force it. Return to neutral, release clutch, increase engine speed to match road speed, and try again.

Knowing when to shift up. There are two ways of knowing when to shift:

Use engine speed (rpm). Study the driver's manual for your vehicle and learn the operating RPM range. Watch your tachometer, and shift up when your engine reaches the top of the range. (Some newer vehicles use "progressive" shifting: the RPM at which you shift becomes higher as you move up in the gears. Find out what's right for the vehicles you will operate).

Use road speed (mph). Learn what speeds each gear is good for. Then, by using the speedometer, you'll know when to shift up.

With either method, you may learn to use engine sounds to know when to shift.

Basic Procedures for Shifting Down

1. Release accelerator, push in clutch and shift to neutral at the same time.
2. Release clutch.
3. Press accelerator, increase engine and gear speed to the RPM required in the lower gear.
4. Push in clutch and shift to lower gear at the same time.
5. Release clutch and press accelerator at the same time.

Downshifting, like upshifting, requires knowing when to shift. Use either the tachometer or the speedometer and downshift at the right RPM or road speed.

Special conditions where you should downshift are:

Before starting down a hill. Slow down and shift down to a speed that you can control without using the brakes hard. Otherwise the brakes can overheat and lose their braking power. Downshift before starting down the hill. Make sure you are in a low enough gear, usually lower than the gear required to climb the same hill.

Before entering a curve. Slow down to a safe speed, and downshift to the correct gear before entering the curve. This lets you use some power through the curve to help the vehicle be more stable while turning. It also lets you speed up as soon as you are out of the curve.

- **Multi-Speed Rear Axles and Auxiliary Transmissions** Multi-speed rear axles and auxiliary transmissions are used on many vehicles to provide extra gears. You usually control them by a selector knob or switch on the gearshift lever of the main transmission. There are many different shift patterns. Learn the right way to shift gears in the vehicle you will drive.
 - **Automatic Transmissions** Some vehicles have automatic transmissions. You can select a low range to get greater engine braking when going down grades. The lower ranges prevent the transmission from shifting up beyond the selected gear (unless the governor rpm is exceeded). It is very important to use this braking effect when going down grades.
 - **Retarders** Some vehicles have “retarders.” Retarders help slow a vehicle, reducing the need for using your brakes. They reduce brake wear and give you another way to slow down. There are many types of retarders (exhaust, engine, hydraulic, electric). All retarders can be adjusted. When turned “on,” retarders apply their braking power (to the drive wheels only) whenever you let up on the accelerator pedal all the way.
- Caution:** When your drive wheels have poor traction, the retarder may cause them to skid. Therefore, you should turn the retarder off when the road is wet, icy or snow covered.

Test Your Knowledge
<ol style="list-style-type: none"> 1. What are the two special conditions where you should downshift? 2. When should you downshift automatic transmissions? 3. Retarders keep you from skidding when the road is slippery. True or False? 4. What are the two ways to know when to shift?
These questions may be on the test. If you can't answer all, reread Sections 2.3: Shifting Gears.

2.4 Seeing

- **Seeing Ahead**

To be a safe driver you need to know what's going on all around your vehicle. Not looking properly is a major cause of accidents.

All drivers look ahead; but many don't look far enough ahead.

Importance of looking far enough ahead. Because stopping or changing lanes can take a lot of distance, knowing what the traffic is doing on all sides of you is very important. You need to look well ahead to make sure you have room to make these moves safely.

How far ahead to Look. Most good drivers look 12 to 15 seconds ahead. That means looking ahead the distance you will travel in 12 to 15 seconds. At lower speeds, that's about one block. At highway speeds it's about a quarter of a mile. If you're not looking that far ahead, you may have to stop too quickly or make a quick lane change. Looking 12 to 15 seconds ahead doesn't mean not paying attention to things that are closer. Good drivers shift their attention back and forth, near and far.

Look for traffic. Look for vehicles coming onto the highway, into your lane or turning. Watch for brake lights from slowing vehicles. By seeing these things far enough ahead, you can change your speed or change lanes if necessary to avoid a problem.

Look for road conditions. Look for hills and curves -- anything you'll have to slow or change lanes for. Pay attention to traffic signals and signs. If a light has been green for a long time, it will probably change before you get there. Start slowing down and be ready to stop. Traffic signs may alert you to road conditions where you may have to change speed.

It's important to know what's going on behind and to the sides. Check your mirrors regularly. Check more often in special situations.

- Seeing to the Sides and Rear

Mirror adjustment. Mirror adjustment should be checked prior to the start of any trip and can only be checked accurately when the trailer(s) are straight. You should check and adjust each mirror as needed.

Regular checks. You need to make regular checks of your mirrors to be aware of traffic and to check your vehicle.

Traffic. Check the mirrors for vehicles on either side and in back of you. In an emergency, you may need to know whether you can make a quick lane change. Use your mirrors to spot overtaking vehicles. There are "blind spots" that your mirrors cannot show you. Check your mirrors regularly to know where other vehicles are around you, and to see if they move into your blind spots.

Check your vehicle. Use the mirrors to keep an eye on your tires. It's one way to spot a tire fire. If you're carrying open cargo, you can use the mirrors to check it. Look for loose straps, ropes or chains. Watch for a flapping or ballooning tarp.

Special situations. Special situations require more than regular mirror checks. These are lane changes, turns, merges, and tight maneuvers.

Lane changes. You need to check your mirror to make sure no one is alongside you or about to pass you. Check your mirrors:

- Before you change lanes to make sure there is enough room.
- After you have signaled to check that no one has moved into your blind spot.
- Right after you start the lane change to double-check that your path is clear.
- After you complete the lane change.

Turns. In turns, check your mirrors to make sure the rear of your vehicle will not hit anything.

Merges. When merging, use your mirrors to make sure the gap in traffic is large enough for you to enter safely.

Tight maneuvers. Any time you are driving in close quarters check your mirrors often. Make sure you have enough clearance.

How to use mirrors. Use mirrors correctly by checking them quickly and understanding what you see.

Checking quickly. When you use your mirrors while driving on the road, check quickly. Look back and forth between the mirrors and the road ahead. Don't focus on the mirrors for too long. Otherwise, you will travel quite a distance without knowing what's happening ahead.

Understanding what you see. Many large vehicles have curved (convex, "fisheye," "spot," "bugeye") mirrors that show a wider area than flat mirrors. This is often helpful. But everything appears smaller in a convex mirror than it would if you were looking at it directly. Things also seem farther away than they really are. It's important to realize this and to allow for it.

2.5 Communicating

- Signal Your Intentions

Other drivers can't know what you are going to do until you tell them.

Signaling what you intend to do is important for safety. Here are some general rules for signaling.

Turns. There are three good rules for using turn signals:

1. Signal early. Signal well before you turn. It is the way to keep others from trying to pass you.
2. Signal continuously. You need both hands on the wheel to turn safely. Don't cancel the signal until you have completed the turn.
3. Cancel your signal. Don't forget to turn off your turn signal after you've turned (if you don't have self-canceling signals).

Lane changes. Put your turn signal on before changing lanes. Change lanes slowly and smoothly. That way a driver you didn't see may have a chance to honk his/her horn or avoid your vehicle.

Slowing down. Warn drivers behind you when you see you'll need to slow down. A few light taps on the brake pedal -- enough to flash the brake lights -- should warn following drivers. Use the 4-way emergency flashers for times when you are driving very slow or are stopped. Warn other drivers in any of the following situations:

Trouble ahead. The size of your vehicle may make it hard for drivers behind you to see hazards ahead. If you see a hazard that will require slowing down, warn the drivers behind by flashing your brake lights.

Tight turns. Most car drivers don't know how slow you have to go to make a tight turn in a large vehicle. Give drivers behind you warning by braking early and slowing gradually.

Stopping on the road. Truck and bus drivers sometimes stop in the road to unload cargo or passengers or to stop at a railroad crossing. Warn following drivers by flashing your brake lights. Don't stop suddenly.

Driving slowly. Drivers often do not realize how fast they are catching up to a slow vehicle until they are very close. If you must drive slowly, alert following drivers by turning on your emergency flashers if it is legal. (Laws regarding the use of flashers differ from one state to another. Check the laws of the states where you will drive.)

Don't direct traffic. Some drivers try to help out others by signaling when it is safe to pass. You should not do this. You could cause an accident. You could be blamed and it could cost you many thousands of dollars.

Other drivers may not notice your vehicle even when it's in plain sight. Let them know you're there to help prevent accidents.

When passing. Whenever you are about to pass a vehicle, pedestrian, or bicyclist, assume they don't see you. They could suddenly move in front of you. When it is legal, tap the horn lightly or, at night, flash your lights from low to high beam and back. Drive carefully enough to avoid a crash even if they don't see or hear you.

When it's hard to see. At dawn or dusk or in rain or snow, you need to make yourself easier to see. If you are having trouble seeing other vehicles, other drivers will have trouble seeing you. Turn on your lights. Use the headlights, not just the identification or clearance lights. Use the low beams; high beams can bother people in the daytime as well as at night.

When parked at the side of the road. When you pull off the road and stop, be sure to turn on the 4-way emergency flashers. This is important at night. Don't trust the taillights to give warning. Drivers have crashed into the rear of a parked vehicle because they thought it was moving normally.

If you must stop on a road or the shoulder of any road, you must put out your emergency warning devices within ten minutes. Place your warning devices at the following locations:

- If you stop on a 2-lane road carrying traffic in both directions or on an undivided highway, place warning devices within ten feet of the front or rear corners to mark the location of the vehicle and 100 feet behind and ahead of the vehicle, on the shoulder or in the lane you stopped in. (See Figure 2-8.)
- Back beyond any hill, curve, or other obstructions that prevents other drivers from seeing the vehicle within 500 feet. (See Figure 2-9.)
- If you must stop on or by a one-way or divided highway, place warning devices 10 feet, 100 feet, and 200 feet toward the approaching traffic. (See Figure 2-10.)

- Communicating Your Presence

When putting out the triangles, hold them between yourself and the oncoming traffic for your own safety. (So other drivers can see you.)

Use your horn when needed. Your horn can let others know you're there. It can help to avoid a crash. Use your horn when needed. However, it can startle others and could be dangerous when used unnecessarily.

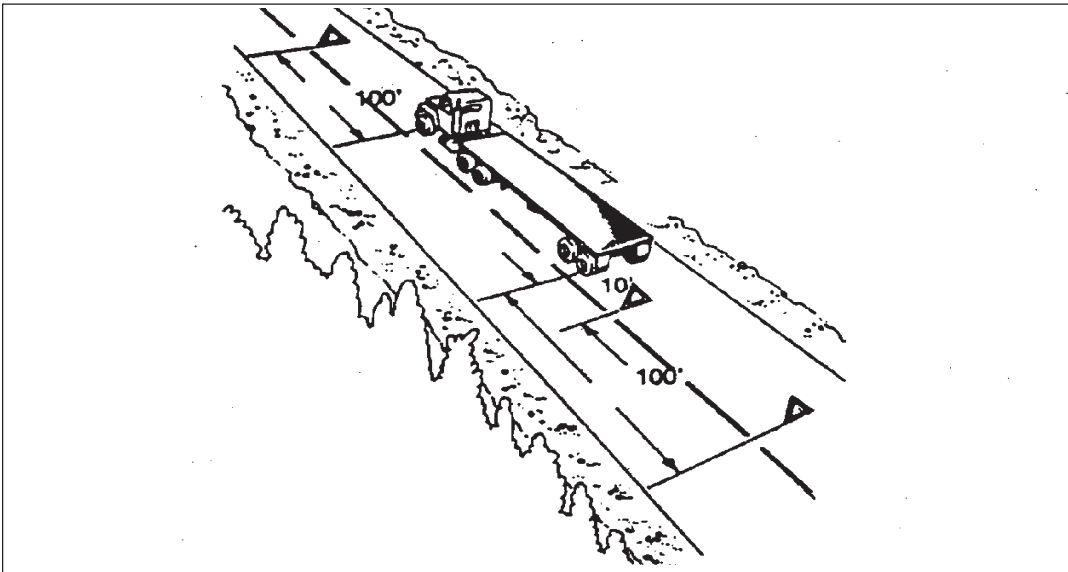


Figure 2-8

Warning Device Placement
Two Lane (traffic in both
directions) or Undivided
Highway

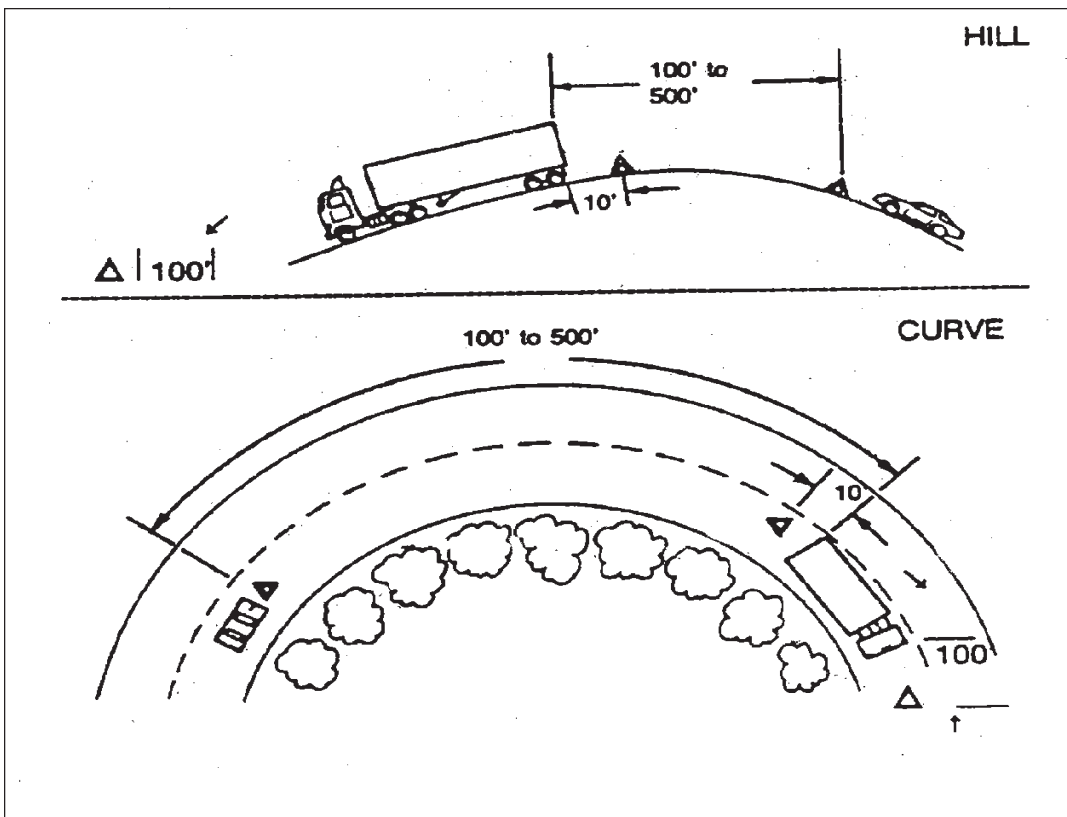


Figure 2-9

Warning Device Placement
Obstructed View

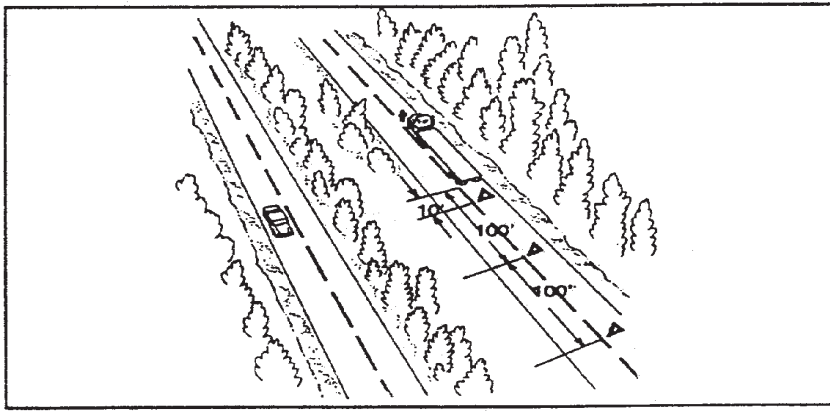


Figure 2-10

Warning Device Placement:
One Way or Divided Highway

Driving too fast is a major cause of fatal crashes. You must adjust your speed depending on driving conditions. These include traction, curves, visibility, traffic, and hills.

There are three things that add up to total stopping distance:

$$\begin{array}{r}
 \text{Perception Distance} \\
 + \text{Reaction Distance} \\
 + \text{Braking Distance} \\
 \hline
 = \text{Total Stopping Distance}
 \end{array}$$

- **Perception distance.** This is the distance your vehicle travels from the time your eyes see a hazard until your brain recognizes it. The perception time for an alert driver is about 3/4 second. (At 55 mph, you travel 60 feet in 3/4 second.)
- **Reaction distance.** The distance traveled from the time your brain tells your foot to move from the accelerator until your foot is actually pushing the brake pedal. The average driver has a reaction time of 3/4 second. (This accounts for an additional 60 feet traveled at 55 mph.)
- **Braking distance.** The distance it takes to stop once the brakes are put on. At 55 mph on dry pavement with good brakes it can take a heavy vehicle about 170 feet to stop. It takes about 4 1/2 seconds.
- **Total stopping distance.** At 55 mph it will take about 6 seconds to stop and your vehicle will travel about the distance of a football field. (60 + 60 + 170 = 290 feet).

2.6 Controlling Speed

- Speed and Stopping Distances

The effect of speed on stopping distance. Whenever you double your speed, it takes about four times as much distance to stop and your vehicle will have four times the destructive power if it crashes. High speeds increase stopping distances greatly. By slowing down a little, you can gain a lot in reduced braking distance.

The effect of vehicle weight on stopping distance. The heavier the vehicle, the more work the brakes must do to stop it and the more heat they absorb. But the brakes, tires, springs, and shock absorbers on heavy vehicles are designed to work best when the vehicle is fully loaded. **Empty** trucks require **greater** stopping distances, because an empty vehicle has less traction. It can bounce and lock up its wheels, giving much poorer braking. (This is not usually the case with buses.)

- Matching Speed to the Road Surface

You can't steer or brake a vehicle unless you have traction. Traction is friction between the tires and the road. There are some road conditions that reduce traction and call for lower speeds.

Slippery surfaces. It will take longer to stop and it will be harder to turn without skidding when the road is slippery. You must drive slower to be able to stop in the same distance as on a dry road. Wet roads can double stopping distance. Reduce speed by about one-third (e.g., slow from 55 to about 35 mph) on a wet road. On packed snow, reduce speed by a half, or more. If the surface is icy, reduce speed to a crawl and stop driving as soon as you can safely do so.

Identifying slippery surfaces. Sometimes it's hard to know if the road is slippery. Here are some signs of slippery roads:

Shaded areas. Shady parts of the road will remain icy and slippery long after open areas have melted.

Bridges. When the temperature drops, bridges will freeze before the road will. Be especially careful when the temperature is close to 32 degrees F.

Melting ice. Slight melting will make ice wet. Wet ice is much more slippery than ice that is not wet.

Black ice. Black ice is a thin layer that is clear enough that you can see the road underneath it. It makes the road look wet. Any time the temperature is below freezing and the road looks wet, watch out for black ice.

Vehicle icing. An easy way to check for ice is to open the window and feel the front of the mirror, mirror support, or antenna. If there's ice on these, the road surface is probably starting to ice up.

Just after rain begins. Right after it starts to rain, the water mixes with oil left on the road by vehicles. This makes the road very slippery. If the rain continues, it will wash the oil away.

Hydroplaning. In some weather, water or slush collects on the road. When this happens, your vehicle can hydroplane. It's like water skiing: the tires lose their contact with the road and have little or no traction. You may not be able to steer or brake. You can regain control by releasing the accelerator and pushing in the clutch. This will slow your vehicle and let the wheels turn freely. If the vehicle is hydroplaning, do not use the brakes to slow down. If the drive wheels start to skid, push in the clutch to let them turn freely.

It does not take a lot of water to cause hydroplaning. Hydroplaning can occur at speeds as low as 30 mph if there is a lot of water. Hydroplaning is more likely if tire pressure is low or the tread is worn. (The grooves in a tire carry away the water; if they aren't deep, they don't work well). Be especially careful driving through puddles. The water is often deep enough to cause hydroplaning.

Drivers must adjust their speed for curves in the road. If you take a curve too fast, two things can happen. The tires can lose their traction and continue straight ahead, so you skid off the road. Or, the tires may keep their traction and the vehicle rolls over. Tests have shown that trucks with a high center of gravity can roll over at the posted speed limit for a curve.

- Speed and Curves

Slow to a safe speed before you enter a curve. Braking in a curve is dangerous because it is easier to lock the wheels and cause a skid. Slow down as needed. Don't ever exceed the posted speed limit for the curve. Be in a gear that will let you accelerate slightly in the curve. This will help you keep control.

You should always be able to stop within the distance you can see ahead. Fog, rain or other conditions may require that you slow down to be able to stop in the distance you can see. At night, you can't see as far with low beams as you can with high beams. When you must use low beams, slow down.

- Speed and Distance Ahead

When you're driving in heavy traffic, the safest speed is the speed of other vehicles. Vehicles going the same direction at the same speed are not likely to run into one another. Drive at the speed of the traffic if you can, without going at an illegal or unsafe speed. Keep a safe following distance.

- Speed and Traffic Flow

The main reason drivers exceed speed limits is to save time. But anyone trying to drive faster than the speed of traffic will not be able to save much time. The risks involved are not worth it. If you go faster than the speed of other traffic, you'll have to keep passing other vehicles. This increases the chance of a crash, and it is more tiring. Fatigue increases the chance of a crash. Going with the flow of traffic is safer and easier.

Your vehicle's speed will increase on downgrades because of gravity. Your most important objective is to select and maintain a speed that is not too fast for the:

- Speed on Downgrades

- Total weight of the vehicle and cargo.
- Length of the grade.
- Steepness of the grade.
- Road conditions.
- Weather.

If a speed limit is posted, or there is a sign indicating “Maximum Safe Speed,” never exceed the speed shown. Also look for the warning sign indicating the length and steepness of the grade. You must use the braking effect of the engine as the principal way of controlling your speed on downgrades. The braking effect of the engine is greatest when it is near the governed RPMs and the transmission is in the lower gears. Save your brakes so you will be able to slow or stop as required by road and traffic conditions. Shift your transmission to a low gear before starting down the grade and use the proper braking techniques. Please read carefully the section on going down long steep downgrades safely in “Mountain Driving”.

Test Your Knowledge
<ol style="list-style-type: none"> 1. How far ahead does the manual say you should look? 2. What are two main things to look for ahead? 3. What’s your most important way to see the sides and rear? 4. What does “communicating” mean in safe driving? 5. Where should your reflectors be placed when stopped on a divided highway? 6. What three things add up to total stopping distance? 7. If you go twice as fast, will your stopping distance increase by twice or four times? 8. Empty trucks have the best braking. True or False? 9. What is hydroplaning? 10. What is “black ice”?
These questions may be on the test. If you can’t answer them all, reread Sections 2.4, 2.5 and 2.6.

2.7 Managing Space

To be a safe driver, you need space all around your vehicle. When things go wrong, space gives you time to think and to take action.

To have space available when something goes wrong, you need to manage space. While this is true for all drivers, it is very important for large vehicles. They take up more space and they require more space for stopping and turning.

- Space Ahead

Of all the space around your vehicle, it is the area ahead of the vehicle -- the space you’re driving into -- that is most important.

The need for space ahead. You need space ahead in case you must suddenly stop. According to accident reports, the vehicle that trucks and buses most often run into is the one in front of them. The most frequent cause is following too closely. Remember, if the vehicle ahead of you is smaller than yours, it can probably stop faster than you can. You may crash if you are following too closely.

How much space? How much space should you keep in front of you? One good rule says you need at least one second for each 10 feet of vehicle length at speeds below 40 mph. At greater speeds, you must add one second for safety. For example, if you are driving a 40-foot vehicle, you should leave four seconds between you and the vehicle ahead. In a 60-foot rig, you’ll need six seconds. Over 40 mph, you’ll need five seconds for a 40-foot vehicle and seven seconds for a 60-foot vehicle.

To know how much space you have, wait until the vehicle ahead passes a shadow on the road, a pavement marking, or some other clear landmark. Then count off the seconds like this: “one thousand-one, one thousand-and-two” and so on, until you reach the same spot. Compare your count with the rule of one second for every 10 feet of length. If you are driving a 40 foot truck and only counted up to 2 seconds, you’re too close. Drive back a little and count again until you have 4 seconds of following distance (or 5 seconds, if you’re going over 40 mph). After a little practice, you will know how far back you should be. Remember that when the road is slippery, you need much more space to stop.

You can’t stop others from following you too closely. But there are things you can do to make it safer.

- Space Behind

Stay to the Right. Heavy vehicles are often tailgated when they can’t keep up with the speed of traffic. This often happens when you’re going uphill. If a heavy load is slowing you down, stay in the right lane if you can. Going uphill, you should not pass another slow vehicle unless you can get around quickly and safely.

Dealing with Tailgater Safety. In a large vehicle, it’s often hard to see whether a vehicle is close behind you. You may be tailgated:

- When you are traveling slowly. Drivers trapped behind slow vehicles often follow closely.
- In bad weather. Many car drivers follow large vehicles closely during bad weather, especially when it is hard to see the road ahead.

If you find yourself being tailgated, here are some things you can do to reduce the chances of a crash:

- Avoid quick changes. If you have to slow down or turn, signal early and reduce speed very gradually.
- Increase your following distance. Opening up room in front of you will help you to avoid having to make sudden speed or direction changes. It also makes it easier for the tailgater to get around you.
- Don’t speed up. It’s safer to be tailgated at a low speed than a high speed.
- Avoid tricks. Don’t turn on your tail lights or flash your brake lights. Follow the suggestions above.

Commercial vehicles are often wide and take up most of a lane. Safe drivers will manage what little space they have. You can do this by keeping your vehicle centered in your lane, and avoid driving alongside others.

Staying Centered in a Lane. You need to keep your vehicle centered in the lane to keep safe clearance on either side. If your vehicle is wide, you have little room to spare.

- Space to the Sides

Traveling Next to Others. There are two dangers in traveling alongside other vehicles:

- Another driver may change lanes suddenly and turn into you.
- You may be trapped when you need to change lanes.

Find an open spot where you aren't near other traffic. When traffic is heavy, it may be hard to find an open spot. If you must travel near other vehicles, try to keep as much space as possible between you and them. Also, drop back or pull forward so that you are sure the other driver can see you.

Strong Winds. Strong winds make it difficult to stay in your lane. The problem is usually worse for lighter vehicles. This problem can be especially bad coming out of tunnels. Don't drive alongside others if you can avoid it.

- Space Overhead

Hitting overhead objects is a danger. Make sure you always have overhead clearance.

- Don't assume that the heights posted at bridges and overpasses are correct. Repaving or packed snow may have reduced the clearances since the heights were posted.
- The weight of a cargo van changes its height. An empty van is higher than a loaded one. That you got under a bridge when you were loaded does not mean that you can do it when you are empty.
- If you doubt you have safe space to pass under an object, go slowly. If you aren't sure you can make it, take another route. Warnings are often posted on low bridges or underpasses, but sometimes they are not.
- Some roads can cause a vehicle to tilt. There can be a problem clearing objects along the edge of the road, such as signs, trees or bridge supports. Where this is a problem, drive a little closer to the center of the road.
- Before you back into an area, get out and check for overhanging objects, such as trees, branches or electric wires. It's easy to miss seeing them while you are backing. (Also check for other hazards at the same time.)

- Space Below

Many drivers forget about the space under their vehicles. That space can be very small when a vehicle is heavily loaded. Railroad tracks can stick up several inches. This is often a problem on dirt roads and in unpaved yards where the surface around the tracks can wear away. Don't take a chance on getting hung up halfway across. Drainage channels across roads can cause the end of some vehicles to drag. Cross such depressions carefully.

The space around a truck or bus is important in turns. Because of wide turning and offtracking, large vehicles can hit other vehicles or objects during turns.

- Space for Turns

Right Turns. Here are some rules to help prevent right-turn crashes:

- Turn slowly to give yourself and others more time to avoid problems.
- If you are driving a truck or bus that cannot make the right turn without swinging into another lane, turn wide as you complete the turn, as shown in Figure 2-11. Keep the rear of your vehicle close to the curb. This will stop other drivers from passing you on the right.
- Don't turn wide to the left as you start the turn, as shown in Figure 2-12. A following driver may think you are turning left and try to pass you on the right. You may crash into the other vehicle as you complete your turn.
- If you must cross into the oncoming lane to make a turn, watch out for vehicles coming toward you. Give them room to go by or to stop. However, don't back up for them, because you might hit someone behind you.

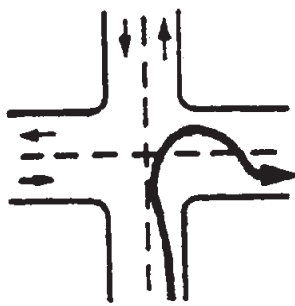


Figure 2-11

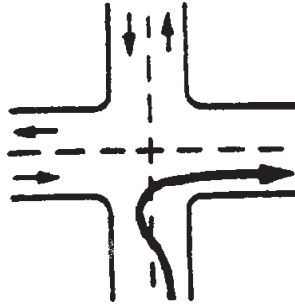


Figure 2-12

Left Turns On a left turn, make sure you have reached the center of the intersection before you start the left turn. If you turn too soon, offtracking may cause the left side of your vehicle to hit another vehicle.

If there are two turning lanes, always take the right-hand turn lane, as shown in Figure 2-13. Don't start in the inside lane because you may have to swing right to make the turn. Drivers on your left can be more readily seen.


Be aware of the size and weight of your vehicle when you cross or enter traffic. Here are some important things to keep in mind:

- Because of slow acceleration and the space large vehicles require, you may need a much larger gap to enter traffic than you would in a car.
- Acceleration varies with the load. Allow more room if your vehicle is heavily loaded.
- Before you start across a road, make sure you can get all the way across before traffic reaches you.

- Space Needed to Cross or Enter Traffic

Figure 2-13

If there are two left turn lanes, use the right-hand lane.

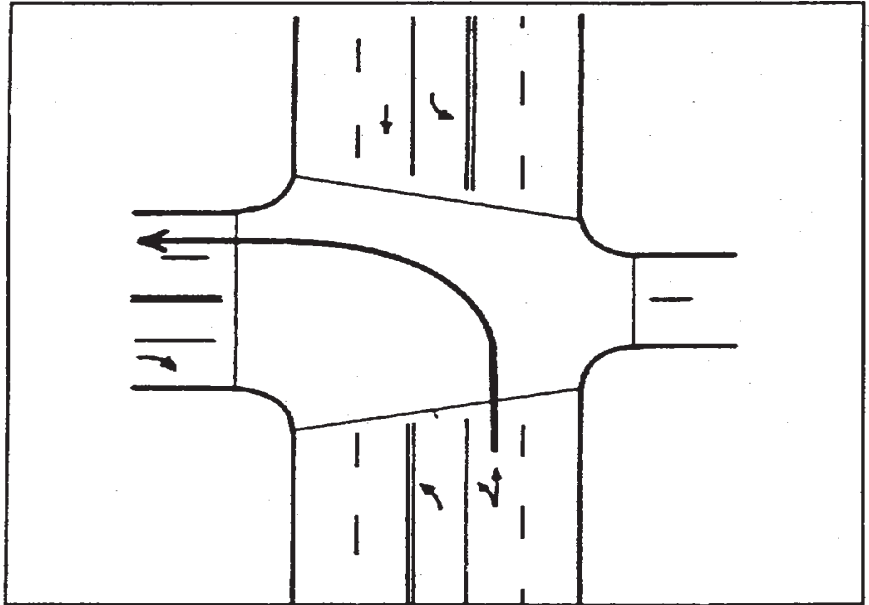

Test Your Knowledge

1. How do you find out how many seconds of following distance space you have?
2. If you are driving a 30 foot vehicle at 55 m.p.h., how many seconds of following distance should you allow?
3. You should decrease your following distance if somebody is following you too closely. True or False?
4. If you swing wide to the left before turning right, another driver may try to pass you on the right. True or False?

These questions may be on the test. If you can't answer them all, reread Section 2.7: Managing Space.

2.8 Driving at Night

- It's More Dangerous

You are at greater risk when you drive at night. Drivers can't see hazards as soon as in daylight, so they have less time to respond. Drivers caught by surprise are less able to avoid a crash.

The problems of night driving involve the driver, the roadway, and the vehicle. We will explain each of these factors.

- Driver Factors

Vision. People can't see as sharply at night or in dim light. Also, the eyes need time to adjust to seeing in dim light. Most people have noticed this when walking into a dark movie theater.

Glare. Drivers can be blinded for a short time by bright light. It takes time to recover from this blindness. Older drivers are especially bothered by glare. Most people have been temporarily blinded by camera flash units or by the high beams of an oncoming vehicle. It can take several seconds to recover from glare. Even two seconds of glare blindness can be dangerous. A vehicle going 55 mph will travel more than half the distance of a football field during that time. Don't look directly at bright lights when driving. Look to the right side of the road. Watch the sidelines when someone coming toward you has very bright lights.

Fatigue and lack of alertness. Fatigue (being tired) and lack of alertness are bigger problems at night. The body's need for sleep is beyond a person's control. Most people are less alert at night, especially after midnight. This is particularly true if you have been driving for a long time. Drivers may not see hazards as soon or react as quickly, so the chance of a crash is greater. If you are sleepy, the only safe cure is to get off the road and get some sleep. If you don't, you risk your life and the lives of others.

Poor lighting. In the daytime there is usually enough light to see well. This is not true at night. Some areas may have bright street lights, but many areas will have poor lighting. On most roads you will probably have to depend entirely on your headlights.

Less light means you will not be able to see hazards as well as in daytime. Road users who do not have lights are hard to see. There are many accidents at night involving pedestrians, joggers, bicyclists, and animals.

Even when there are lights, the road scene can be confusing. Traffic signals and hazards can be hard to see against a background of signs, shop windows, and other lights.

Drive slower when lighting is poor or confusing. Drive slowly enough to be sure you can stop in the distance you can see ahead.

Drunk drivers. Drunk drivers and drivers under the influence of drugs are a hazard to themselves and to you. Be especially alert around the closing times for bars and taverns. Watch for drivers who have trouble staying in their lane or maintaining speed, stop without reason, or show other signs of being under the influence of alcohol or drugs.

Headlights. At night your headlights will usually be the main source of light for you to see and for others to see you. You can't see nearly as much with your headlights as you can see in the daytime. With low beams you can see ahead about 250 feet and with high beams about 350-500 feet. You must adjust your speed to keep your stopping distance within your sight distance. This means going slowly enough to be able to stop within the range of your headlights. Otherwise, by the time you see a hazard, you may not have time to stop.

Night driving can be more dangerous if you have problems with your headlights. Dirty headlights may give only half the light they should. This cuts down your ability to see, and makes it harder for others to see you. Make sure your lights are clean and working. Headlights can be out of adjustment. If they don't point in the right direction, they don't give you a good view and they can blind other drivers. Have a qualified person make sure they are adjusted properly.

- Roadway Factors

- Vehicle Factors

Other lights. In order for you to be seen easily, the following must be clean and working properly:

- Reflectors.
- Marker lights.
- Clearance lights.
- Taillights.
- Identification lights.

Turn signals and brake lights. At night your turn signals and brake lights are even more important for telling other drivers what you intend to do. Make sure you have clean, working turn signals and brake lights.

Windshields and mirrors. It is more important at night than in the daytime to have clean windshields and mirrors. Bright lights at night can cause dirt on your windshield or mirrors to create a glare of its own, blocking your view. Most people have experienced driving toward the sun just as it has risen or is about to set and found that they can barely see through a windshield that seemed to look okay in the middle of the day. Clean your windshield on the inside and outside for safe driving at night.

Pre-Trip procedures. Make sure you are rested and alert. If you are drowsy, sleep before you drive! Even a nap can save your life or the lives of others. If you wear eye glasses, make sure they are clean and unscratched. Don't wear sun glasses at night. Do a complete pre-trip inspection of your vehicle. Pay attention to checking all lights and reflectors and cleaning those you can reach.

- Night Driving Procedure

Avoid blinding others. Glare from your headlights can cause problems for drivers coming toward you. They can also bother drivers going in the same direction you are, when your lights shine in their rearview mirrors. Dim your lights before they cause glare for other drivers. Dim your lights within 500 feet of an oncoming vehicle or when following another vehicle within 500 feet.

Avoid glare from oncoming vehicles. Do not look directly at lights of oncoming vehicles. Look slightly to the right at a right lane or edge marking if available. If other drivers don't put their low beams on, don't try to "get back at them" by putting your own high beams on. This increases glare for oncoming drivers and increases the chance of a crash.

Use high beams when you can. Some drivers make the mistake of always using low beams. This seriously cuts down on their ability to see ahead. Use high beams when it is safe and legal to do so. Use them when you are not within 500 feet of an approaching vehicle. Also, don't let the inside of your cab get too bright. This makes it harder to see outside. Keep the interior light off and adjust your instrument lights as low as you can and still be able to read the gauges.

If you get sleepy, stop driving at the nearest safe place. People often don't realize how close they are to falling asleep even when their eyelids are falling shut. If you can safely do so, look at yourself in a mirror. If you look sleepy, or you just feel sleepy, stop driving! You are in a very dangerous condition. The only safe cure is to sleep.

The best advice for driving in fog is don't. It is preferable that you pull off the road into a rest area or truck stop until visibility is better. If you must drive, be sure to consider the following:

- Obey all fog-related warning signs.
 - Slow before you enter fog.
 - Turn on all your lights. (Headlights should be on low beams.)
 - Be prepared for emergency stops.
-

2.9 Driving in Fog

Make sure your vehicle is ready before driving in winter weather. You should make a regular pre-trip inspection, paying extra attention to the following items:

Coolant level and antifreeze amount. Make sure the cooling system is full and there is enough antifreeze in the system to protect against freezing. This can be checked with a special coolant tester.

Defrosting the heat equipment. Make sure the defrosters work. They are needed for safe driving. Make sure the heater is working, and that you know how to operate it. If you use other heaters and expect to need them (e.g., mirror heaters, battery box heaters, fuel tank heaters), check their operation.

Wipers and washers. Make sure the windshield wiper blades are in good condition. Make sure the wiper blades press against the window hard enough to wipe the windshield clean. Make sure the windshield washer works, and there is washer fluid contained in the washer reservoir.

Use windshield washer antifreeze to prevent freezing of the washer fluid. If you can't see well enough while driving (for example, if your wipers fail), stop safely and fix the problem.

Tires. Make sure you have enough tread on your tires. The drive tires must provide traction to push the rig over wet pavement and through snow. The steering tires must have traction to steer the vehicle. Enough tread is especially important in winter conditions. You must have at least 4/32 inch tread depth in every major groove on front wheels and at least 2/32 inch on other wheels. More would be better. Use a gauge to determine if you have enough tread for safe driving.

Tire chains. You may find yourself in conditions where you can't drive without chains, even to get to a place of safety. Carry the right number of chains and extra cross links. Make sure they will fit your drive tires. Check the chains for broken hooks, worn or broken cross links, and bent or broken side chains. Learn how to put the chains on before you need to do it in snow and ice.

Lights and reflectors. Make sure the lights and reflectors are clean. Lights and reflectors are especially important during bad weather. Check from time to time during bad weather to make sure they are clean and working right.

2.10 Driving in Winter

- Vehicle Checks

Windows and mirrors. Remove any ice, snow, etc., from the windshield, windows, and mirrors before starting. Use a windshield scraper, snow brush, and windshield defroster as necessary.

Hand holds, steps, and deck plates. Remove all ice and snow from hand holds, steps, and deck plates which you must use to enter the cab or to move about the vehicle. This will reduce the danger of slipping.

Radiator shutters and winterfront. Remove ice from the radiator shutters. Make sure the winterfront is not closed too tightly. If the shutters freeze shut or the winterfront is closed too much, the engine may overheat.

Exhaust system. Exhaust system leaks are especially dangerous when cab ventilation may be poor (windows rolled up, etc.). Loose connections could permit poisonous carbon monoxide to leak into your vehicle. Carbon monoxide gas will cause you to become sleepy. In large enough amounts it can kill you. Check the exhaust system for loose parts and for sounds and signs of leaks.

- Driving

Slippery surfaces. Drive slowly and smoothly on slippery roads. If it is very slippery, you shouldn't drive at all. Stop at the first safe place.

The following are some safety guidelines:

Start gently and slowly. When first starting, get the feel of the road. Don't hurry.

Adjust turning and braking to conditions. Make turns as gently as possible. Don't brake any harder than necessary, and don't use the engine brake or speed retarder. (They can cause the driving wheels to skid on slippery surfaces.)

Adjust speed to conditions. Don't pass slower vehicles unless necessary. Go slow and watch far enough ahead to keep a steady speed. Avoid having to slow down and speed up. Take curves at slower speeds, and don't brake while in curves. Be aware that as the temperature rises to the point where ice begins to melt, the road becomes even more slippery. Slow down more.

Adjust space to conditions. Don't drive alongside other vehicles. Keep a longer following distance. When you see a traffic jam ahead, slow down or stop to wait for it to clear. Try hard to anticipate stops early and slow down gradually.

Wet brakes. When driving in heavy rain or deep standing water, your brakes will get wet. Water in the brakes can cause the brakes to be weak, to apply unevenly, or to grab. This can cause lack of braking power, wheel lockups, pulling to one side or the other, and jackknife if you are pulling a trailer.

Avoid driving through deep puddles or flowing water if possible. If not, you should:

- Slow down.
- Place transmission in a low gear.
- Gently put on the brakes. This presses linings against brake drums or discs and keeps mud, silt, sand, and water from getting in.
- Increase engine RPM and cross the water while keeping light pressure on the brakes.

- When out of the water, maintain light pressure on the brakes for a short distance to heat them up and dry them out.
- Make a test stop when safe to do so. Check behind to make sure no one is following, then apply the brakes to be sure they work right. If not, dry out further as described above. (CAUTION: Do not apply too much brake pressure and accelerator at the same time or you can overheat brake drums and linings.)

When driving in very hot weather, do a normal pre-trip inspection, but pay special attention to the following items:

Tires. Check the tire mounting and air pressure. Inspect the tires every two hours or every 100 miles when driving in very hot weather. Air pressure increases with temperature. Do not let air out or the pressure will be too low when the tires cool off. If a tire is too hot to touch, remain stopped until the tire cools off. Otherwise the tire may blow out or catch fire.

Engine oil. The engine oil helps keep the engine cool, as well as lubricating it. Make sure there is enough engine oil. If you have an oil temperature gauge, make sure the temperature is within the proper range while you are driving.

Engine coolant. Before starting out, make sure the engine cooling system has enough water and antifreeze according to the engine manufacturer's directions. (Antifreeze helps the engine under hot conditions as well as cold conditions.) When driving, check the water temperature or coolant temperature gauge from time to time. Make sure that it remains in the normal range. If the gauge goes above the highest safe temperature, there may be something wrong that could lead to engine failure and possible fire. Stop driving as soon as safely possible and try to find out what is wrong.

Some vehicles have sight glasses, see-through coolant overflow containers or coolant recovery containers. These permit you to check the coolant level while the engine is hot. If the container is not part of the pressurized system, the cap can be safely removed and coolant added even when the engine is at operating temperature.

Never remove the radiator cap or any part of the pressurized system until the system has cooled. Steam and boiling water can spray under pressure and cause severe burns. If you can touch the radiator cap with your bare hand, it is probably cool enough to open.

If coolant has to be added to a system without a recovery tank or overflow tank, follow these steps:

- Shut the engine off.
- Wait until the engine has cooled.
- Protect hands (use gloves or a thick cloth).
- Turn the radiator cap slowly to the first stop, which releases the pressure seal.
- Step back while pressure is released from cooling system.

2.11 Driving in Very Hot Weather

- Vehicle Checks

- When all pressure has been released, press down on the cap and turn it further to remove it.
- Visually check the level of coolant and add more coolant if necessary.
- Replace the cap and turn all the way to the closed position.

Engine belts. Learn how to check V-belt tightness on your vehicle by pressing on the belts. Loose belts will not turn the water pump and/or fan properly. This will result in overheating. Also, check belts for cracking or other signs of wear.

Hoses. Make sure coolant hoses are in good condition. A broken hose while driving can lead to engine failure.

Watch for bleeding tar. Tar in the road pavement frequently rises to the surface in very hot weather. Spots where tar “bleeds” to the surface are very slippery.

- Driving

Go slow enough to prevent overheating. High speeds create more heat for tires and the engine. In desert conditions the heat may build up to the point where it is dangerous. The heat will increase chances of tire failure, or even fire, and engine failure.

Test Your Knowledge
<ol style="list-style-type: none"> 1. You should use low beams whenever you can. True or False? 2. What would you do before you drive if you are drowsy? 3. What effects can wet brakes cause? How can you avoid these problems? 4. You should let air out of hot tires so the pressure goes back to normal. True or False? 5. You can safely remove the radiator cap as long as the engine isn’t overheated. True or False?
These questions may be on the test. If you can’t answer them all, reread Sections 2.8, 2.9, 2.10 and 2.11.

2.12 Railroad Crossings

Railroad crossings are always dangerous. Every such crossing must be approached with the expectation that a train is coming.

- | | |
|--|--|
| <ul style="list-style-type: none"> • Never Race Train to Crossing | Never attempt to race a train to a crossing. While crossing the track, it is extremely difficult to judge the speed of an approaching train. |
| <ul style="list-style-type: none"> • Reduce Speed | Speed must be reduced in accordance with your ability to see approaching trains in any direction, and speed must be held to a point which will permit you to stop short of the tracks in case a stop is necessary. |
| <ul style="list-style-type: none"> • Don’t Expect to Hear the Train | Because of noise in the cab, you cannot expect to hear the train horn until the train is dangerously close to the crossing. |
| <ul style="list-style-type: none"> • Don’t Rely on Signals | You should not rely solely upon the presence of warning signals, gates or flagmen to warn of the approaching trains. |

Double tracks require a double check. Remember that a train on one track may hide a train on the other track. Look both ways before crossing. After one train has cleared a crossing, be sure no other trains are near before starting across the tracks.

Yard areas and grade crossings in cities and towns are just as dangerous as rural grade crossings. Approach them with as much caution.

A full stop is required at grade crossings whenever:

- The nature of the cargo makes a stop mandatory under state or federal regulations.
- Such a stop is otherwise required by law.

- Stop Requirements

Railroad crossings with steep approaches can cause your unit to hang up on the tracks.

- Crossing the Tracks

Never permit traffic conditions to trap you in a position where you have to stop on the tracks before you start across.

Do not shift gears while crossing railroad tracks.

2.13 Mountain Driving

In mountain driving, gravity plays a major role. On any upgrade, gravity slows you down. The steeper the grade, the longer the grade, and/or the heavier the load -- the more you will have to use lower gears to climb hills or mountains. In coming down long steep downgrades, gravity causes the speed of your vehicle to increase. You must select an appropriate safe speed, then use a low gear, and use proper braking techniques. You should plan ahead and obtain information about any long steep grades along your planned route of travel. If possible, talk to other drivers who are familiar with the grades to find out what speeds are safe. Observe posted speed limits.

You must go slowly enough so your brakes can hold you back without getting too hot. If the brakes become too hot, they may start to “fade.” This means you have to apply them harder and harder to get the same stopping power. If you continue to use the brakes hard, they can keep fading until you cannot slow down or stop at all.

- Select a “Safe” Speed

Your most important consideration is to select a speed that is not too fast for the:

- Total weight of the vehicle and cargo.
- Length of the grade.
- Steepness of the grade.
- Road conditions.
- Weather.

If a speed limit is posted, or there is a sign indicating “Maximum Safe Speed,” never exceed the speed shown. Also, look for the warning signs indicating the length and steepness of the grade.

You must use the braking effect of the engine as the principal way of controlling your speed. The braking effect of the engine is greatest when it is near the governed RPMs and the transmission is in the lower gears. Save your brakes so you will be able to slow or stop as required by road and traffic conditions.

- Be in the Right Gear Before Starting Down the Grade

Shift the transmission to a low gear before starting down the grade. Do not try to downshift after your speed has already built up. You will not be able to shift into a lower gear. You may not even be able to get back into any gear and all engine braking effect will be lost. Forcing an automatic transmission into a lower gear at high speed could damage the transmission and also lead to loss of all engine braking effect.

With older trucks, a rule for choosing gears is to use the same gear going down a hill that you would need to climb the hill. However, new trucks have low friction parts and streamlined shapes for fuel economy. They may also have more powerful engines. This means they can go up hills in higher gears and have less friction and air drag to hold them back going down hills. For that reason, drivers of modern trucks may have to use lower gears going down a hill than would be required to go up the hill. You should know what is right for your vehicle.

- Brake Fading or Failure

Brakes are designed so brake pads rub against the brake drum or rotor to slow the vehicle. Braking creates heat, but brakes are designed to take a lot of heat. However, brakes can fade or fail from excessive heat caused by using them too much and not relying on the engine braking effect.

Brake fade is also affected by adjustment. To safely control a vehicle, every brake must do its share of the work. Brakes out of adjustment will stop doing their share before those that are in adjustment. The other brakes can then overheat and fade, and there will not be enough braking available to control the vehicle. Brakes can get out of adjustment quickly, especially when they are used often. Brake linings wear faster when they are hot. Therefore, brake adjustment must be checked frequently.

- Proper Braking Technique

Remember: The use of brakes on a long and/or steep downgrade is only a supplement to the braking effect of the engine. Once the vehicle is in the proper low gear, the following is a proper braking technique:

1. Apply the brakes just hard enough to feel a definite slowdown.
2. When your speed has been reduced to approximately 5 m.p.h. below your “safe” speed, release the brakes. (This brake application should last for about three (3) seconds.)
3. When your speed has increased to your “safe” speed, repeat steps 1 and 2.

For example, if your “safe” speed is 40 m.p.h., you would not apply the brakes until your speed reaches 40 m.p.h. Apply the brakes hard enough to gradually reduce your speed to 35 m.p.h. and then release the brakes. Repeat this as often as necessary until you have reached the end of the downgrade.

Escape ramps have been built on many steep mountain downgrades. Escape ramps are made to stop runaway vehicles safely without injuring drivers and passengers. Escape ramps use a long bed of loose, soft material to slow a runaway vehicle, sometimes in combination with an upgrade.

Know escape ramp locations on your route. Signs show drivers where ramps are located. Escape ramps save lives, equipment, and cargo. Use them if you lose your brakes.

What is a hazard? A hazard is any road condition or other road user (driver, bicyclist, pedestrian) that is a possible danger. For example, a driver in front of you is headed toward the freeway exit, but his brake lights come on and he begins braking hard. This could mean that the driver is uncertain about taking the offramp. He might suddenly return to the highway. This car is a hazard. If the driver of the car cuts in front of you, it is no longer just a hazard; it is an emergency.

Seeing hazards lets you be prepared. You will have more time to react if you see hazards before they become emergencies. In the example above, you might make a lane change or slow down to prevent a crash if the car suddenly cuts in front of you. Seeing this hazard gives you time to check your mirrors and signal a lane change. Being prepared reduces the danger. A driver who did not see the hazard until the slow car pulled back on the highway in front of him would have to do something very suddenly. Sudden braking or a quick lane change is much more likely to lead to a crash.

Learning to see hazards. There are often clues that will help you see hazards. The more you drive, the better you can get at seeing hazards. This section will talk about hazards that you should be aware of.

Slow down and be very careful if you see any of the following road hazards:

Work zones. When people are working on the road, they are a hazard. There may be narrower lanes, sharp turns, or uneven surfaces. Other drivers are often distracted and drive unsafely. Workers and construction vehicles may get in the way. Drive slowly and carefully near work zones. Use your 4-way flashers or brake lights to warn drivers behind you.

Drop off. Sometimes the pavement drops off sharply near the edge of the road. Driving too near the edge can tilt your vehicle toward the side of the road. This can cause the top of your vehicle to hit roadside objects (signs, tree limbs). Also, your vehicle can be hard to steer as you cross the drop off.

Foreign objects. Things that have fallen on the road can be hazards. They can be a danger to your tires and rims. They can damage electrical and brake lines. They can become caught between dual tires and cause severe damage. Some obstacles

2.14 Seeing Hazards

- Importance of Seeing Hazards

- Hazardous Roads

which appear to be harmless can be very dangerous. For example, cardboard boxes may be empty, but they may contain some solid or heavy material capable of causing damage. The same is true of paper and cloth sacks. It is important to remain alert for objects of all sorts, so you can see them early enough to avoid them without making sudden, unsafe moves.

Offramps/Onramps. Freeway and turnpike exits can be particularly dangerous for commercial vehicles. Offramps and onramps often have speed limit signs posted. Remember, these speeds may be safe for automobiles, **but may not be safe for larger vehicles or heavily loaded vehicles.** Exits which go downhill and turn at the same time can be especially dangerous. The downgrade makes it difficult to reduce speed. Braking and turning at the same time is a dangerous practice. Make sure you are going slow enough before you get to the curved part of an offramp or onramp.

- Drivers Who Are Hazards

In order to protect yourself and others, you must know when other drivers may do something hazardous. Some clues to this type of hazard are listed below:

Blocked vision. People who can't see others are a very dangerous hazard. Be alert for drivers whose vision is blocked. Vans, loaded station wagons, and cars with the rear window blocked are examples. Rental trucks should be watched carefully. Their drivers are often not used to the limited vision they have to the sides and rear of the truck. In winter, vehicles with frosted, ice covered, or snow covered windows are hazards.

Vehicles may be partly hidden by blind intersections or alleys. If you can only see the rear or front end of a vehicle but not the driver, then he or she can't see you. Be alert because he/she may back out or enter into your lane. Always be prepared to stop.

Delivery trucks can present a hazard. The driver's vision is often blocked by packages, or vehicle doors. Drivers of step vans, postal vehicles, and local delivery vehicles often are in a hurry and may suddenly step out of their vehicle or drive their vehicle into the traffic lane.

Use caution when approaching parked vehicles. Watch for people exiting the parked vehicles. Watch for brake lights or backup lights, exhaust and other clues that indicate possible movement of the vehicle. Watch for people moving around the parked vehicles.

Be careful of a stopped bus. Passengers may cross in front of or behind the bus, and they often can't see you.

Pedestrians and bicyclists can also be hazards. Walkers, joggers and bicyclists may be on the road with their back to the traffic, so they can't see you. Sometimes, they wear portable stereos with head sets, so they can't hear you either. This can be dangerous. On rainy days, pedestrians may not see you because of hats or umbrellas. They may be hurrying to get out of the rain and may not pay attention to the traffic.

Distractions. People who are distracted are hazards. Watch for where they are looking. If they are looking elsewhere, they can't see you. But be alert even when they are looking at you. They may believe that they have the right of way.

Children. Children tend to act quickly without checking traffic. Children playing with one another may not look for traffic and are a serious hazard.

Talkers. Drivers or pedestrians talking to one another may not be paying close attention to the traffic.

Workers. People working on or near the roadway are a hazard clue. The work creates a distraction for other drivers and the workers themselves may not see you.

Ice cream truck. Someone selling ice cream is a hazard clue. Children may be nearby and may not see you.

Disabled vehicle. Drivers changing a tire or fixing an engine often do not pay attention to the danger that roadway traffic is to them. They are often careless. Jacked up wheels or raised hoods are hazard clues.

Accidents. Accidents are particularly hazardous. People involved in the accident may not look for traffic. Passing drivers tend to look at the accident. People often run across the road without looking. Vehicles may slow or stop suddenly.

Shoppers. People in and around shopping areas are often not watching traffic because they are looking for stores or looking into store windows.

Confused drivers. Confused drivers often change direction suddenly or stop without warning. Confusion is common near freeway or turnpike interchanges and major intersections. Tourists unfamiliar with the area can be very hazardous. Clues to tourists include cartop luggage and out-of-state license plates. Unexpected actions (stopping in the middle of a block, changing lanes for no apparent reason, backup lights suddenly going on) are clues to confusion. Hesitation is another clue, including driving very slowly, using brakes often, or stopping in the middle of an intersection. You may also see drivers who are looking at street signs, maps, and house numbers. The drivers may not be paying attention to you.

Slow drivers. Motorists who fail to maintain normal speed are hazards. Seeing slow moving vehicles early can prevent a crash. Some vehicles by their nature are slow and seeing them is a hazard clue (mopeds, farm machinery, construction machinery, tractors, etc.). Some of these will have the “slow moving vehicle” symbol to warn you. This is a red triangle with an orange center. Watch for it.

Drivers signaling a turn may be a hazard. Drivers signaling a turn may slow more than expected or stop. If they are making a tight turn into an alley or driveway, they may go very slow. If they are blocked by pedestrians or other vehicles, they may have to stop on the roadway. Vehicles turning left may have to stop for oncoming vehicles.

Drivers in a hurry. Drivers may feel your commercial vehicle is preventing them from getting where they want to go on time. Such drivers may pass you without a safe gap in the oncoming traffic, cutting too close in front of you. Drivers entering the road may pull in front of you in order to avoid being stuck behind you, causing you to brake. Be aware of this and watch for drivers who are in a hurry.

Impaired drivers. Drivers who are sleepy, have had too much to drink, on drugs, or who are ill are all hazards. Some clues to these drivers are:

- Weaving across the road or drifting from one side to another.
- Leaving the road (dropping right wheels onto the shoulder, or bumping across a curb in a turn).
- Stopping at the wrong time (stopping at a green light, or waiting for too long at a stop).
- Open window in cold weather.
- Speeds up or slows down suddenly, driving too fast or too slow.

Be alert for drunk drivers and sleepy drivers late at night.

Driver body movement as a clue. Drivers look in the direction they are going to turn. You may sometimes get a clue from a driver's head and body movements that a driver may be going to make a turn even though the turn signals aren't on. Drivers making over-the-shoulder checks may be going to change lanes. These clues are most easily seen in motorcyclists and bicyclists. Watch other road users and try to tell whether they might do something hazardous.

Conflicts. You are in conflict when you have to change speed and/or direction to avoid hitting someone. Conflicts occur at intersections where vehicles meet, at merges (such as turnpike or freeway ramps) and where they are needing lane changes (such as the end of a lane, forcing a move to another lane of traffic). Other situations include slow moving or stalled traffic in a traffic lane, and accident scenes. Watch for other drivers who are in conflict because they are a hazard to you. When they react to this conflict, they may do something that will put them in conflict with you.

- Always Have a Plan

You should always be looking for hazards. Continue to learn to see hazards on the road. However, don't forget why you are looking for hazards - they may turn into emergencies. You look for the hazards in order to have time to plan a way out of an emergency. When you see a hazard, think about the emergencies that could develop and figure out what you would do. Always be prepared to take action based on your plans. In this way, you will be a prepared, defensive driver who will improve not only your own safety but the safety of all road users.

Test Your Knowledge
<ol style="list-style-type: none">1. What factors determine your selection of a "safe" speed when going down a long, steep downgrade?2. Why should you be in right gear before starting down a hill?3. Describe the proper braking technique when going down a long, steep downgrade.4. What is a hazard?5. Why make emergency plans when you see a hazard?
These questions may be on the test. If you can't answer them all, reread Sections 2.12, 2.13 and 2.14.

2.15 Emergencies

Traffic. Emergencies occur when two vehicles are about to collide. **Vehicle** emergencies occur when tires, brakes or other critical parts fail. Following the safety practices in this manual can help prevent emergencies. But if an emergency does happen, your chances of avoiding a crash depend upon how well you take action. Actions you can take are described below.

Stopping is not always the safest thing to do in an emergency. When you don't have enough room to stop, you may have to steer away from what's ahead. Remember, you can almost always turn to miss an obstacle more quickly than you can stop. (However, top-heavy vehicles and tractors with multiple trailers may flip over.)

Keep both hands on the steering wheel. In order to turn quickly, you must have a firm grip on the steering wheel with both hands. The best way to have both hands on the wheel, if there is an emergency, is to keep them there all the time.

How to turn quickly and safely. A quick turn can be made safely, if it's done the right way. Here are some guidelines for making safe turns:

- **Do not** apply the brake while you are turning. It's very easy to lock your wheels while turning. If that happens, you may skid out of control.
- **Do not** turn any more than needed to clear whatever is in your way. The more sharply you turn, the greater the chances of a skid or rollover.
- Be prepared to "countersteer," that is, to turn the wheel back in the other direction, once you've passed whatever was in your path. Unless you are prepared to countersteer, you won't be able to do it quickly enough. You should think of emergency steering and countersteering as two parts of one driving action.

Where to steer. If an oncoming driver has drifted into your lane, a move to your right is best. If that driver realizes what has happened, the natural response will be to return to his or her own lane.

If something is blocking your path, the best direction to steer will depend on the situation.

- If you have been using your mirrors, you'll know which lane is empty and can be safely used.
- If the shoulder is clear, going right may be best. No one is likely to be driving on the shoulder but someone may be passing you on the left. You will know if you have been using your mirrors.
- If you are blocked on both sides, a move to the right may be best. At least you won't force anyone into an opposing traffic lane and a possible head-on collision.

Leaving the road. In some emergencies, you may have to drive off the road. It may be less risky than facing a collision with another vehicle.

Most shoulders are strong enough to support the weight of a large vehicle and, therefore, offer an available escape route. Here are some guidelines, if you must leave the road.

- Steering to avoid a Crash

Avoid braking. If possible, avoid using the brakes until your speed has dropped to about 20 mph. Then brake very gently to avoid skidding on a loose surface.

Keep one set of wheels on pavement if possible. This helps to maintain control.

Stay on the shoulder. If the shoulder is clear, stay on it until your vehicle has come to a stop. Signal and check your mirrors before pulling back onto the road.

Returning to the road. If you are forced to return to the road before you can stop, use the following procedure:

- Hold the wheel tightly and turn sharply enough to get right back on the road safely. Don't try to edge gradually back on the road. If you do, your tires might grab unexpectedly and you could lose control.
- When both front tires are on the paved surface, countersteer immediately. The two turns should be made as a single "steer-countersteer" move.

- How to Stop Quickly and Safely

If somebody suddenly pulls out in front of you, your natural response is to hit the brakes. This is a good response if there's enough distance to stop and you use the brakes correctly.

You should brake in a way that will keep your vehicle in a straight line and allow you to turn if it becomes necessary. You can use the "controlled braking" method or the "stab braking" method.

Controlled braking. With this method, you apply the brakes as hard as you can **without** locking the wheels. Keep steering wheel movements very small while doing this. If you need to make a larger steering adjustment or if the wheels lock, release the brakes. Reapply the brakes as soon as you can.

Stab braking. (Only on vehicles without anti-lock brake system.)

- Apply your brakes all the way.
- Release brakes when wheels lock up.
- As soon as the wheels start rolling, apply the brakes fully again. (It can take up to one second for the wheels to start rolling after you release the brakes. If you reapply the brakes before the wheels start rolling, the vehicle won't straighten out.)

Don't jam on the brakes. (Only on vehicles with anti-lock brake systems.) Emergency braking does not mean pushing down on the brake pedal as hard as you can. That will only keep the wheels locked up and cause a skid. If the wheels are skidding, you cannot control the vehicle.

Note: If you drive a vehicle with anti-lock brakes, you should read and follow the directions found in the Owners Manual for stopping quickly.

Brakes kept in good condition rarely fail. Most **hydraulic** brake failures occur for one of two reasons: (Air brakes are explained in Section 5).

- Loss of hydraulic pressure.
- Brake fade on long hills.

Loss of hydraulic pressure. When the system won't build up pressure, the brake pedal will feel spongy or go to the floor. Here are some things you can do:

Downshift. Putting the vehicle into a lower gear will help to slow the vehicle.

Pump the brakes. Sometimes pumping the brake pedal will generate enough hydraulic pressure to stop the vehicle.

Use the parking brake. The parking or emergency brake is separate from the hydraulic brake system. Therefore, it can be used to slow the vehicle. However, be sure to press the release button or pull the release lever at the same time you use the emergency brake so you can adjust the brake pressure and keep the wheels from locking up.

Find an escape route. While slowing the vehicle, look for an escape route - an open field, side street or escape ramp. Turning uphill is a good way to slow and stop the vehicle. Make sure the vehicle does not start rolling backward after you stop. Put it in low gear, apply the parking brake, and if necessary roll back into some obstacle that will stop the vehicle.

Brake failure on downgrades. Going slowly enough and braking properly will almost always prevent brake failure on long downgrades. Once the brakes have failed, however, you are going to have to look outside your vehicle for something to stop it.

Your best hope is an **escape ramp**. If there is one, there will be signs telling you about it. Use it. Ramps are usually located a few miles from the top of the downgrade. Every year, hundreds of drivers avoid injury to themselves or damage to their vehicles by using escape ramps. Some escape ramps use soft gravel that resists the motion of the vehicle and brings it to a stop. Others turn uphill, using the hill to stop the vehicle and soft gravel to hold it in place.

Any driver who loses brakes going downhill should use an escape ramp if it's available. If you don't use it, your chances of having a serious crash may be much worse.

If no escape ramp is available, take the least hazardous escape route you can -- such as an open field, or a side road that flattens out or turns uphill. Make the move as soon as you know your brakes don't work. The longer you wait, the faster the vehicle will go and the harder it will be to stop.

Recognize tire failure. Quickly knowing you have a tire failure will let you have more time to react. Having just a few seconds to remember what it is you're supposed to do can help you. The major signs of tire failure are:

- Brake Failure

- Tire Failure

Sound. The loud “bang” of a blowout is an easily recognized sign. Because it can take a few seconds for your vehicle to react, you might think it was some other vehicle. But any time you hear a tire blow, you would be safest to assume it was yours.

Vibration. If the vehicle thumps or vibrates heavily, it may be a sign that one of the tires has gone flat. With a rear tire, that may be the only sign you get.

Feel. If the steering feels “heavy,” it is possibly a sign that one of the front tires has failed. Sometimes, failure of a rear tire will cause the vehicle to slide back and forth or “fishtail.” However, dual rear tires usually prevent this.

Any of these signs is a warning of possible tire failure. You should do the following things:

Hold the steering wheel firmly. If a front tire fails, it can twist the steering wheel out of your hand. The only way to prevent this is to keep a firm grip on the steering wheel with both hands at all times.

Stay off the brake. It’s natural to want to brake in an emergency. However, braking when a tire has failed could cause loss of control. Unless you’re about to run into something, stay off the brake until the vehicle has slowed down. Then brake very gently, pull off the road, and stop.

Check the tires. After you’ve come to a stop, get out and check all the tires. Do this even if the vehicle seems to be handling all right. If one of your dual tires goes flat, the only way you may know it is by getting out and looking at it.

2.16 Skid Control and Recovery

A skid happens whenever the tires lose their grip on the road. This is caused in one of four ways:

Overbraking. Braking too hard and locking up the wheels. Skids also can occur when using the speed retarder when the road is slippery.

Oversteering. Turning the wheels more sharply than the vehicle can turn.

Overacceleration. Supplying too much power to the drive wheels, causing them to spin.

Driving too fast. Most serious skids result from driving too fast for road conditions. Drivers who adjust their driving to conditions don’t overaccelerate and don’t have to overbrake or oversteer from too much speed.

- Drive-Wheel Skids

By far the most common skid is one in which the rear wheels lose traction through excessive braking or acceleration. Skids caused by acceleration usually happen on ice or snow. They can be easily stopped by taking your foot off the accelerator. (If it is very slippery, push the clutch in. Otherwise, the engine can keep the wheels from rolling freely and regaining traction.)

Rear wheel braking skids occur when the rear drive wheels lock. Because locked wheels have less traction than rolling wheels, the rear wheels usually slide sideways in an attempt to “catch up” with the front wheels. In a bus or straight truck, the vehicle will slide sideways in a “spin out.” With vehicles towing trailers, a drive-wheel skid can let the trailer push the towing vehicle sideways, causing a sudden jackknife. (Figure 2-14) Once the angle between the tractor and trailer reaches 15 degrees, a jackknife is inevitable.

Do the following to correct a drive-wheel braking skid:

Stop braking. This will let the rear wheels roll again, and keep the rear wheels from sliding any further. If on ice, push in the clutch to let the wheels turn freely.

Turn quickly. When a vehicle begins to slide sideways, quickly steer in the direction you want the vehicle to go -- down the road. You must turn the wheel quickly.

Countersteer. As a vehicle turns back on course, it has a tendency to keep right on turning. Unless you turn the steering wheel quickly the other way, you may find yourself skidding in the opposite direction.

Learning to stay off the brake, turning the steering wheel quickly, pushing in the clutch, and counter-steering in a skid takes a lot of practice. The best place to get this practice is on a large driving range or “skid pad.”

Most front-wheel skids are caused by driving too fast for conditions. Other causes are lack of tread on the front tires, and cargo loaded so not enough weight is on the front axle. In a front-wheel skid, the front end tends to go in a straight line regardless of how much you turn the steering wheel. On a very slippery surface, you may not be able to steer around a curve or turn.

When a front-wheel skid occurs, the only way to stop the skid is to let the vehicle slow down. Stop turning and/or braking so hard. Slow down as quickly as possible without skidding.

- Correcting a Drive-Wheel Braking Skid

- Front-Wheel Skids

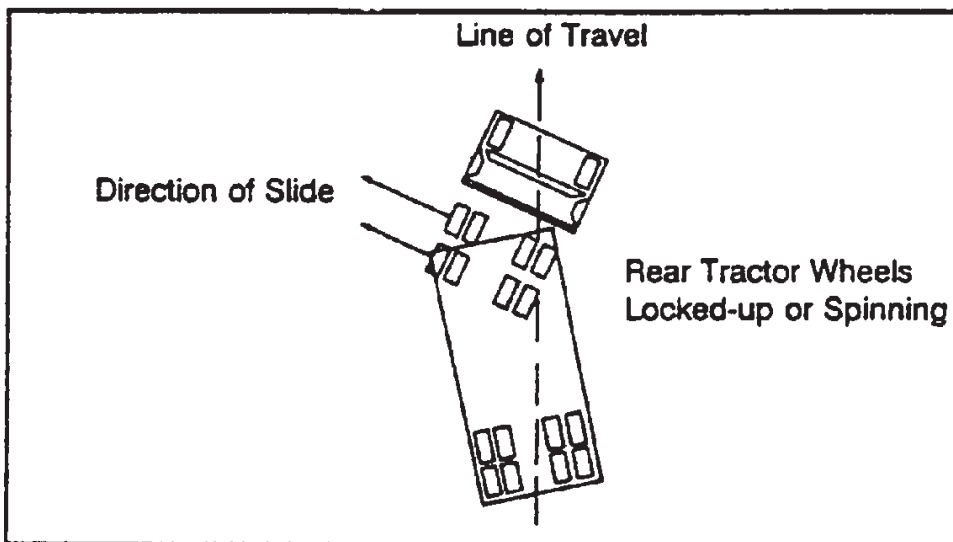


Figure 2-14

- Tractor Jackknife

Test Your Knowledge

1. Stopping is not always the safest thing to do in an emergency. True or False?
2. What are some advantages of going right instead of left around an obstacle?
3. What is an “escape ramp?”
4. If a tire blows out, you should put the brakes on hard to stop quickly. True or False?

These questions may be on the test. If you can’t answer them all, reread Sections 2.15 and 2.16.

2.17 Accident Procedures

When you're in an accident and not seriously hurt, you need to act to prevent further damage or injury. The basic steps to be taken at any accident are to:

- Protect the area.
- Notify authorities.
- Care for injured.

- Protect the Area

The first thing to do at an accident scene is to keep another accident from happening at the same spot. To protect the accident area:

- If your vehicle is involved in the accident, try to get it to the side of the road. This will help prevent another accident and allow traffic to move.
- If you're stopping to help, park away from the accident. The area immediately around the accident will be needed for emergency vehicles.
- Put on your flashers.
- Set out reflective triangles to warn other traffic. Make sure they can be seen by other drivers in time for them to avoid the accident. (See Figure 2-8, 2-9, & 2-10).

- Notify Authorities

If you have a CB, or cell phone, put out a call over the emergency channel before you get out of your vehicle or call "911". If not, wait until after the accident scene has been properly protected, then phone or send someone to phone the police. Try to determine where you are so you can give the exact location.

- Care for Injured

If a qualified person is at the accident and helping the injured, stay out of the way unless asked to assist. Otherwise, do the best you can to help any injured parties. Here are some simple steps to follow in giving assistance:

- Don't move a severely injured person unless the danger of fire or passing traffic makes it necessary.
- Stop heavy bleeding by applying direct pressure to the wound.
- Keep the injured person warm.

2.18 Fires

- Causes of Fire

Truck fires can cause damage and injury. Learn the causes of fires and how to prevent them. Know what to do to extinguish fires.

The following are some causes of vehicle fires:

- After accidents - Spilled fuel, improper use of flares.
- Tires - Underinflated tires and duals that touch.
- Electrical system - Short circuits due to damaged insulation, loose connections.
- Fuel - Driver smoking, improper fueling, loose fuel connections.
- Cargo - Flammable cargo, improperly sealed or loading, poor ventilation.

Pay attention to the following:

- Fire Prevention

- Pre-trip inspection. Make a complete inspection of the electrical, fuel, and exhaust systems, tires, and cargo. Be sure to check that fire extinguisher is charged.
- Enroute inspection. Check the tires, wheels, and truck body for signs of heat whenever you stop during a trip.
- Follow safe procedures. Follow correct safety procedures for fueling the vehicle, using brakes, handling flares, and other activities that can cause a fire.
- Monitoring. Check the instruments and gauges regularly for signs of overheating, and use the mirrors to look for signs of smoke from tires, or the vehicle.

Caution. Use normal caution in handling anything flammable.

Knowing how to fight fires is important. Fires have been made worse by drivers who didn't know what to do. Know how the fire extinguisher works. Study the instructions printed on the extinguisher before you need it. Here are some procedures to follow in case of fire:

- Fire Fighting

Pull off the road. The first step is to get the vehicle off the road and stopped. In doing so:

- Park in an open area, away from buildings, trees, brush, other vehicles or anything that might catch fire.
- Don't pull into a service station!
- Notify emergency services of your problem and your location.

Keep the fire from spreading. Before trying to put out the fire, make sure that it doesn't spread any further.

- With an **engine** fire, turn off the engine as soon as you can. Don't open the hood if you can avoid it. Shoot extinguishers through louvers, radiator, or from the underside of the vehicle.
- For a cargo fire in a van or box trailer, keep the doors shut, especially if your cargo contains hazardous materials. Opening the van doors will supply the fire with oxygen and can cause it to burn very fast.

Use the correct fire extinguisher.

- The B:C type fire extinguisher is designed to work on electrical fires and burning liquids. The A:B:C type is designed to work on burning wood, paper, and cloth as well as on electrical fires and burning liquids.
- Water can be used on wood, paper or cloth, but don't use water on an electrical fire (you could get shocked) or a gasoline fire (it will just spread the flames).

- A burning tire must be cooled. Lots of water may be required.
- If you're not sure what to use, especially on a hazardous materials fire, wait for qualified fire fighters.

Extinguish the fire. Here are some rules to follow in putting out a fire:

- Only try to extinguish a fire if you know what you are doing and it is safe to do so.
- When using the extinguisher, stay as far away from the fire as possible.
- Aim at the source or base of the fire, not up in the flames.
- Position yourself upwind. Let the wind carry the extinguisher to the fire rather than carrying the flames to you.
- Continue until whatever was burning has been cooled. Absence of smoke or flame does not mean the fire is completely out or cannot restart.

Test Your Knowledge
<ol style="list-style-type: none"> 1. What are some things to do at an accident scene to prevent another accident? 2. Name two causes of tire fires. 3. What kinds of fires is a B:C extinguisher not good for? 4. When using your extinguisher, should you get as close as possible to the fire? 5. Name some causes of vehicle fires.
These questions may be on the test. If you can't answer them all, reread Section 2.17 and 2.18

2.19 Staying Alert and Fit to Drive

Driving a vehicle for long hours is tiring. Even the best of drivers will become less alert. However, there are things that good drivers do to help stay alert and safe. Here are a few suggestions:

- Be Ready to Drive

Get enough sleep. Leaving on a long trip when you're already tired is dangerous. If you have a long trip scheduled, make sure that you get enough sleep before you go. Most people require 7 - 8 hours of sleep every 24 hours.

Schedule trips safely. Your body gets used to sleeping during certain hours. If you are driving during those hours, you will be less alert. If possible, try to schedule trips for the hours you are normally awake. Many heavy motor vehicle accidents occur between midnight and 6 a.m. Tired drivers can easily fall asleep at these times, especially if they don't regularly drive at those hours. Trying to push on and finish a long trip at these times can be very dangerous.

Avoid medication. Many medicines can make you sleepy. Avoid those that do have a label warning against operating vehicles or machinery. The most common medicine of this type is an ordinary cold pill. If you have to drive with a cold, you are better off suffering from the cold than from the effects of the medicine.

Keep cool. A hot, poorly ventilated cab can make you sleepy. Keep the window or vent cracked or use the air conditioner, if you have one.

Take breaks. Short breaks can keep you alert. But the time to take them is **before** you feel really drowsy or tired. Stop often. Walk around, and inspect your vehicle. It may help to do some physical exercises.

When you are sleepy, trying to “push on” is far more dangerous than most drivers think. It is a major cause of fatal accidents. Here are some important rules to follow:

Stop to sleep. When your body needs sleep, sleep is the only thing that will work. If you have to make a stop anyway, make it whenever you feel the first sign of sleepiness, even if it is earlier than you planned. By getting up a little earlier the next day, you can keep on schedule without the danger of driving while you are not alert.

Take a nap. If you can’t stop for the night, at least pull off at a safe place, such as a rest area or truck stop, and take a nap. A nap as short as a half-hour will do more to overcome fatigue than a half-hour coffee stop.

Avoid drugs. There are no drugs that can overcome being tired. They may even be illegal. While they may keep you awake for a while, they won’t make you alert. And eventually, you’ll be even more tired than if you hadn’t taken them at all. Sleep is the only thing that can overcome fatigue.

Drinking alcohol and then driving is a very serious problem. People who drink alcohol are involved in traffic accidents resulting in over 20,000 deaths every year. You should know:

- How alcohol works in the human body.
- How it affects driving.
- Laws regarding drinking and driving.
- Legal, financial, and safety risks of drinking and driving.

The truth about alcohol. There are many dangerous ideas about the use of alcohol. The driver who believes in these wrong ideas will be more likely to get into trouble. Here are some examples:

FALSE	THE TRUTH
Alcohol increases your ability to drive	Alcohol is a drug that will make you less alert and reduce your ability to drive safely
Some people can drink a lot and not be affected	Everyone who drinks is affected by alcohol
If you eat a lot first, you won’t get drunk	Food will not keep you from getting drunk
Coffee and a little fresh air will help a drinker sober up	Only time will help a drinker sober up--other methods just don’t work
Stick with beer--it’s not as strong as wine or whiskey	A few beers are the same as a few shots of whiskey or a few glasses of wine

- When You do Become Sleepy

- Alcohol and Driving

What is a drink? It is the alcohol in drinks that affects human performance. It does not make any difference whether that alcohol comes from “a couple of beers” or from two glasses of wine or two shots of hard liquor.

All of the following drinks **contain the same amount of alcohol**:

- A 12 ounce glass of 5% beer.
- A 5 ounce glass of 12% wine.
- A 1 1/2 ounce shot of 80 proof liquor.

How alcohol works. Alcohol goes directly from the stomach into the blood stream. A drinker can control the amount of alcohol which he or she takes in, by having fewer drinks or none. However, the drinker cannot control how fast the body gets rid of alcohol. If you have drinks faster than the body can get rid of them, you will have more alcohol in your body and your driving will be more affected. The amount of alcohol in your body is commonly measured by the Blood Alcohol Concentration (BAC).

What determines blood alcohol concentration? BAC is determined by the amount of alcohol you drink (more alcohol means higher BAC), how fast you drink (faster means higher BAC), and your weight (a small person doesn't have to drink as much as a larger person to reach the same BAC).

Alcohol and the brain. Alcohol affects more and more of the brain as BAC builds up. The first part of the brain affected controls judgement and self-control. One of the bad things about this is it can keep drinkers from knowing they are getting drunk. And of course, good judgement and self-control are absolutely necessary for safe driving.

As blood alcohol concentration continues to build up, muscle control, vision, and coordination are affected more and more. Eventually, a person will pass out.

How Alcohol Affects Driving. All drivers are affected by drinking alcohol. Alcohol affects judgement, vision, coordination, and reaction time. It causes serious driving errors, such as:

- Increased reaction time to hazards.
- Driving too fast or too slow.
- Driving in the wrong lane.
- Running over the curb.
- Weaving.
- Straddling lanes.
- Quick, jerky starts.
- Not signaling, failure to use lights.
- Running stop signs and red lights.
- Improper passing.

These effects mean increased chances of a crash and chances of losing your driver's license. Accident statistics show that the chance of a crash is much greater for drivers who have been drinking than for drivers who were not.

Besides alcohol, other legal and illegal drugs are being used more often. Laws prohibit possession or use of any drugs while on duty. They prohibit being under the influence of any "controlled substance," including amphetamine ("pep pills" or "bennies"), narcotics, or any other substance which can render the user unsafe to drive. This could include a variety of prescription and over-the-counter drugs (cold medicines) which may make the driver drowsy or otherwise affect safe driving ability. However, possession and use of a drug given to a driver by a doctor is permitted if the drug will not affect safe driving ability. Pay attention to warning labels of legitimate drugs and medicines and doctor's orders regarding possible effects. Stay away from illegal drugs. Don't use any drugs that hide fatigue - the only cure for fatigue is rest. Alcohol can make the effect of other drugs much worse. The safest rule is don't mix drugs with driving at all.

Use of drugs can lead to traffic accidents resulting in death, injury and property damage. Furthermore, it can lead to arrest, fines, and jail sentences. It can also mean the end of a person's driving career.

Once in a while, you may become so ill that you cannot operate a motor vehicle safely. If this happens to you, you must not drive. However, in case of an emergency you may drive to the nearest place where you can safely stop.

- Other Drugs

- Illness

All drivers should know something about hazardous materials. You must be able to recognize hazardous cargo, and you must know whether or not you can haul it without having a Hazardous Materials endorsement to your CDL license.

Hazardous materials are products that pose a risk to health, safety, and property during transportation. Figure 2-15 is the hazardous material table found in the federal rules. This table lists the 9 different hazard classes.

You must follow the many rules about transporting them. The intent of the rules is to:

- Contain the product.
- Communicate the risk.
- Ensure safe drivers and equipment.

To contain the product. Many hazardous products can injure or kill on contact. To protect drivers and others from contact, the rules tell shippers how to package hazardous materials safely. Similar rules tell drivers how to load, transport, and unload bulk tanks. These are containment rules.

To communicate the risk. The shipper uses a shipper paper and package labels to warn dockworkers and drivers of the risk. Shipping orders, bills of lading, and manifests are all examples of shipping papers.

2.20 Hazardous Material Rules For All Commercial Drivers

- What Are Hazardous Materials
- Why Are There Rules?

The shipping paper describes the hazardous materials being transported. Shipping orders, bills of lading, and manifests are all shipping papers. Shippers put diamond shape hazard warning labels on most hazardous materials packages. These labels inform others of the hazard. If the diamond label won't fit on the container, shippers put the label on a tag. For example, compressed gas cylinders that will not hold a label will have tags or decals. Labels look like the examples shown in Figure 2-16.

Figure 2-15

Hazardous Materials Hazard
Class/Division Table

Class	Division	Name of Class or Division	Example
1	1.1	Mass Explosives	Dynamite
	1.2	Projection Hazards	Flares
	1.3	Mass Fire Hazards	Display Fireworks
	1.4	Minor Hazards	Ammunition
	1.5	Very Insensitive	Blasting Agents
	1.6	Extremely Insensitive	Explosive Devices
2	2.1	Flammable	Propane
	2.2	Non-Flammable	Helium
	2.3	Poisonous/Toxic	Fluorine, Compressed
3	--	Flammable	Gasoline
4	4.1	Flammable Solids	Ammonium Pierate
	4.2	Spontaneously Combustible	White Phosphorus
	4.3	Dangerous When Wet	Sodium
5	5.1	Oxidizers	Ammonium Nitrate
	5.2	Organic Peroxides	Methyl Ethyl Ketone Peroxide
6	6.1	Poison (toxic material)	Potassium Cyanide
	6.2	Infectious Substances	Anthrax Virus
7	--	Radioactive	Uranium
8	--	Corrosives	Battery Fluids
9	--	Miscellaneous hazardous materials	Polychlorinated Biphenyls (PCB)
None	--	ORM-D (Other Regulated Materials - Domestic)	Food Flavorings, Medicines

After an accident or hazardous material spill or leak, you may be injured and unable to communicate the hazards of the materials you are transporting. Fire fighters and police can prevent or reduce the amount of damage or injury at the scene if they know what hazardous materials are being carried. Your life, and the lives of others, may depend on quickly locating the hazardous materials shipping papers. For that reason, you must tab shipping papers related to hazardous materials, or keep them on top of other shipping papers. You must also keep shipping papers:

- In a pouch on the driver's door, or
- In clear view within reach while driving, or
- On the driver's seat when out of the vehicle.

Placards are used to warn others of hazardous materials. Placards are signs put on the outside of a vehicle which identify the hazard class of the cargo. A placarded vehicle must have at least 4 identical placards. They are put on the front, rear, and both sides (see Figure 9-3). Placards must be readable from all four directions. They are 10 3/4 inches square, turned upright on a point, in a diamond shape. Cargo tanks and other bulk packaging display the I.D. number of their contents on placards or orange panels.

- List of Regulated Products

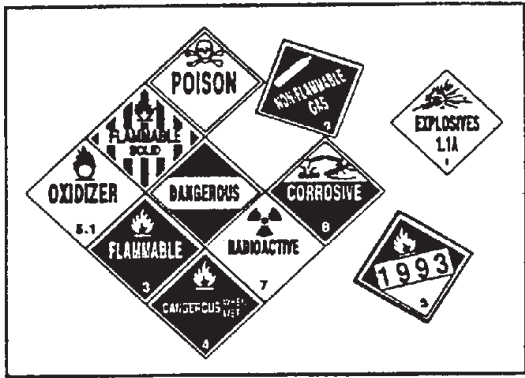


Figure 2-16
Examples of Labels

Not all vehicles carrying hazardous materials need to have placards. The rules about placards are given in Section 9 of the driver’s manual. You may drive a vehicle that carries hazardous materials if it does not require placards. If it requires placards, you must not drive it unless your driver’s license has the hazardous materials endorsement.

To ensure safe drivers and equipment: The rules require all drivers of placarded vehicles to learn how to safely load and transport hazardous products. They must have a commercial driver’s license with the hazardous materials endorsement.

To get the required endorsement you must pass a written test on material found in Section 9 of this manual. You also will need a tank endorsement if you transport hazardous products in a cargo tank on a truck larger than 26,000 pounds, gross vehicle weight rating.

Drivers who need the hazardous materials endorsement must learn the placard rules. If you do not know if your vehicle needs placards, ask your employer. Never drive a vehicle needing placards unless you have the hazardous materials endorsement. To do so is a crime. When stopped, you will be cited and you will not be allowed to drive your truck further. It will cost you time and money. A failure to placard when needed will risk your life and others if you have an accident. Emergency help will not know of your hazardous cargo.

Hazardous materials drivers must also know which products they can load together, and which they can not. These rules are also in Section 9. Before loading a truck with more than one type of product, you must know if it is safe to load them together. If you do not know, ask your employer.

Test Your Knowledge
<ol style="list-style-type: none"> 1. Common medicines for colds can make you sleepy. True or False? 2. What should you do if you do become sleepy while driving? 3. Coffee and a little fresh air will help a drinker sober up. True or False? 4. What is a hazardous materials placard? 5. Why are placards used?
<p>These questions may be on the test. If you can’t answer them all, reread Sections 2.19 and 2.20.</p>

Section 3: Transporting Cargo Safely

This Section Covers

- Inspecting Cargo
- Cargo Weight & Balance
- Securing Cargo
- Liquids in Bulk
- Other Cargo Needing Care

This section tells you about hauling cargo safely. You must understand basic cargo safety rules to get a CDL.

If you load cargo wrong or do not secure it, it can be a danger to yourself and others. Loose cargo that falls off a vehicle can cause traffic problems and others could be hurt or killed. Loose cargo could hurt or kill you during a quick stop or crash. Your vehicle could be damaged by an overload. Steering could be affected by how a vehicle is loaded, making it more difficult to control the vehicle.

Whether or not you load and secure the cargo yourself, you are responsible for:

- Inspecting your cargo.
- Recognizing overloads and poorly balanced weight.
- Knowing your cargo is properly secured.

These are covered below:

If you intend to carry hazardous material that requires placards on your vehicle, you will also have to have a hazardous materials endorsement. Section 9 of this manual has the information you need to pass the hazardous materials test.

3.1 Inspecting Cargo

As part of your pre-trip inspection, make sure the truck is not overloaded and the cargo is balanced and secured properly.

- Before Starting
- Every 3 hrs/150 miles
- After Every Break

Inspect the cargo and its securing devices again within 50 miles after beginning a trip. Make any adjustments needed. Check the cargo and securing devices as often as necessary during a trip to keep the load secure. A good habit is to inspect again:

- After you have driven for 3 hours or 150 miles.
- After every break you take during driving.

Federal, state, and local regulations for commercial vehicle weight, securing cargo, covering loads, and where you can drive large vehicles vary from place to place. Know the rules where you will be driving.

You are responsible for not being overloaded. Here are some definitions of weight you should know:

Gross vehicle weight (GVW). The total weight of a single vehicle plus its load.

Gross combination weight (GCW). The total weight of a powered unit plus trailer(s) plus the cargo.

Gross vehicle weight rating (GVWR). The maximum GVW specified by the manufacturer for a single vehicle plus its load.

Gross combination weight rating (GCWR). The maximum GCW specified by the manufacturer for a specific combination of vehicles plus its load.

Axle weight. The weight transmitted to the ground by one axle or one set of axles.

Tire load. The maximum safe weight a tire can carry at a specified pressure. This rating is stated on the side of each tire.

Suspension systems. Suspension systems have a manufacturer's weight capacity rating.

Coupling device capacity. Coupling devices are rated for the maximum weight they can pull and/or carry.

You must keep weights within legal limits. States have maximums for GVWs and axle weights. Often, maximum axle weights are set by a bridge formula. A bridge formula permits less maximum axle weight for axles that are closer together. This is to prevent overloading bridges and roadways.

Overloading can have bad effects on steering, braking, and speed control. Overloaded trucks have to go very slow on upgrades. Worse, they may gain too much speed on downgrades. Stopping distance increases. Brakes can fail when forced to work too hard.

During bad weather or in mountains, it may not be safe to operate at legal maximum weights. Take this into account before driving.

The height of the vehicle's center of gravity is very important for safe handling. A high center of gravity (cargo piled up high, or heavy cargo on top) means you are more likely to tip over. It is most dangerous in curves or if you have to swerve to avoid a hazard. It is very important to distribute the cargo so it is as low as possible. Put the heaviest parts of the cargo under the lightest parts.

3.2 Weight & Balance

- Definitions You Should Know

- Legal Weight Limits

- Don't Be Top-Heavy

- Balance the Weight

Poor weight balance can make vehicle handling unsafe. Too much weight on the steering axle can cause hard steering. It can damage the steering axle and tires. Underloaded front axles (caused by shifting weight too far to the rear) can make the steering axle weight too light to steer safely. Too little weight on the driving axles can cause poor traction. The drive wheels may spin easily. During bad weather, the truck may not be able to keep going. Weight that is loaded so it has a high center of gravity causes greater chance of rollover. On flat bed vehicles, there is also a greater chance that the load will shift to the side or fall off. Figure 3-1 shows examples of the right and wrong way to balance cargo weight.

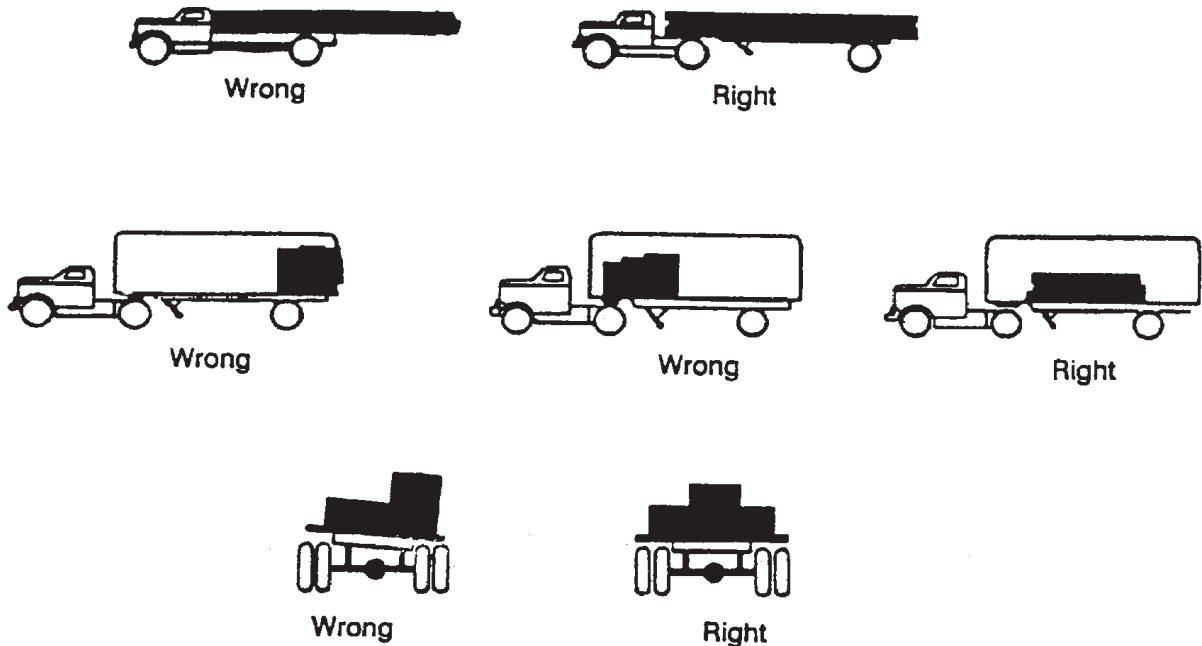


Figure 3-1

Always load cargo the right way

Test Your Knowledge	
1.	For what three things related to cargo are drivers responsible?
2.	How often must you stop while on the road to check your cargo?
3.	How is Gross Combination Weight Rating different from Gross Combination Weight ?
4.	Name two situations where legal maximum weights may not be safe.
5.	What can happen if you don't have enough weight on the front axle?
These questions may be on your test. If you can't answer them all, reread Sections 3.1 and 3.2.	

Blocking is used in the front, back, and/or sides of a piece of cargo to keep it from sliding. Blocking is shaped to fit snugly against cargo. It is secured to the cargo deck to prevent cargo movement. Bracing is also used to prevent movement of cargo. Bracing goes from the upper part of the cargo to the floor and/or walls of the cargo compartment.

On flatbed trailers or trailers without sides, cargo must be secured to keep it from shifting or falling off. In closed vans, tiedowns can also be important to prevent cargo shifting that may affect the handling of the vehicle. Tiedowns must be of the proper type and proper strength. The combined strength of all cargo tiedowns must be strong enough to lift one and one half times the weight of the piece of cargo tied down. Proper tiedown equipment must be used, including ropes, straps, chains, and tension devices (winches, ratchets, clinching components). Tiedowns must be attached to the vehicle correctly (hook, bolt, rails, rings).

Cargo should have at least one tiedown for each 10 feet of cargo. Make sure you have enough tiedowns to meet this need. No matter how small the cargo, it should have at least two tiedowns holding it.

There are special requirements for securing various heavy pieces of metal. Find out what they are if you are to carry such loads.

Front end header boards (“headache racks”) protect you from your cargo in case of a crash or emergency stop. Make sure the front end structure is in good condition. The front end structure should block the forward movement of any cargo you carry.

There are two basic reasons for covering cargo, (1) to protect people from spilled cargo, and (2) to protect the cargo from weather. Spill protection is a safety requirement in many states. Be familiar with the laws in the states you drive in.

You should look at your cargo covers in the mirrors from time to time while driving. A flapping cover can tear loose, uncovering the cargo, and possibly block your view or someone else’s.

You cannot inspect sealed loads, but you should check that you don’t exceed gross weight and axle weight limits.

Containerized loads generally are used when freight is carried part way by rail or ship. Delivery by truck occurs at the beginning and/or end of the journey. Some containers have their own tiedown devices or locks that attach directly to a special frame. Others have to be loaded onto flat bed trailers. They must be properly secured just like any other cargo.

3.3 Securing Cargo

- Blocking and Bracing
- Cargo Tiedown
- Header Boards
- Covering Cargo
- Sealed & Containerized Loads

3.4 Other Cargo Needing Special Attention

- Dry Bulk
- Hanging Meat
- Livestock
- Oversized Loads

Dry bulk tanks require special care because they often have a high center of gravity, and the load can shift. Be extremely cautious (slow and careful) going around curves and making sharp turns.

Hanging meat (suspended beef, pork, lamb) in a refrigerated truck can be a very unstable load with a high center of gravity. Particular caution is needed on sharp curves such as off ramps and on ramps. Go slow.

Livestock can move around in a trailer, causing unsafe handling. With less than a full load, use false bulkheads to keep livestock bunched together. Even when bunched, special care is necessary because livestock can lean on curves. This shifts the center of gravity and makes rollover more likely.

Over length, over width, and/or over weight loads require special transit permits. Driving is usually limited to certain times. Special equipment may be necessary such as “wide load” signs, flashing lights, flags, etc. Such loads may require a police escort or pilot vehicles bearing warning signs and/or flashing lights. These special loads require special driving care.

Test Your Knowledge
<ol style="list-style-type: none">1. What is the minimum number of tiedowns for any flat bed load?2. What is the minimum number of tiedowns for a 20 ft. load?3. Name the two basic reasons for covering cargo on an open bed.4. What must you check before transporting a sealed load?
These questions may be on your test. If you can't answer them all, reread Sections 3.3 and 3.4.

Part Two

4. Transporting Passengers

5. Air Brakes

6. Combination Vehicles

7. Doubles and Triples

8. Tank Vehicles

9. Hazardous Materials

DETERMINE WHICH OF THESE
SECTIONS YOU NEED TO STUDY

Section 4: Transporting Passengers

This Section Covers

- Definition of a Bus
- Pretrip Inspection
- Loading
- Safe Driving with Buses

Bus drivers must have a commercial driver's license if they drive a vehicle designed to seat more than 15 persons, including the driver.

Bus drivers must have a passenger endorsement on their commercial driver's license. To get the endorsement you must pass a knowledge test on Knowledge Test Chapter, Sections 2 & 4 of this manual . (If your bus has air brakes, you must also pass a knowledge test on Knowledge Test Chapter, Section 5). You must also pass the skills tests required for the class of vehicle you drive.

4.1 Pre-trip Inspection

Before driving your bus, you must be sure it is safe. You must review the inspection report made by the previous driver. Only if defects reported earlier have been certified as repaired or not needed to be repaired, should you sign the previous driver's report. This is your certification that the defects reported earlier have been fixed.

- **Vehicle Systems**

Make sure these things are in good working order before driving:

- Service brakes.
- Parking brake.
- Steering mechanism.
- Lights and reflectors.
- Tires (front wheels must not have recapped or regrooved tires).
- Horn.
- Windshield wiper or wipers.
- Rear-vision mirror or mirrors.
- Coupling devices (if present).
- Wheels and rims.
- Emergency equipment.

- **Access Doors & Panels**

As you check the outside of the bus, close any open emergency exits. Also, close any open access panels (for baggage, restroom service, engine, etc.) before driving.

- **Bus Interior**

People sometimes damage unattended buses. Always check the interior of the bus before driving to ensure rider safety. Aisles and stairwells should always be clear.

The following parts of your bus must be in safe working condition:

- Each handhold and railing.
- Floor covering.
- Signaling devices, including the restroom emergency buzzer, if the bus has a restroom.
- Emergency exit handles.

The seats must be safe for riders. All seats must be securely fastened to the bus.

Never drive with an open emergency exit door or window. The “Emergency Exit” sign on an emergency door must be clearly visible. If there is a red emergency door light, it must work. Turn it on at night or any other time you use your outside lights.

- Roof Hatches

You may lock some emergency roof hatches in a partly open position for fresh air. Do not leave them open as a regular practice. Keep in mind the bus’s higher clearance while driving with them open.

- Use Your Seatbelt!

Make sure your bus has the fire extinguisher and emergency reflectors required by law. The bus must also have spare electrical fuses, unless equipped with circuit breakers, and a first aid kit.

The driver’s seat must have a seat belt. Always use it for safety.

Do not allow riders to leave carry-on baggage in a doorway or aisle. There should be nothing in the aisle that might trip other riders. Secure baggage and freight in ways that avoid damage and:

4.2 Loading and Trip Start

- Allow the driver to move freely and easily.
- Allow riders to exit by any window or door in an emergency.
- Protect riders from injury if carry-ons fall or shift.

Watch for cargo or baggage containing hazardous materials. Most hazardous materials cannot be carried on a bus.

- Hazardous Materials

The Federal Hazardous Materials Table shows which materials are hazardous. They pose a risk to health, safety, and property during transportation. The rules require shippers to mark containers of hazardous material with the material’s name, ID number, and hazard label. There are 9 different 4 inch, diamond-shaped hazard labels like the examples shown in Figure 4-1. Watch for the diamond-shaped labels. Do not transport any hazardous material unless you are sure the rules allow it.


Buses may carry small-arms ammunition labeled ORM-D, emergency hospital supplies and drugs. You can carry small amounts of some other hazardous materials if the shipper cannot send them any other way. Buses must never carry:

- Forbidden Hazardous Materials
 - Class 2 poison, liquid Class 6 poison, tear gas, irritating material.
 - More than 100 pounds of solid Class 6 poisons.
 - Explosives in the space occupied by people, except small arms ammunition.
 - Labeled radioactive materials in the space occupied by people.
 - More than 500 pounds total of allowed hazardous materials, and no more than 100 pounds of any one class.

Riders sometimes board a bus with an unlabeled hazardous material. They may not know it is unsafe. Do not allow riders to carry on common hazards such as car batteries or gasoline.

Figure 4-1

Examples of Labels

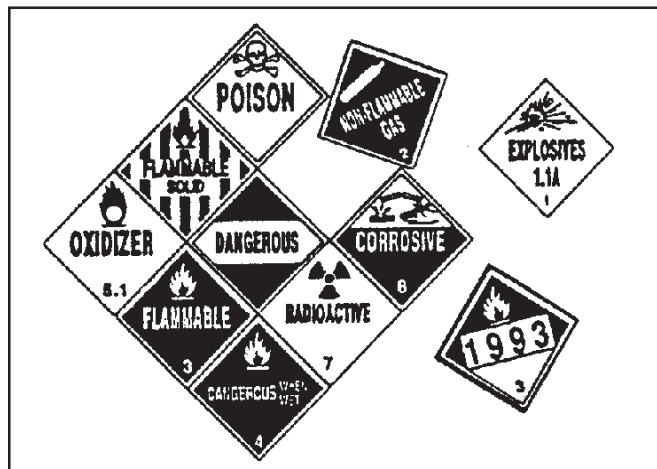

- Standee Line
- At Your Destination

No rider may stand forward of the rear of the driver's seat. Buses designed to allow standing must have a 2 inch line on the floor or some other means of showing riders where they cannot stand. This is called the standee line. All standing riders must stay behind it.

When arriving at the destination or intermediate stops announce:

- the location,
- reason for stopping,
- next departure time, and
- bus number.

Remind riders to take carry-ons with them if they get off the bus. If the aisle is on a lower level than the seats, remind riders of the stepdown. It is best to tell them before coming to a complete stop.

Charter bus drivers should not allow riders on the bus until departure time. This will help prevent theft or vandalism of the bus.

Test Your Knowledge
<ol style="list-style-type: none"> 1. Name some things to check in the interior of the bus during pre-trip inspection. 2. What are some hazardous materials you can transport by bus? 3. What are some hazardous materials you can't transport by bus? 4. What is a standee line?
These questions may be on the test. If you can't answer them all, reread Sections 4.1 and 4.2

Passenger supervision while driving. Many charter and intercity carriers have passenger comfort and safety rules. Mention rules about smoking, drinking, or use of radio/cassette/CD players at the start of the trip. Explaining the rules at the start will help to avoid trouble later on.

While driving, scan the interior of your bus as well as the road ahead, to the sides, and to the rear. You may have to remind riders about rules, or to keep arms and heads inside the bus.

Riders can stumble when getting on or off and when the bus starts or stops. Caution riders to watch their step when leaving the bus. Wait for them to sit down or brace themselves before starting. Starting and stopping should be as smooth as possible to avoid rider injury.

Occasionally, you may have a drunk or disruptive rider. You must ensure this rider's safety as well as that of others. Don't discharge such riders where it would be unsafe for them. It may be safer at the next scheduled stop, or a well-lighted area where there are other people. Many carriers have guidelines for handling disruptive riders.

The most common bus crashes. Bus crashes often happen at intersections. Use caution, even if a signal or stop sign controls other traffic. School and mass transit buses sometimes scrape off mirrors or hit passing vehicles when pulling out from a bus stop. Remember the clearance your bus needs, and watch for poles and tree limbs at stops. Know the size of the gap your bus needs to accelerate and merge with traffic. Wait for the gap your bus needs to accelerate and merge with traffic. Wait for the gap to open before leaving the stop. Never assume other drivers will brake to give you room when you signal or start to pull out.

Crashes on curves kill people and destroy buses. They result from excessive speed, often when rain or snow has made the road slippery. Every banked curve has a safe "design speed". In good weather the posted speed is safe for cars, but it may be too high for many buses. With good traction, the bus may roll over; with poor traction, it might slide off the curve. Reduce speed for curves! If your bus leans toward the outside on a banked curve, you are driving too fast.

4.3 On The Road

- Passenger Supervision

- At Stops

- Common Accidents

- Speed on Curves

- **Railroad Crossing Stops**

Activate 4-way flashers. Stop at RR Crossings. Stop your bus between 15 and 50 feet before railroad crossings. Listen and look in both directions for trains. You must open your forward door to improve your ability to see or hear an approaching train. Before crossing after a train has passed, make sure there isn't another train coming in the other direction on other tracks. If your bus has a manual transmission, never change gears while crossing the tracks.

You do not have to stop, but must slow down and carefully check for other vehicles:

- At street car crossings.
- At railroad tracks used only for industrial switching within a business district.
- Where a policeman is directing traffic.
- If a traffic signal shows green.
- At crossings marked as "exempt" or "abandoned".

- **Drawbridges**

Stop at drawbridges. Stop at drawbridges that do not have a signal light or traffic control attendant. Stop at least 50 feet before the draw of the bridge. Look to make sure the draw is completely closed before crossing. You do not need to stop, but must slow down and make sure it's safe, when:

- There is a traffic light showing green.
- The bridge has an attendant or traffic officer that controls traffic whenever the bridge opens.

4.4 After-trip Vehicle Inspection

Inspect your bus at the end of each shift. If you work for an interstate carrier, you must complete a written inspection report for each bus driven. The report must specify each bus and list any defect that would affect safety or result in a breakdown. If there are no defects, the report should say so.

Riders sometimes damage safety-related parts such as hand-holds, seats, emergency exits, and windows. If you report this damage at the end of a shift, mechanics can make repairs before the bus goes out again. Mass transit drivers should also make sure passenger signaling devices and brake-door interlocks work properly.

4.5 Prohibited Practices

Avoid fueling your bus with riders on board unless absolutely necessary. Never refuel in a closed building with riders on board.

Don't talk with riders, or engage in any other distracting activity, while driving.

Do not tow or push a disabled bus with riders aboard the vehicle, unless getting off would be unsafe. Only tow or push the bus to the nearest safe spot to discharge passengers. Follow your employer’s guidelines on towing or pushing disabled buses.

Urban mass transit coaches may have a brake and accelerator interlock system. The interlock applies the brakes and holds the throttle in idle position when the rear door is open. The interlock releases when you close the rear door. Do not use this safety feature in place of the parking brake.

4.6 Use of Brake-door Interlocks

Test Your Knowledge
<ol style="list-style-type: none">1. Does it matter where you make a disruptive passenger get off the bus?2. How far from a railroad crossing should you stop?3. When must you stop before crossing a drawbridge?4. Describe from memory the “prohibited practices” listed above.5. The rear door of a transit bus has to be open to put on the parking brake. True or False?
These questions may be on your test. If you can’t answer all, reread Sections 4.3, 4.4, 4.5, and 4.6.

Section 5: Air Brakes

This Section Covers

- Air Brake System Parts
- Dual Air Brake Systems
- Inspecting Air Brakes
- Using Air Brakes

This section tells you about air brakes. If you want to drive a truck or bus with air brakes, or pull a trailer with air brakes, you need to read this section. If you want to pull a trailer with air brakes, you also need to read Section 6: Combination Vehicles.

Air brakes use compressed air to make the brakes work. Air brakes are a good and safe way to stop large and heavy vehicles, but the brakes must be well maintained and used right.

Air brakes are really three different braking systems: service brake, parking brake, and emergency brake systems.

- The service brake system applies and releases the brake when you use the brake pedal during normal driving.
- The parking brake system applies and releases the parking brakes when you use the parking brake control.
- The emergency brake system uses parts of the service and parking brake systems to stop the vehicle in the event of a brake system failure.

The parts of these systems are discussed in greater detail below.

5.1 The Parts of an Air Brake System

There are many parts to an air brake system. You should know about the parts described in this section.

- Air Compressor

The air compressor pumps air into the air storage tanks (reservoirs). The air compressor is connected to the engine through gears or a V-belt. The compressor may be air cooled or may be cooled by the engine cooling system. It may have its own oil supply, or be lubricated by engine oil. If the compressor has its own oil supply, check the oil level before driving.

- Air Compressor Governor

The governor controls when the air compressor will pump air into the air storage tanks. When air tank pressure rises to the “cut-out” level (around 125 pounds per square inch, or “psi”), the governor stops the compressor from pumping air. When the tank pressure falls to the “cut-in” pressure (around 100 psi), the governor allows the compressor to start pumping again.

- Air Storage Tanks

Air storage tanks are used to hold compressed air. The number and size of air tanks varies among vehicles. The tanks will hold enough air to allow the brakes to be used several times even if the compressor stops working.

Compressed air usually has some water and some compressor oil in it which is bad for the air brake system. For example, the water can freeze in cold weather and cause brake failure. The water and oil tend to collect in the bottom of the air tank. Be sure that you drain the air tanks completely. Each air tank is equipped with a drain valve in the bottom. There are two types:

- Manually operated by turning a quarter turn, shown in Figure 5-1, or by pulling a cable. You must drain the tanks yourself at the end of each day of driving.
- Automatic - the water and oil is automatically expelled. They may be equipped for manual draining as well.

The automatic types are available with electric heating devices. These help prevent freeze up of the automatic drain in cold weather.

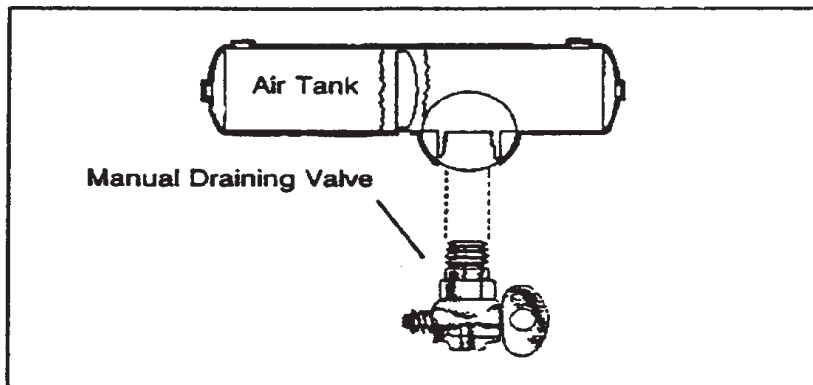


Figure 5-1
Manual Drain Valve

Some air brake systems have an alcohol evaporator to put alcohol into the air system. This helps to reduce the risk of ice in air brake valves and other parts during cold weather. Ice inside the system can make the brakes stop working.

Check the alcohol container and fill up as necessary, every day during cold weather. Daily air tank drainage is still needed to get rid of water and oil, unless the system has an automatic drain valve.

A safety relief valve is installed in the first tank the air compressor pumps air to. The safety valve protects the tank and the rest of the system from too much pressure. The valve is usually set to open at 150 psi. If the safety valve releases air, something is wrong. Have the fault fixed by a mechanic.

You apply on the brakes by pushing down the brake pedal. (It is also called the foot valve, or treadle valve) Pushing the pedal down harder applies more air pressure. Letting up on the brake pedal reduces the air pressure and releases the brakes. Releasing the brakes lets some compressed air go out of the system, so the air pressure in the tanks is reduced. It must be made up by the air compressor. Pressing and releasing the pedal unnecessarily can let air out faster than the compressor can replace it. If the pressure gets too low, the brakes won't work properly.

- Air Tank Drains

- Alcohol Evaporator

- Safety Valve

- The Brake Pedal

- Foundation Brakes

Foundation brakes are used at each wheel. The most common type is the S-cam drum brake, shown in Figure 5-2. The parts of the brake are described below:

Brake drums, shoes and linings. Brake drums are located on each end of the vehicle's axles. The wheels are bolted to the drums. The braking mechanism is inside the drum. To stop, the brake shoes and linings, are pushed against the inside of the drum. This causes friction, which slows the vehicle (and creates heat). The heat a drum can take without damage depends on how hard and how long the brakes are used. Too much heat can make the brakes "Fade" and not work properly.

S-Cam brakes. When you push the brake pedal, air is metered into each brake chamber (see Figure 5-2). Air pressure pushes the rod out, moving the slack adjuster, thus twisting the brake cam shaft. This turns the S-cam (so called because it is shaped like the letter "S"). The S-cam forces the brake shoes away from one another and presses them against the inside of the brake drum. When you release the brake pedal, the S-cam rotates back and a spring pulls the brake shoes away from the drum, letting the wheels roll freely again.

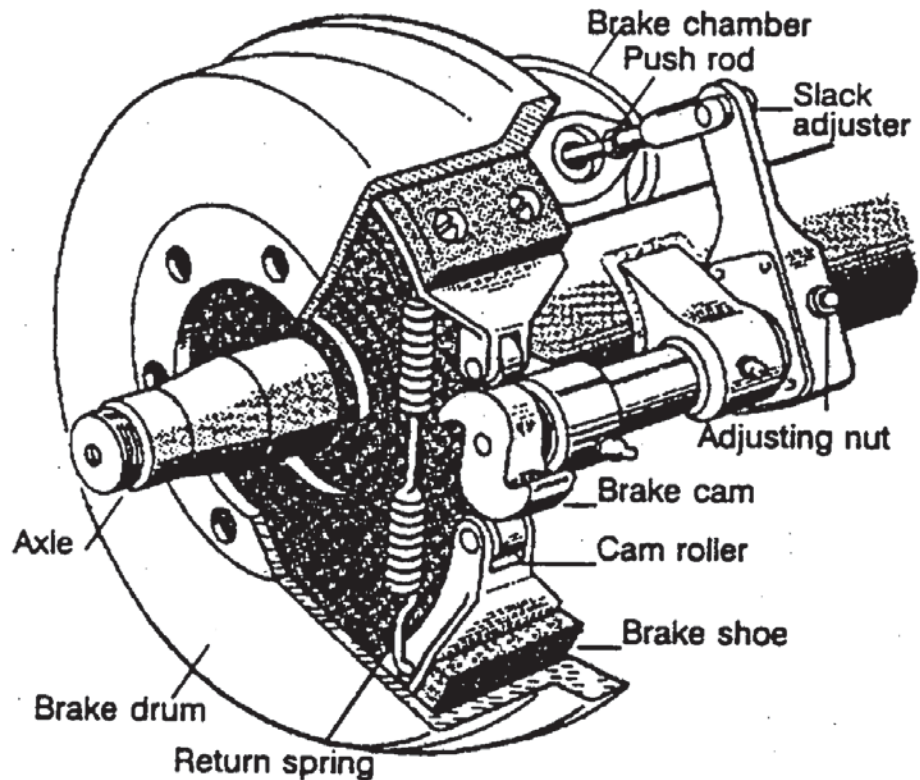


Figure 5-2

S-cam Air Brake

Wedge brakes. In this type of brake, the brake chamber push rod pushes a wedge directly between the ends of two brake shoes. This shoves them apart and against the inside of the brake drum. Wedge brakes may have a single brake chamber, or two brake chambers, pushing wedges in at both ends of the brake shoes. Wedge type brakes may be self-adjusting or may require manual adjustment.

Disc brakes. In air-operated disc brakes, air pressure acts on a brake chamber and slack adjuster, like S-cam brakes. But instead of the S-cam, a “power screw” is used. The pressure of the brake chamber on the slack adjuster turns the power screw. The power screw clamps the disc or rotor between the brake pads of a caliper, similar to a large C-clamp.

Wedge brakes and disc brakes are less common than S-cam brakes.

All air-braked vehicles have a pressure gauge connected to the air tank. If the vehicle has a dual air brake system, there will be a gauge for each half of the system, or a single gauge with two needles. Dual systems will be discussed later. These gauges tell you how much pressure is in the air tanks.

The application pressure gauge shows how much air pressure you are applying to the brakes. (This gauge is not on all vehicles.) Increasing application pressure to hold the same speed means the brakes are fading. You should slow down and use a lower gear. The need for increased pressure can also be caused by brakes out of adjustment, air leaks, or mechanical problems.

A low air pressure warning signal is required on vehicles with air brakes. A warning signal you can see must come on before the air pressure in the tank falls below 60 psi. The warning is usually a red light. A buzzer may also come on.

On large buses it is common for the low pressure warning devices to signal at 80-85 psi.

Drivers behind you must be warned when you put your brakes on. The air brake system does this with an electric switch that works by air pressure. The switch turns on the brake lights when you put on the air brakes.

Some older vehicles (made before 1975) have a front brake limiting valve and a control in the cab. The control is usually marked “normal” and slippery”. When you put the control in the “slippery” position, the limiting valve cuts the “normal” air pressure to the front brakes by half. Limiting valves were used to reduce the chance of the front wheels skidding on slippery surfaces. However, they actually reduce the stopping power of the vehicle. Front wheel braking is good under all conditions. Tests have shown front wheel skids from braking are not likely even on ice. Make sure the control **is in the “normal” position to have normal stopping power.**

Many vehicles have automatic front wheel limiting valves. They reduce the air to the front brakes except when the brakes are put on very hard (60 psi or more application pressure). These valves cannot be controlled by the driver.

All trucks, truck tractors and buses must be equipped with emergency brakes and parking brakes. They must be held on by mechanical force (because air pressure can eventually leak away). Spring brakes are usually used to meet these needs. When driving, powerful springs are held back by air pressure. If the air pressure is removed, the springs put on the brakes. A parking brake control in the cab allows the driver to let the air out of the spring brakes. This lets the springs put the brakes on. A leak in the air brake system which causes all the air to be lost will also cause the springs to put on the brakes.

- Supply Pressure Gauges
- Application Pressure Gauges
- Low Air Pressure Warning
- Stop Light Switch
- Front Brake Limiting Valve
- Spring Brakes

Tractor and straight truck spring brakes will come fully on when air pressure drops to approximately 40 psi, typically 20 - 30 psi. Do not wait for the brakes to come on automatically. When the low air pressure warning light and buzzer first come on, bring the vehicle to a safe stop right away, while you can still control the brakes.

The braking power of spring brakes depends on the brakes being in adjustment. If the brakes are not adjusted right, neither the regular brakes nor the emergency/parking brakes will work right.

- Parking Brake Controls

In newer vehicles with air brakes, you put on the parking brakes using a diamond-shaped, yellow, push-pull control knob. You pull the knob out to put the parking brakes (spring brakes) on, and push it in to release them. On older vehicles, the parking brakes may be controlled by a lever. Use the parking brakes whenever you park.

Caution: Never push the brake pedal down while the spring brakes are on. If you do, the brakes could be damaged by the combined forces of the springs and the air pressure. Many brake systems are designed so this will not happen. But not all systems are set up that way, and those that are may not always work. It is much better to develop the habit of not pushing the brake pedal down when the spring brakes are on.

Dual parking control valves. When main air pressure is lost, the spring brakes come on. Some vehicles, such as buses, have a separate air tank which can be used to release the spring brakes. This is so you can move the vehicle in an emergency. One of the valves is a push-pull type and is used to put on the spring brakes for parking. The other valve is spring loaded in the “out” position. When you push the control in, air from the separate air tank releases the spring brakes so you can move. When you release the button, the spring brakes come on again. There is only enough air in the separate tank to do this a few times. Therefore, plan carefully when moving. Otherwise, you may be stopped in a dangerous location when the separate air supply runs out.

Test Your Knowledge
<ol style="list-style-type: none">1. Why must air tanks be drained?2. What is a supply pressure gauge used for?3. All vehicles with air brakes must have a low air pressure warning signal. True or False?4. What are spring brakes?5. Front wheel brakes are good under all conditions. True or False?
These questions may be on your test. If you can't answer all, reread Section 5.1.

Most newer heavy-duty vehicles use dual air brake systems for safety. A dual air brake system has two separate air brake systems which use a single set of brake controls. Each system has its own air tanks, hoses, lines, etc. One system typically operates the regular brakes on the rear axle and/or axles. The other system operates the regular brakes on the front axle (and possibly one rear axle). Both systems supply air to the trailer (if there is one). The first system is called the “primary” system. The other is called the “secondary” system.

Before driving a vehicle with a dual air system, allow time for the air compressor to build up a minimum of 100 psi pressure in both the primary and secondary systems. Watch the primary and secondary air pressure gauges (or needles, if the system has two needles in one gauge). Pay attention to the low-air pressure warning light and buzzer. The warning light and buzzer should shut off when air pressure in both systems rises to a value set by the manufacturer. This value must be greater than 60 psi.

The warning light and buzzer should come on before the air pressure drops below 60 psi in either system. If this happens while driving, you should stop right away and safely park the vehicle. If one air system is very low on pressure, either the front or the rear brakes will not be operating fully. This means it will take you longer to stop. Bring the vehicle to a safe stop and have the air brake system fixed.

5.2 Dual Air Brake

You should use the basic seven-step inspection procedure described in Knowledge Test Chapter, Section 2 to inspect your vehicle. There are more things to inspect on a vehicle with air brakes than on one without them.

Check air compressor drive belt. (If compressor is belt-driven.) If the air compressor is belt-driven, check the condition and tightness of the belt. The belt should be in good condition. If gear driven, check for proper mounting and tightness of mounting belts.

Check manual slack adjusters on S-Cam brakes. Park on level ground and chock the wheels to prevent the vehicle from moving. Release the parking brakes so you can move the slack adjusters. Use gloves and pull hard on each slack adjuster that you can get to. If a slack adjuster moves more than about one inch where the push rod attaches to it, it probably needs adjustment. Adjust it or have it adjusted. Vehicles with too much brake slack can be very hard to stop. Out-of-adjustment brakes are the most common problem found in roadside inspections. Be safe; check the slack adjusters.

Check brake drums (or discs), linings, and hoses. Brake drums (or discs) must not have cracks longer than one half the width of the friction area. Linings (friction material) must not be loose, soaked with oil or grease. They must not be dangerously thin (less than 1/4” thick). Mechanical parts must be in place, not broken or missing. Check the air hoses connected to the brake chambers to make sure they aren’t cut or worn due to rubbing.

5.3 Inspecting Air Brake Systems

- During Step 2
Engine Compartment Checks
- During Step 5
Walkaround Inspecting

- Step 7
Final Air Brake Check

Instead of the hydraulic brake check shown in Knowledge Chapter, Section 2 “Step 7: Check Brake System”, conduct an Air Brake System Check in the following manner:

Check rate of air pressure buildup. When the engine is at operating speed (about 1500 RPM) the pressure should build from 85 to 100 psi within 45 seconds with a dual air system. If the vehicle has oversized tanks (check the manufacturer’s specifications) the buildup time could be longer and still be safe. In vehicles with single air systems (pre 1975), typical requirements are to have the pressure to build from 50 to 90 psi within three minutes with the engine at an idle speed (600 - 900 RPM). In any case, the governor should cut out between 100 - 125 psi.

Test air leakage rate. With the air system fully charged (typically 125 psi), shut off the engine, chock the wheels, turn the ignition key back on to activate electronic gauges, release all parking brakes, and time the air pressure drop. The air pressure drop should be less than 2 psi in one minute for a single vehicle (three for a combination vehicle). Then apply 90 psi pressure with the brake pedal. After the initial pressure drop (may be 10 psi or more), the air pressure should not drop more than 3 psi in one minute for single vehicles (four psi for a combination vehicle). If the vehicle loses more than that, the vehicle is not safe to drive and must be fixed.

Test low pressure warning signal. With the brakes still released, wheels chocked, and the engine off, fan off the air pressure by stepping on and off the brake pedal. The low pressure warning signal (light and/or buzzer) should come on when the pressure drops to approximately 60 psi. If this warning signal does not come on, you could lose air pressure and you would not know it. This would result in the emergency/parking brakes coming on.

Check that the spring brakes come on automatically. Continue to fan off the air pressure by pumping the brake pedal. The parking brake knob should pop out when the pressure falls to approximately 40psi indicating that the vehicle’s parking brake has been set. On a combination vehicle, both knobs must pop out, indicating both tractor and trailer parking brakes have set.

Check air compressor governor cut-in and cut-out pressures. Pumping by the air compressor should start at about 100 psi and stop at about 125 psi. (Check manufacturer’s specifications.) Run the engine at a fast idle. The air governor should cut-out the air compressor at about the manufacturer’s specified pressure. The air pressure shown by your gauge(s) will stop rising. With the engine idling, step on and off the brake to reduce the air tank pressure. The compressor should cut-in at about the manufacturer’s specified cut-in pressure. The pressure should begin to rise.

If the air governor does not work as described above, it may need to be fixed. A governor that does not work right may not keep enough air pressure for safe driving.

Test parking brake. Stop the vehicle, put the parking brake on, and gently pull against it in a low gear to test that the parking brake will hold.

Test service brakes. Wait for normal air pressure, release the parking brake, move the vehicle forward slowly (about 5 mph), and apply the brakes firmly using the brake pedal. Note any vehicle “pulling” to one side, unusual feel, or delayed stopping action.

This test may show you problems which you otherwise wouldn't know about until you needed the brakes on the road.

Test Your Knowledge
<ol style="list-style-type: none">1. What is a dual air brake system?2. What are the slack adjusters?3. How can you check slack adjusters?4. How can you test the low pressure warning signal?5. How can you check that the spring brakes come on automatically?6. What are the maximum leakage rates?
These questions may be on your test. If you can't answer them all, reread Sections 5.2 and 5.3.

Push the brake pedal down. Control the pressure so the vehicle comes to a smooth, safe stop. If you have a manual transmission, don't push the clutch in until the engine RPM is down close to idle. When stopped, select a starting gear.

If somebody suddenly pulls out in front of you, your natural response is to hit the brakes. This is a good response if there's enough distance to stop and you use the brakes correctly.

You should brake in a way that will keep your vehicle in a straight line and allow you to turn if it becomes necessary. You can use the "controlled braking" method or the "stab braking" method.

Controlled braking. With this method, you apply the brakes as hard as you can without locking the wheels. Keep steering wheel movements very small while doing this. If you need to make a larger steering adjustment or if the wheels lock, release the brakes. Reapply the brakes as soon as you can.

Stab braking. (Only on vehicles without anti-lock brake systems.)

- Apply your brakes all the way.
- Release brakes when wheels lock up.
- As soon as the wheels start rolling, apply the brakes fully again. (It can take up to one second for the wheels to start rolling after you release the brakes. If you reapply the brakes before the wheels start rolling, the vehicle won't straighten out.)

Note: If you drive a vehicle with anti-lock brakes, you should read and follow the directions found in the Owner's Manual for stopping quickly.

5.4 Using Air Brakes

- Normal Stops
- Emergency Stops

- Stopping Distance

We talked about stopping distance in Knowledge Test Chapter, Section 2 under “Speed and Stopping Distance.” With air brakes there is an added delay: the time required for the brakes to work after the brake pedal is pushed. With hydraulic brakes (used on cars and light/medium trucks), the brakes work instantly. However, with air brakes, it takes a little time (one half second or more) for the air to flow through the lines to the brakes. Thus, the total stopping distance for vehicles with air brake systems is made up of four different factors.

$$\begin{array}{rcl} & \text{Perception Distance} & \\ + & \text{Reaction Distance} & \\ + & \text{Brake Lag Distance} & \\ + & \text{Effective Braking Distance} & \\ = & \text{Total Stopping Distance} & \end{array}$$

The air brake lag distance at 55 mph on dry pavement adds about 32 feet. So at 55 mph for an average driver under good traction and brake conditions, the total stopping distance is over 300 feet. This is longer than a football field.

- Brake Fading or Failure

Brakes are designed so brake shoes or pads rub against the brake drum or disks to slow the vehicle. Braking creates heat, but brakes are designed to take a lot of heat. However, brakes can fade or fail from excessive heat caused by using them too much and not relying on the engine braking effect.

Excessive use of the service brakes results in overheating and can lead to brake fade. Brake fade results from excessive heat causing chemical changes in the brake lining which reduces friction, and also causes expansion of the brake drums. As the overheated drums expand, the brake shoes and linings have to move farther to contact the drums, and the force of this contact is also reduced. Continued overuse may increase brake fade until the vehicle cannot be slowed down or stopped at all.

Brake fade is also affected by adjustment. To safely control a vehicle, every brake must do its share of the work. Brakes out of adjustment will stop doing their share before those that are in adjustment. The other brakes can then overheat and fade and there will not be sufficient braking available to control the vehicle(s). Brakes can get out of adjustment quickly, especially when they are hot. Therefore, brake adjustment must be checked frequently.

Remember: The use of brakes on a long and/or steep downgrade is only a supplement to the braking effect of the engine. Once the vehicle is in the proper low gear, the following is the proper braking technique:

- Apply the brakes just hard enough to feel a definite slowdown.
- When your speed has been reduced to approximately 5 mph below your “safe” speed, release the brakes. [This brake application should last for about three (3) seconds.]
- When your speed has increased to your “safe” speed, repeat steps 1 and 2.

For example, if your “safe” speed is 40 mph you would not apply the brakes until your speed reaches 40 mph. You now apply the brakes hard enough to gradually reduce your speed to 35 mph and then release the brakes. Repeat this as often as necessary until you have reached the end of the downgrade.

If the low air pressure warning comes on, **stop and safely park your vehicle as soon as possible.** There might be an air leak in the system. Controlled braking is possible only while enough air remains in the air tanks. The spring brakes will come on when the air pressure drops into the range 20 to 45 psi. A heavily loaded vehicle will take a long distance to stop, because the spring brakes do not work on all axles. Lightly loaded vehicles or vehicles on slippery roads may skid out of control when the spring brakes come on. It is much safer to stop while there is enough air in the tanks to use the foot brakes.

Any time you park, use the parking brakes, except as noted below. Pull the parking brake control knob out to apply the parking brakes, push it in to release them. The control will be a yellow, diamond-shaped knob labeled “parking brakes” on newer vehicles. On older vehicles, it may be a round blue knob or some other shape (including a lever that swings from side to side or up and down).

Don’t use the parking brakes if the brakes are very hot (from just having come down a steep grade), or if the brakes are very wet in freezing temperatures. If they are used while they are very hot, they can be damaged by the heat. If they are used in freezing temperatures when the brakes are very wet, they can freeze so the vehicle can not move. Use wheel chocks to hold the vehicle. Let hot brakes cool before using the parking brakes. If the brakes are wet, use the brakes lightly while driving in a low gear to heat and dry them.

If your vehicle does not have automatic air tank drains, drain your air tanks at the end of each working day to remove moisture and oil. Otherwise, the brakes could fail.

- Proper Braking Technique

- Low Air Pressure

- Parking Brakes

Never leave your vehicle unattended without applying the parking brakes or chocking the wheels. Your vehicle might roll away and cause injury and damage.

Test Your Knowledge

1. Why should you be in the correct gear before starting down a hill?
2. What factors can cause brakes to fade or fail?
3. The use of brakes on a long steep downgrade is only a supplement to the braking effect of the engine. True or False?
4. If you are away from your vehicle only a short time, you don't need to use the parking brake. True or False?
5. How often should you drain air tanks?

These questions may be on your test. If you can't answer them all, reread Section 5.4.

Section 6: Combination Vehicles

This section provides information needed to pass the tests for combination vehicles (tractor-trailer, doubles, triples, straight truck and trailer). The information is only to give you the minimum knowledge needed for driving common combination vehicles. You should also study Section 7 if you need to pass the tests for doubles-triples.

This Section Covers

- Driving Combinations
- Combination Vehicle Air Brakes
- Inspecting Combinations

Combination vehicles are usually heavier, longer, and require more driving skill than single commercial vehicles. This means that drivers of combination vehicles need more knowledge and skill than drivers of single vehicles. In this section, we talk about some important safety factors that apply specifically to combination vehicles.

6.1 Driving Combination Vehicles Safely

More than half of truck driver deaths in crashes are the result of truck rollovers. When more cargo is piled up in a truck, the “center of gravity” moves higher up from the road. The truck becomes easier to turn over. Fully loaded rigs are 10 times more likely to roll over in a crash than empty rigs.

- Rollover Risks

The following two things will help you prevent rollover: keep the cargo as close to the ground as possible, and drive slowly around turns. Keeping cargo low is even more important in combination vehicles than in straight trucks. Also, keep the load centered on your rig. If the load is to one side so it makes a trailer lean, a rollover is more likely. Make sure your cargo is centered and spread out as much as possible. (Cargo distribution is covered in the Knowledge Test Chapter, Section 3 of this manual).

Rollovers happen when you turn too fast. Drive slowly around corners, on ramps, and off ramps. Avoid quick lane changes, especially when fully loaded.

Trucks with trailers have a dangerous “crack-the-whip” effect. When you make a quick lane change, the crack-the-whip effect can turn the trailer over. There are many accidents where only the trailer has overturned.

- Steer Gently

“Rearward amplification” causes the crack-the-whip effect. Figure 6-1 shows eight types of combination vehicles and the rearward amplification each has in a quick lane change. Rigs with the least crack-the-whip effect are shown at the top and those with the most, at the bottom. Rearward amplification of 2.0 in the chart means that the rear trailer is twice as likely to turn over as the tractor. You can see that triples have a rearward amplification of 3.5. This means you can roll the last trailer of triples 3.5 times as easily as a five-axle tractor-trailer.

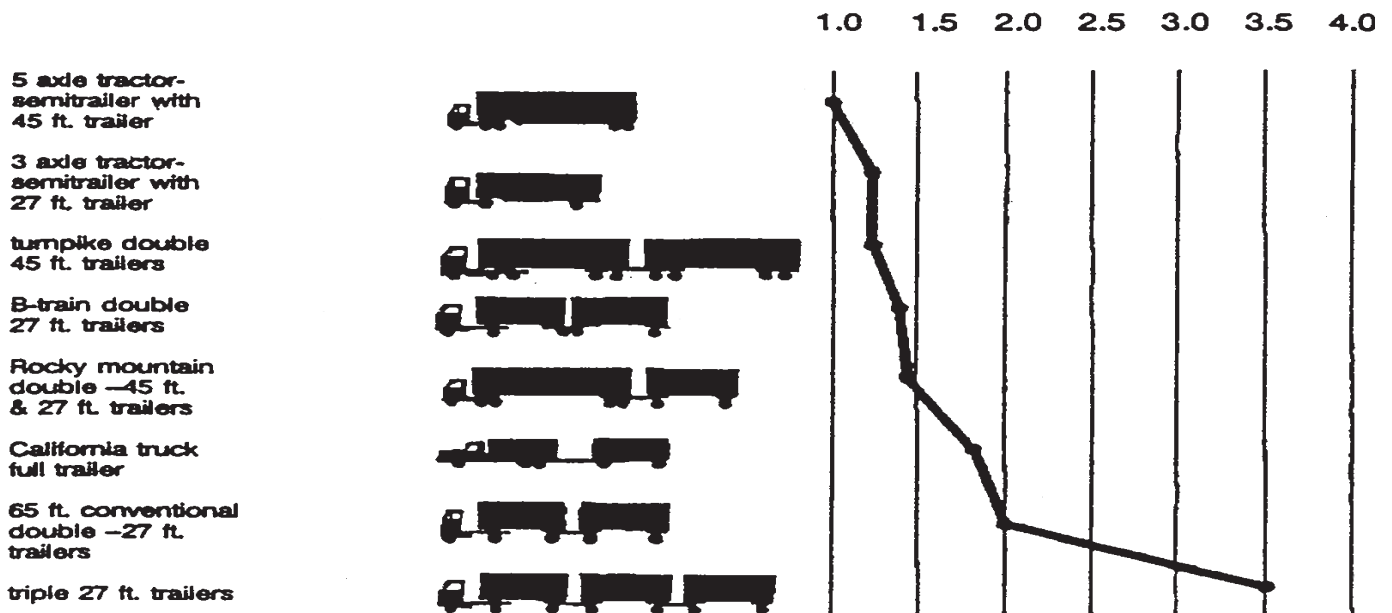


Figure 6-1

Influence of Combination Type On Rearward Amplification

(from R.D. Ervin, R.L. Nisonger, C.C. MacAdam, and P.S. Fancher, “Influence of size and weight variables on the stability and control properties of heavy trucks”, University of Michigan Transportation Research Institute, 1983.)

- Brake Early

Steer gently and smoothly when you are pulling trailers. If you make a sudden movement with your steering wheel, your trailer could tip over. Follow far enough behind other vehicles (at least one second for each ten feet of your vehicle length, plus another second if going over 40 mph). Look far enough down the road to avoid being surprised and having to make a sudden lane change. At night, drive slowly enough to see obstacles with your headlights before it is too late to change lanes or stop gently. Slow down to a safe speed **before** going into a turn.

Control your speed whether fully loaded or empty. Large combination vehicles take longer to stop when they are empty than when they are fully loaded. When lightly loaded, the very stiff suspension springs and strong brakes give poor traction and makes it very easy to lock up the wheels. Your trailer can swing out and strike other vehicles. Your tractor can jackknife very quickly (Figure 6-2). You also must be very careful about driving “bobtail” tractors (tractors without semitrailers). Tests have shown that bobtails can be very hard to stop smoothly. It takes them longer to stop than a tractor-semitrailer loaded to maximum gross weight.

- Prevent Trailer Skids

In any combination rig, allow lots of following distance and look far ahead, so you can brake early. Don’t be caught by surprise and have to make a “panic” stop.

When the wheels of a trailer lock up, the trailer will tend to swing around. This is more likely to happen when the trailer is empty or lightly loaded. This type of jackknife is often called a “trailer jackknife”. This is shown in Figure 6-3.

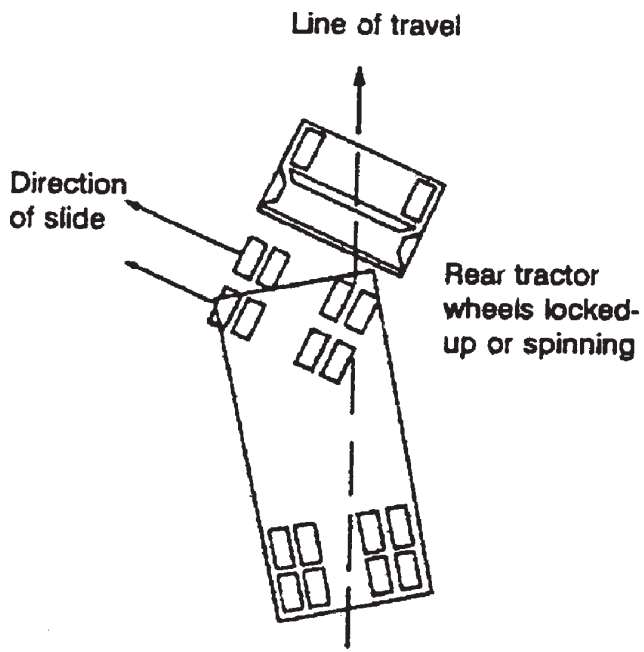


Figure 6-2
Tractor Jackknife

The procedure for stopping a trailer skid is as follows:

Recognize the skid. The earliest and best way to recognize that the trailer has started to skid is by seeing it in your mirrors. Any time you apply the brakes hard, check the mirror to make sure the trailer is staying where it should be. Once the trailer swings out of your lane, it's very difficult to prevent a jackknife.

Release the brakes to get traction back. Do not use the trailer hand brake (if you have one) to "straighten out the rig." This is the wrong thing to do since the brakes on the trailer wheels caused the skid in the first place. Once the trailer wheels grip the road again, the trailer will start to follow the tractor and straighten out.

Note: Once the angle between the tractor and trailer reaches 12 - 15°, a jackknife is inevitable.

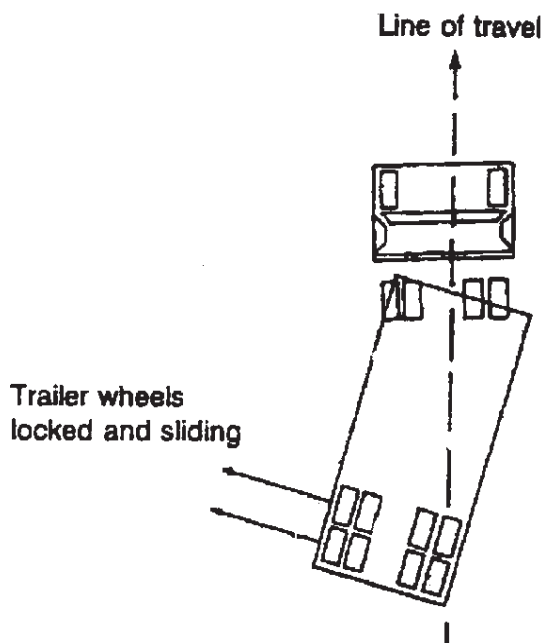


Figure 6-3
Trailer Jackknife

- Turn Wide

When a vehicle goes around a corner, the rear wheels follow a different path than the front wheels. This is called offtracking or “cheating”. Figure 6-4 shows how offtracking causes the path followed by a tractor-trailer to be wider than the rig itself. Longer vehicles will offtrack more. The rear wheels of the powered unit (truck or tractor) will offtrack some, and the rear wheels of the trailer will offtrack even more. If there is more than one trailer, the rear wheels of the last trailer will offtrack the most. Steer the front end wide enough around a corner so the rear end does not run over the curb, pedestrians, other vehicles, etc. However, keep the rear of your vehicle close to the curb. This will stop other drivers from passing you on the right. If you cannot complete your turn without entering other traffic lanes, turn wide as you **complete the turn** (Figure 6-5). This is better than swinging wide to the left before starting the turn because it will keep other drivers from passing you on the right. If drivers pass on the right, you might collide with them when you turn.

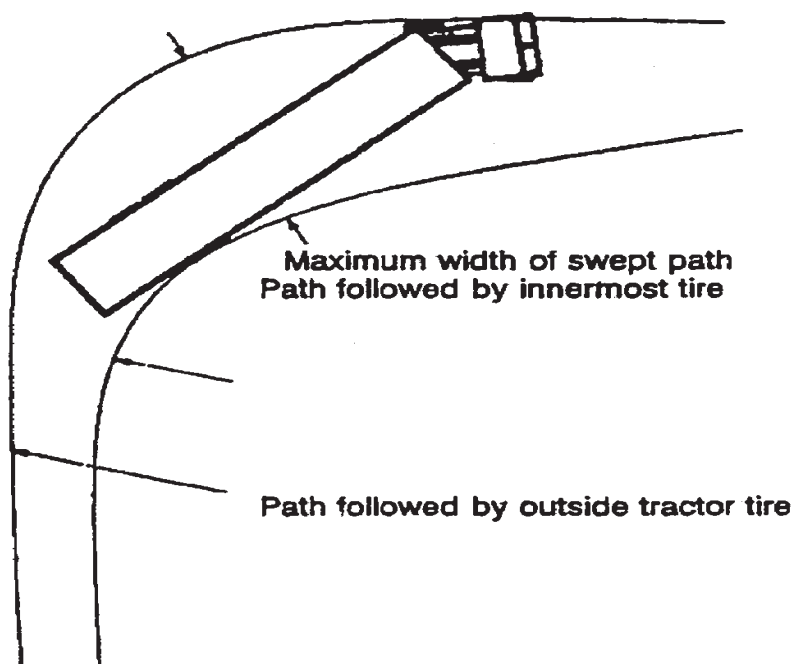


Figure 6-4

Offtracking in a 90-degree turn

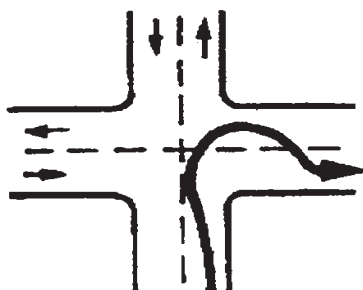


Figure 6-5

Do this so cars don't try to pass you on the right.

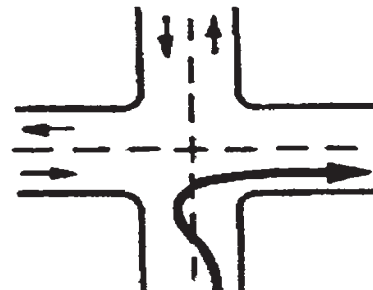


Figure 6-6

Don't do this!

Test Your Knowledge
<ol style="list-style-type: none"> 1. What two things are important to prevent rollover? 2. When you turn suddenly while pulling doubles, which trailer is most likely to turn over? 3. Why should you not use the trailer hand brake to straighten out a jackknifing trailer? 4. What is offtracking? 5. Why should you turn like it shows in Figure 6-5?
These questions may be on your test. If you can't answer them all, reread Section 6.1.

You should study “Section 5: Single Vehicle Air Brakes” before reading this. In combination vehicles the braking system has parts to control the trailer brakes, in addition to the parts described in Section 5. These parts are described below:

6.2 Combination Vehicle Air Brakes

The trailer hand valve (also called the trolley valve or Johnson bar) works the trailer brakes. The trailer hand valve should be used only to test the trailer brakes. Do not use it in driving because of the danger of making the trailer skid. The foot brake sends air to all of the brakes on the vehicle (including the trailer(s)). There is much less danger of causing a skid or jackknife when using the foot brake.

- Trailer Hand Valve

Never use the hand valve for parking, because all the air might leak out, unlocking the brakes (in trailers that don't have spring brakes). Always use the **parking brakes** when parking. If the trailer does not have spring brakes, use wheel chocks to keep the trailer from moving.

The tractor protection valve keeps air in the tractor or truck should the trailer break away or develop a bad leak. The tractor protection valve is controlled by the “trailer air supply” control valve in the cab. The control valve allows you to open and shut the tractor protection valve. The tractor protection valve will close automatically if air pressure is low (in the range of 20 to 45 psi). When the tractor protection valve closes, it stops any air from going out of the tractor. It also lets the air out of the trailer emergency line. This causes the trailer emergency brakes to come on. (Emergency brakes are covered later.)

- Tractor Protection Valve

The trailer air supply control on newer vehicles is a red 8-sided knob which you use to control the tractor protection valve. You push it in to supply the trailer with air, and pull it out to shut the air off and put on the trailer emergency brakes. The valve will pop out (thus closing the tractor protection valve) when the air pressure drops into the range 20 to 45 psi. Tractor protection valve controls or “emergency” valves on older vehicles may not operate automatically. There may be a lever rather than a knob. The “normal” position is used for pulling a trailer. The “emergency” position is used to shut the air off and put on the trailer emergency brakes.

- Trailer Air Supply Control

Every combination vehicle has two air lines, the service line and the **emergency** line. They run between each vehicle (tractor to trailer, trailer to dolly, dolly to second trailer, etc.).

- Trailer Air Lines

Service Air Line. The service line (also called the control line or signal line) carries air which is controlled by the foot brake or the trailer hand brake. Depending on how hard you press the foot brake or hand valve, the pressure in the service line will similarly change. The service line is connected to **relay valves**. These valves allow the trailer brakes to be applied more quickly than would otherwise be possible.

Emergency Air Line. The emergency line (also called the supply line) has two purposes. First, it supplies air to the trailer air tanks. Secondly, the emergency line controls the emergency brakes on combination vehicles. **Loss of air pressure** in the emergency line causes the trailer emergency brakes to come on. The pressure loss could be caused by a trailer breaking loose, thus tearing apart the emergency air hose. Or it could be caused by a hose, metal tubing, or other part which breaks, letting the air out. When the emergency line loses pressure, it also causes the tractor protection valve to close (the air supply knob will pop out).

Emergency lines are often coded with the color red (red hose, red couplers, or other parts) to keep from getting them mixed up with the blue service line.

- Hose Couplers
(Glad Hands)

Glad hands are coupling devices used to connect the service and emergency air lines from the truck or tractor to the trailer. The couplers have a rubber seal which prevents air from escaping. Clean the couplers and rubber seals before a connection is made. When connecting the glad hands, press the two seals together with the couplers at a 90 degree angle to each other. A turn of the glad hand attached to the hose will join and lock the couplers.

Some vehicles have “dead end” or dummy couplers to which the hoses may be attached when they are not in use. This will prevent water and dirt from getting into the coupler and the air lines. Use the dummy couplers when the air lines are not connected to a trailer. If there are no dummy couplers, the glad hands can sometimes be locked together (depending on the couplings). It is very important to keep the air supply clean.

When coupling, make sure to couple the proper glad hands together. To help avoid mistakes, colors are sometimes used. Blue is used for the service lines and red for the emergency (supply) lines. Sometimes, metal tags are attached to the lines with the words “service” and “emergency” stamped on them.

If you do cross the air lines, supply air will be sent to the service line instead of going to charge the trailer air tanks. Air will not be available to release the trailer spring brakes (parking brakes). If the spring brakes don’t release when you push the trailer air supply control, check the air line connections.

Older trailers do not have spring brakes. If the air supply in the trailer air tank has leaked away, there will be no emergency brakes, and the trailer wheels will turn freely. If you crossed the air lines, you could drive away but you wouldn't have trailer brakes. **This would be very dangerous.** Always test the trailer brakes before driving, with the hand valve or by pulling the trailer air supply valve. Pull gently against them in a low gear to make sure the brakes work.

Each trailer and converter dolly has one or more air tanks. They are filled by the **emergency (supply) line** from the tractor. They provide the air pressure used to operate trailer brakes. Air pressure is sent from the air tanks to the brakes by relay valves. The pressure in the **service line tells** how much pressure the relay valves should send to the trailer brakes. The pressure in the service line is controlled by the brake pedal (and the trailer hand brake).

It is important that you don't let water and oil build up in the air tanks. If you do, the brakes may not work correctly. Each tank has a drain valve on it, and you should drain each tank every day. If your tanks have automatic drains, they will keep most moisture out. But you should still open the drains to make sure.

Shut-off valves (also called cut-out-cocks) are used in the service and supply air lines at the back of trailers used to tow other trailers. These valves permit closing the air lines off when another trailer is not being towed. You must check that all shut-off valves are in the open position except the ones at the back of the last trailer, which must be **closed**.

Newer trailers have spring brakes just like trucks and truck tractors. However, converter dollies and trailers built before 1975 are not required to have spring brakes. Those that do not have spring brakes have emergency brakes which work from the air stored in the trailer air tank. The emergency brakes come on whenever air pressure in the emergency line is lost. These trailers have no parking brakes. The emergency brakes come on whenever the air supply knob is pulled out or the trailer is disconnected. But the brakes will hold only as long as there is air pressure in the air tank. Eventually, the air will leak away, and then there will be no brakes. Therefore, **it is very important for safety that you use wheel chocks when you park trailers without spring brakes.**

A major leak in the **emergency** line will cause the tractor protection valve to close and the trailer emergency brakes to come on.

You may not notice a major leak in the service line until you try to put the brakes on. Then, the air loss from the leak will lower the air tank pressure quickly. If it goes low enough, the trailer emergency brakes will come on.

- Trailer Air Tanks

- Shut-Off Valves

- Trailer Service, Parking and Emergency Brakes

Test Your Knowledge
<ol style="list-style-type: none"> 1. Why should you not use the trailer hand valve while driving? 2. Describe what the trailer air supply control does. 3. Describe what the service line is for. 4. What is the emergency air line for? 5. Why should you use chocks when parking a trailer without spring brakes? 6. Where are shut-off valves?
These questions may be on your test. If you can't answer all, reread Section 6.2.

6.3 Coupling and Uncoupling

Knowing how to couple and uncouple correctly is basic to safe operation of combination vehicles. Wrong coupling and uncoupling can be very dangerous. General coupling and uncoupling steps are listed below. There are differences between different rigs, so learn the details of coupling and uncoupling the truck(s) you will operate.

- Coupling
Tractor-Semitrailers

Step 1. Inspect Fifth Wheel

- Check for damaged/missing parts.
- Check to see that mounting to tractor is secure, no cracks in frame, etc.
- Be sure that the fifth wheel plate is greased as required. Failure to keep the fifth wheel plate lubricated could cause steering problems because of friction between the tractor and trailer.
- Check if fifth wheel is in proper position for coupling.
 - Wheel tilted down towards rear of tractor.
 - Jaws open.
 - Safety unlocking handle in the automatic lock position.
- If you have a sliding fifth wheel, make sure it is locked.
- Make sure the trailer kingpin is not bent or broken.

Step 2. Inspect Area and Chock Wheels

- Make sure area around the vehicle is clear.
- Be sure trailer wheels are chocked or spring brakes are on.
- Check that cargo (if any) is secured against movement due to tractor being coupled to the trailer.

Step 3. Position Tractor

- Put the tractor directly in front of the trailer. (Never back under the trailer at an angle, because you might push the trailer sideways and break the landing gear).
- Check position, using outside mirrors, by looking down both sides of the trailer.

Step 4. Back Slowly

- Back until fifth wheel just touches the trailer.
- Don't hit the trailer.

Step 5. Secure Tractor

- Put on the parking brake.
- Put transmission in neutral.

Step 6. Check Trailer Height

- The trailer should be low enough that it is raised slightly by the tractor when the tractor is backed under it. Raise or lower the trailer as needed. (If trailer is too low, tractor may strike and damage nose of trailer; if trailer is too high, **it may not couple correctly**).

Step 7. Connect Air Lines to Trailer

- Check glad hand seals and connect tractor emergency air line to trailer emergency glad hand.
- Check glad hand seals and connect tractor service air line to trailer service glad hand.
- Make sure air lines are safely supported where they won't be crushed or caught while tractor is backing under the trailer.

Step 8. Supply Air to Trailer

- From cab, push in "air supply" knob or move tractor protection valve control from the "emergency" to the "normal" position to supply air to the trailer brake system.
- Wait until the air pressure is normal.

- Check brake system for crossed air lines.
 - Shut engine off so you can hear the brakes.
 - Apply and release trailer brakes and listen for sound of trailer brakes being applied and released. You should hear the brakes move when applied and air escape when the brakes are released.
 - Check air brake system pressure gauge for signs of major air loss.
- When you are sure trailer brakes are working, start engine.
- Make sure air pressure is up to normal.

Step 9. Lock Trailer Brakes

- Pull out the “air supply” knob, or move the tractor protection valve control from “normal” to “emergency.”

Step 10. Back Under Trailer

- Use lowest reverse gear.
- Back tractor slowly under trailer to avoid hitting the kingpin too hard.
- Stop when the kingpin is locked into the fifth wheel.

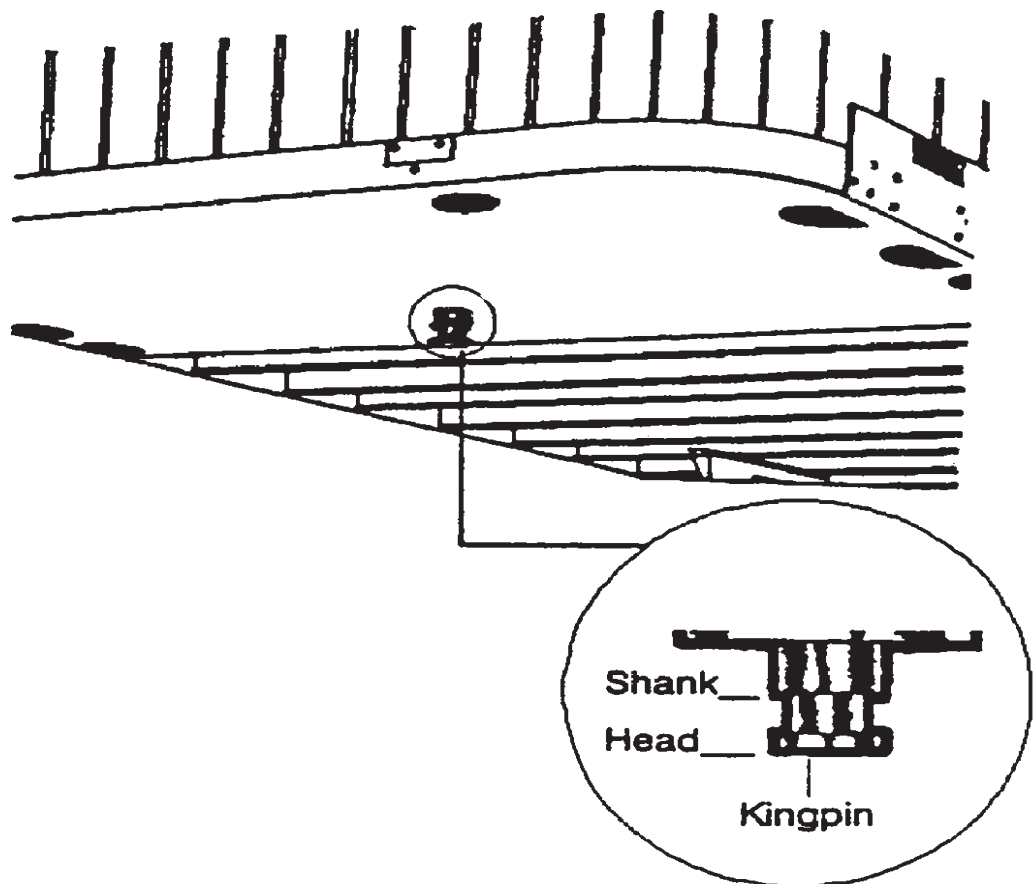


Figure 6-7

Trailer Kingpin

Step 11. Check Connection for Security

- Raise trailer landing gear slightly off ground.
- Pull tractor gently forward while the trailer brakes are still locked to check that the trailer is locked onto the tractor.

Step 12. Secure Vehicle

- Put transmission in neutral.
- Put parking brakes on.
- Shut off engine and **take key with you so someone else won't move truck while you are under it.**

Step 13. Inspect Coupling

- Use a flashlight if necessary.
- Make sure there is no space between upper and lower fifth wheel. If there is space, something is wrong (kingpin may be on top of closed fifth wheel jaws; trailer would come loose very easily).
- Go under trailer and look into the back of the fifth wheel. Make sure the fifth wheel jaws have closed around the shank of the kingpin (see Figure 6-7).
- Check that the locking lever is in the "lock" position.
- Check that the safety latch is in position over locking lever. (On some fifth wheels the catch must be put in place by hand).
- If the coupling isn't right, **don't drive the coupled unit**; get it fixed.

Step 14. Raise Front Trailer Supports (Landing Gear)

- Using low gear range (if so equipped) to begin raising the landing gear. Once free of weight, switch to the high gear range.

Step 15. Connect the Electrical Cord and Check Air Lines

- Plug the electrical cord into the trailer and fasten the safety catch.
- Check both air lines and electrical line for signs of damage.
- Make sure air and electrical lines will not hit any moving parts of vehicle.

- Raise the landing gear all the way up. (Never drive with landing gear only part way up as it may catch on railroad tracks or other things).
- After raising landing gear, secure the crank handle safely.
- When full weight of trailer is resting on tractor:
 - Check for enough clearance between rear of tractor frame and landing gear. (When tractor turns sharply, it must not hit landing gear).
 - Check that there is enough clearance between the top of the tractor tires and the nose of the trailer.

Step 16. Remove Trailer Wheel Chocks

- Remove and store wheel chock in a safe place.

The following steps will help you to uncouple safely:

- Uncoupling
Tractor-Semi-trailer

Step 1. Position Rig

- Make sure surface of parking area can support weight of trailer.
- Have tractor lined up with the trailer. (Pulling out at an angle can damage landing gear.)

Step 2. Ease pressure on Locking Jaws

- Shut off trailer air supply to lock trailer brakes.
- Ease pressure on fifth wheel locking jaws by backing up gently. (This will help you release the fifth wheel locking lever).
- Put parking brakes on while tractor is pushing against the kingpin. (This will hold rig with pressure off the locking jaws).

Step 3. Chock Trailer Wheels

- Chock the trailer wheels if the trailer doesn't have spring brakes or if you're not sure. (The air could leak out of the trailer air tank, releasing its emergency brakes. Without chocks, the trailer could move.)

Step 4. Lower The Landing Gear

- If trailer is empty -- lower the landing gear until it makes firm contact with the ground.
- If trailer is loaded -- after the landing gear makes firm contact with the ground, turn crank in low gear a few extra turns; this will lift some weight off the tractor. (Do not lift trailer off the fifth wheel). This will:
 - make it easier to unlatch fifth wheel;
 - make it easier to couple next time.

Step 5. Disconnect Air Lines and Electrical Cable

- Disconnect air lines from trailer. Connect air lines glad hands to dummy couplers at back of cab, or couple them together.
- Hang electrical cable with plug down to prevent moisture from entering it.
- Make sure lines are supported so they won't be damaged while driving the tractor.

Step 6. Unlock Fifth Wheel

- Raise release handle lock.
- Pull the release handle to "open" position.
- Keep legs and feet clear of the rear tractor wheels to avoid serious injury in case the vehicle moves.

Step 7. Pull Tractor Partially Clear of Trailer

- Pull tractor forward until fifth wheel comes out from under the trailer.
- Stop with tractor frame under trailer (prevents trailer from falling to ground if landing gear should collapse or sink).

Step 8. Secure Tractor

- Apply parking brake.
- Place transmission in neutral.

Step 9. Inspect Trailer Supports

- Make sure ground is supporting trailer.
- Make sure landing gear is not damaged.

Step 10. Pull Tractor Clear of Trailer

- Release parking brakes.
- Check the area and drive tractor forward until it clears.

Test Your Knowledge
<ol style="list-style-type: none"> 1. What might happen if the trailer is too high when you try to couple? 2. After coupling, how much space should be between the upper and lower fifth wheel? 3. You should look into the back of the fifth wheel to see if it is locked onto the kingpin. True or False? 4. To drive you need to raise the landing gear only until it just lifts off the pavement. True or False? 5. What is a converter dolly?
These questions may be on your test. If you can't answer them all, reread Section 6.3.

6.4 Inspecting a Combination Vehicle

Use the seven-step inspection procedure described in Knowledge Test Chapter, Section 2 to inspect your combination vehicle. There are more things to inspect on a combination vehicle than on a single vehicle. (For example, tires, wheels, lights, reflectors, etc.). However, there are also some new things to check. These are discussed below.

Do these checks in addition to those already listed in Section 2, “Step 5: Do Walkaround Inspection.”

- Additional Things to Check During a Walkaround Inspection

Coupling System Areas

- Check fifth wheel (lower).
 - Securely mounted to frame.
 - No missing, damaged parts.
 - Enough grease.
 - No visible space between upper and lower fifth wheel.
 - Locking jaws around the shank, **not** the head of kingpin.
 - Release arm properly seated and safety latch/lock engaged.
- Fifth wheel (upper).
 - Glide plate securely mounted to trailer frame.
 - Kingpin not damaged.
- Air and electric lines to trailer.
 - Electrical cord firmly plugged in and secured.
 - Air lines properly connected to glad hands, no air leaks, properly secured with enough slack for turns.
 - All lines free from damage.
- Sliding fifth wheel.
 - Slide not damaged or parts missing.
 - Properly greased.
 - All locking pins present and locked in place.
 - If air powered -- no air leaks.
 - Check that fifth wheel is not so far forward that tractor frame will hit landing gear, or cab hit the trailer, during turns.

Landing Gear

- Fully raised, no missing parts, not bent or otherwise damaged.
- Crank handle in place and secured.
- If power operated, no air or hydraulic leaks.

Do these checks in addition to Section 5.3, Inspecting Air Brake Systems.

The following section explains how to check air brakes on combination vehicles. Check the brakes on a Double or Triple trailer as you would any combination vehicle.

Check That Air Flows to All Trailers. Use the tractor parking brake and/or chock the wheels to hold the vehicles. Wait for air pressure to reach normal, then push in the red “trailer air supply” knob. This will supply air to the emergency (supply) lines. Use the trailer handbrake to provide air to the service line. Go to the rear of the rig. Open the emergency line valve. Open the service line valve to check that service pressure goes through all the trailers (this test assumes that the trailer handbrake or the service brake pedal is on), then close the valve. If you do NOT hear air escaping from both lines, check that the shut-off valves on the trailer(s) and dolly(s) are in the OPEN position. You MUST have air all the way to the back for all the brakes to work.

- Combination Vehicle Brake Check

Test Tractor Protection Valve. Charge the trailer air brake system. (That is, build up normal air pressure and push the “air supply” knob in). Shut the engine off. Step on and off the brake pedal several times to reduce the air pressure in the tanks. The trailer air supply control (also called the tractor protection valve control) should pop out (or go from “normal” to “emergency” position) when the air pressure falls into the pressure range specified by the manufacturer. (Usually within the range of 20 to 45 psi).

If the tractor protection valve doesn’t work right, an air hose or trailer brake leak could drain all the air from the tractor. This would cause the emergency brakes to come on, with possible loss of control.

Test Trailer Emergency Brakes. Charge the trailer air brake system and check that the trailer rolls freely. Then stop and pull out the trailer air supply control (also called tractor protection valve control or trailer emergency valve) or place it in the “emergency” position. Pull gently on the trailer with the tractor to check that the trailer emergency brakes are on.

Test Trailer Service Brakes. Check for normal air pressure, release the parking brakes, move the vehicle forward slowly, and apply trailer brakes with the hand control (trolley valve), if so equipped. You should feel the brakes come on. This tells you the trailer brakes are connected and working. (The trailer brakes should be tested with the hand valve but controlled in normal operation with the foot pedal, which applies air to the service brakes at all wheels.)

Test Your Knowledge
<ol style="list-style-type: none">1. Which shut-off valve should be open and which closed?2. How can you test that air flows to all trailers?3. How can you test the tractor protection valve?4. How can you test the trailer emergency brakes?5. How can you test the trailer service brakes?
These questions may be on your test. If you can't answer them all, reread Section 6.4.

Section 7: Doubles and Triples

This section has information you need to pass the CDL knowledge test for driving safely with double and triple trailers. It tells about how important it is to be very careful when driving with more than one trailer, how to couple and uncouple correctly, and of inspecting doubles and triples carefully.

This Section Covers

- Pulling Double/Triple Trailers
- Coupling & Uncoupling
- Inspecting Doubles and Triples
- Checking Air Brakes

Take special care when pulling two and three trailers. There are more things that can go wrong, and doubles/triples are less stable than other commercial vehicles. Some areas of concern are covered below.

To prevent trailers from rolling over, you must steer gently and go slowly around corners, on-ramps, off-ramps and curves. A safe speed on a curve for a straight truck or a single trailer combination vehicle may be too fast for a set of doubles or triples.

Doubles and Triples are more likely to turn over than other combination vehicles because of the crack-the-whip effect. You must steer gently when pulling trailers. The last trailer in a combination is most likely to turn over. If you don't understand the crack-the-whip effect, study section 6.1 and review figure 6-1 in the Combination Vehicles Section of this manual.

There are more critical parts to check when you have two or three trailers. Check them all. Follow the procedures described later in this section.

Doubles and triples must be driven very smoothly to avoid rollover or jackknife. Therefore, look far ahead so you can slow down or change lanes gradually when necessary.

Doubles and triples take up more space than other commercial vehicles. They are not only longer, but also need more space because they can't be turned or stopped suddenly. Allow more following distance. Make sure you have large enough gaps before entering or crossing traffic. Be certain you are clear at the sides before changing lanes.

Be more careful in adverse conditions. In bad weather, slippery conditions, and mountain driving, you must be especially careful if you drive double and triple bottoms. You will have greater length and more dead axles to pull with your drive axles than other drivers. There is more chance for skids and loss of traction.

7.1 Pulling Double/Triple Trailers

- Prevent Trailers From Rolling Over
- Beware of the Crack-The-Whip Effect
- Inspect Completely
- Look Far Ahead
- Manage Space
- Adverse Conditions

7.2 Coupling and Uncoupling

Knowing how to couple and uncouple correctly is basic to safe operation of doubles and triples. Wrong coupling and uncoupling can be very dangerous. Coupling and uncoupling steps for doubles and triples are listed below:

- Coupling Twin Trailers

Secure second (rear) trailer

- If the second trailer doesn't have spring brakes, drive the tractor close to the trailer, connect the emergency line, charge the trailer air tank, and disconnect the emergency line. This will set the trailer emergency brakes (if the slack adjusters are correctly adjusted). Chock the wheels if you have any doubt about the brakes.

Couple tractor and first semi-trailer as described earlier

Caution: For the safest handling on the road, the more heavily loaded semi-trailer should be in first position behind the tractor. The lighter trailer should be in the rear.

A converter gear or dolly is a coupling device of one or two axles and a fifth wheel by which a semi-trailer can be coupled to the rear of a tractor-trailer combination, forming a double bottom rig.

Position converter dolly in front of second (rear) trailer

- Release dolly brakes by opening the air tank petcock. (Or, if the dolly has spring brakes, use the dolly parking brake control).
- If distance is not too great, wheel dolly into position by hand so it is in line with kingpin.
- Or, use tractor and first semi-trailer to pick up the converter dolly:
 - Position combination as close as possible to converter dolly.
 - Move dolly to rear of first semi-trailer and couple it to the trailer.
 - Lock pintle hook.
 - Secure dolly support in raised position.
 - Pull dolly into position as close as possible to nose of the second semi-trailer.
 - Lower dolly support.
 - Unhook dolly from first trailer.
 - Wheel dolly into position in front of second trailer in line with the kingpin.

Connect Converter Dolly to Front Trailer

- Back first semi-trailer into position in front of dolly tongue.
- Hook dolly to front trailer.
 - Lock pintle hook.
 - Secure converter gear support in raised position.

Connect Converter Dolly to Rear Trailer

- Make sure trailer brakes are locked and/or wheels are chocked.
- Make sure trailer height is correct. (It must be slightly lower than the center of the fifth wheel, so trailer is raised slightly when dolly is pushed under).
- Back converter dolly under rear trailer.
- Raise landing gear slightly off ground to prevent damage if trailer moves.
- Test coupling by pulling against pin of number two semi-trailer.
- Make visual check of coupling. (No space between upper and lower fifth wheel; locking jaws closed on kingpin.)
- Connect safety chains, air hoses, and light cords.
- Close converter dolly air tank petcock, and shut-off valves at rear of second trailer (service and emergency shut-offs.)
- Open shut-off valves at rear of first trailer (and on dolly if so equipped).
- Raise landing gear completely.
- Charge trailers (push “air supply” knob in) and check for air at rear of second trailer by opening the emergency line shut-off. If air pressure isn’t there, something is wrong and the brakes won’t work.

Uncouple Rear Trailer

- Park rig in a straight line on firm level ground.
- Apply parking brakes so rig won’t move.
- Chock wheels of second trailer if it doesn’t have spring brakes.
- Lower landing gear of second semi-trailer enough to remove some weight from dolly.
- Close air shut-offs at rear of first semi-trailer (and on dolly if so equipped).
- Disconnect all dolly air and electric lines and secure them.
- Release dolly brakes.
- Release converter dolly fifth wheel latch.
- Slowly pull tractor, first semi-trailer and dolly forward to pull dolly out from under rear semi-trailer.

- Uncoupling Twin Trailers

Uncouple Converter Dolly

- Lower dolly landing gear.
- Disconnect safety chains.
- Apply converter dolly spring brakes or chock wheels.
- Release pintle hook on first semi-trailer.
- Slowly pull clear of dolly.

Caution: Never unlock the pintle hook with the dolly still under the rear trailer. The dolly tow bar may fly up, possibly causing injury, and making it very difficult to re-couple.

Couple Second and Third Trailers

- Couple second and third trailers using the method for coupling doubles.
- Uncouple tractor and pull away from second and third trailers.

Couple Tractor/First Semi-trailer to Second/Third Trailers

- Couple tractor to first trailer. Use the method already described for coupling tractor-semi-trailers.
- Move converter dolly into position and couple first trailer to second trailer using the method for coupling doubles. Triples rig is now complete.

Uncouple Triple-Trailer Rig

- Uncouple third trailer by pulling the dolly out, then unhitching the dolly, using the method for uncoupling doubles.
- Uncoupling remainder of rig as you would any double-bottom rig using the method already described.

The methods described so far apply to the more common tractor-trailer combinations. However, there are other ways of coupling and uncoupling the many types of truck-trailer and tractor-trailer combinations that are in use. There are too many to cover in this manual. Learn the right way to couple the vehicle(s) you will drive according to the manufacturer and/or owner.

- Coupling & Uncoupling Triple Trailers

- Coupling & Uncoupling Other Combinations

Use the seven-step inspection procedure described in the Knowledge Test Chapter, Section 2 to inspect your combination vehicle. There are more things to inspect on a combination vehicle than on a single vehicle. Many of these items are simply more of what you would find on a single vehicle. (For example, tires, wheels, lights, reflectors, etc.). However, there are also some new things to check. These are described below.

Do these checks in addition to those already listed in Section 2, “Step 5: Do Walkaround Inspection”.

Coupling System Areas

- Check fifth wheel (lower).
 - Securely mounted to frame.
 - No missing, damaged parts.
 - Enough grease.
 - No visible space between upper and lower fifth wheel.
 - Locking jaws around the shank, not the head of kingpin.
 - Release arm properly seated and safety latch/lock engaged.
- Fifth wheel (upper).
 - Glide plate securely mounted to trailer frame.
 - Kingpin not damaged.
- Air and electric lines to trailer.
 - Electrical cord firmly plugged in and secured.
 - Air lines properly connected to glad hands, no air leaks, properly secured with enough slack for turns.
 - All lines free from damage.
- Sliding fifth wheel.
 - Slide not damaged or parts missing.
 - Properly greased.
 - All locking pins present and locked in place.
 - If air powered -- no air leaks.
 - Check that fifth wheel is not so far forward that tractor frame will hit landing gear, or cab hit the trailer, during turns.

Landing Gear

- Fully raised, no missing parts, not bent or otherwise damaged.
- Crank handle in place and secured.
- If power operated, no air or hydraulic leaks.

Double and Triple Trailers

- Shut-off valves (at rear of trailers, service and emergency lines):
 - Rear of front trailers: OPEN.
 - Rear of last trailer: CLOSED.
 - Converter dolly air tank drain valve: CLOSED.

7.3 Inspecting Doubles and Triples

- Additional Things To Check During a Walkaround Inspection

- Be sure air lines are supported and glad hands are properly connected.
- If spare tire is carried on converter gear (dolly), make sure it's secured.
- Be sure pintle-eye of dolly is in place in pintle hook of trailer(s).
- Make sure pintle hook is latched.
- Safety chains should be secured to trailer(s).
- Be sure light cords are firmly in sockets on trailers.

Do these checks in addition to Section 5.3, Inspecting Air Brake Systems.

7.4 Doubles/Triples Air Brake Check

Check the brakes on a double or triple trailer as you would any combination vehicle. Section 6.2 explains how to check air brakes on combination vehicles. You must also make the following checks on your double or triple trailers.

- Check That Air Flows to All Trailers (Double and Triple/Trailers)

Use the tractor parking brake and/or chock the wheel to hold the vehicle. Wait for air pressure to reach normal, then push in the red “trailer air supply” knob. This will supply air to the emergency (supply) lines. Use the trailer handbrake to provide air to the service line. Go to the rear of the rig. Open the emergency line shut-off valve at the rear of the last trailer. You should hear air escaping, showing the entire system is charged. Close the emergency line valve. Open the service line valve to check that service pressure goes through all the trailers (this test assumes that the trailer handbrake or the service brake pedal is on), then close the valve. If you do NOT hear air escaping from both lines, check that the shut-off valves on the trailer(s) and dolly(s) are in the OPEN position. You MUST have air all the way to the back for all the brakes to work.

- Test Tractor Protection Valve

Charge the trailer air brake system. (That is, build up normal air pressure and push the “air supply” knob in). Shut the engine off. Step on and off the brake pedal several times to reduce the air pressure in the tanks. The trailer air supply control (also called the tractor protection valve control) should pop out (or go from “normal” to “emergency” position) when the air pressure falls into the pressure range specified by the manufacturer. (Usually within the range of 20 to 45 psi).

If the tractor protection valve doesn't work right, an air hose or trailer brake leak could drain all the air from the tractor. This would cause the emergency brakes to come on, with possible loss of control.

Charge the trailer air brake system and check that the trailer rolls freely. Then stop and pull out the trailer air supply control (also called tractor protection valve control or trailer emergency valve) or place it in the “emergency” position. Pull gently on the trailer with the tractor to check that the trailer emergency brakes are on.

Check for normal air pressure, release the parking brakes, move the vehicle forward slowly, and apply trailer brakes with the hand control (trolley valve), if so equipped. You should feel the brakes come on. This tells you the trailer brakes are connected and working. (The trailer brakes should be tested with the hand valve, but controlled in normal operation with the foot pedal, which applies air to the service brakes at all wheels.)

Test Your Knowledge
<ol style="list-style-type: none">1. What is a converter dolly?2. Do converter dollies have spring brakes?3. What three methods can you use to secure a second trailer before coupling?4. How do you check to make sure trailer height is correct before coupling?5. What do you check when making a visual check of coupling?6. Why should you pull a dolly out from under a trailer before you disconnect it from the trailer in front?7. What should you check for when inspecting the converter dolly? The pintle hook?8. Should the shut-off valves on the rear of the last trailer be open or closed? On the first trailer in a set doubles? On the middle trailer of a set of triples?9. How can you test that air flows to all trailers?
These questions may be on your test. If you can't answer them all, reread Sections 7.1, 7.2, 7.3 and 7.4.

Section 8: Tank Vehicles

This Section Covers

- Inspecting Tank Vehicles
- Driving Tank Vehicles

This section has information needed to pass the CDL knowledge test for driving a tank vehicle. A “tank vehicle” is used to carry any liquid or liquid gas in a tank of 1,000 gallons or more.

Before loading, unloading or driving a tanker, inspect the vehicle. This makes sure that the vehicle is safe to carry the liquid or gas and is safe to drive.

8.1 Inspecting Tank Vehicles

Tank vehicles have special items that you need to check. Tank vehicles come in many types and sizes. You need to check the vehicle’s operator’s manual to make sure you know how to inspect your tank vehicle.

- Leaks

On all tank vehicles, the most important item to check for is leaks. Check under and around the vehicle for signs of any leaking. Don’t carry liquids or gases in a leaking tank. In general, check the following:

- Check the tank’s body or shell for dents or leaks.
- Check the intake, discharge, and cutoff valves. Make sure the valves are in the correct position before loading, unloading or moving the vehicle.
- Check pipes, connections and hoses for leaks, especially around joints.
- Check manhole covers and vents. Make sure the covers have gaskets and they close correctly. Keep the vents clear so they work correctly.
- Check special purposes equipment. If your vehicle has any of the following equipment, make sure it works:
 - Vapor recovery kits.
 - Grounding and bonding cables.
 - Emergency shut-off systems.
 - Built in fire extinguisher.

Make sure you know how to operate your special equipment.

- Check the emergency equipment required for your vehicle. Find out what equipment you’re required to carry, and make sure you have it (and it works).

Hauling liquids in tanks requires special skills because of the high center of gravity and liquid movement.

High center of gravity means that much of the load's weight is carried high up off the road. This makes the vehicle top-heavy and easy to roll over. Liquid tankers are especially easy to roll over. Tests have shown that tankers can turn over at the speed limits posted for curves. Take highway curves and on-ramp/off-ramp curves well below the posted speeds.

Liquid surge results from movement of the liquid in partially filled tanks. This movement can have bad effects on handling. For example, when coming to a stop, the liquid will surge back and forth. When the wave hits the end of the tank, it tends to push the truck in the direction the wave is moving. If the truck is on a slippery surface such as ice, the wave can shove a stopped truck into an intersection. The driver of a liquid tanker must be very familiar with the handling of the vehicle.

Some liquid tanks are divided into several smaller tanks by bulkheads. When loading and unloading the smaller tanks, the driver must pay attention to weight distribution. Don't put too much weight on the front or rear of the vehicle.

Baffled liquid tanks have bulkheads in them with holes that let the liquid flow through. The baffles help to control the forward and backward liquid surge. Side-to-side surge can still occur. This can cause a roll over.

Unbaffled liquid tankers (sometimes called "smooth bore" tanks) have nothing inside to slow down the flow of the liquid. Therefore, forward-and-back surge is very strong. Unbaffled tanks are usually those that transport food products (milk, for example). (Sanitation regulations forbid the use of baffles because of the difficulty in cleaning the inside of the tank). Be extremely cautious (slow and careful) in driving smooth bore tanks, especially when starting and stopping.

Never load a cargo tank totally full. Liquids expand as they warm and you must leave room for the expanding liquid. This is called "outage." Since different liquids expand by different amounts, they require different amounts of outage. You must know the outage requirement when hauling liquids in bulk.

A full tank of dense liquid (such as some acids) may exceed legal weight limits. For that reason, you may often only partially fill tanks with heavy liquids. The amount of liquid to load into a tank depends on:

- The amount the liquid will expand in transit.
- The weight of the liquid.
- Legal weight limits.

8.2 Driving Tank Vehicles

- High Center of Gravity
- Danger of Surge
- Bulkheads
- Baffled Tanks
- Unbaffled Tanks
- Outage
- How Much To Load

8.3 Safe Driving Rules

In order to drive tank vehicles safely, you must remember to follow all the safe driving rules. A few of these rules are:

- Drive Smoothly
 - Braking
 - Curves
 - Stopping Distance
 - Skids
- Drive smoothly. Because of the high center of gravity and the surge of the liquid, you must start, slow down and stop very smoothly. Also, make smooth turns and lane changes.
 - If you must make a quick stop to avoid a crash, use controlled or stab braking. If you do not remember how to stop using these methods, review Section 2.13. Also, remember that if you steer quickly while braking, your vehicle may roll over.
 - Slow down before curves, then accelerate slightly through the curve. The posted speed for a curve may be too fast for a tank vehicle.
 - Keep in mind how much space you need to stop your vehicle. Remember that wet roads double the normal stopping distance. Empty tank vehicles take longer to stop than full ones.
 - Don't over steer, over accelerate or over brake. If you do, your vehicle may skid. On tank trailers, if your drive wheels or trailer wheels begin to skid, your vehicle may jackknife. When any vehicle starts to skid, you must take action to restore traction to the wheels.

Test Your Knowledge
<ol style="list-style-type: none">1. How are bulkheads different than baffles?2. Should a tank vehicle take curves, on-ramps or off-ramps at the posted speed limits?3. How are smooth bore tankers different to drive than those with baffles?4. What three things determine how much liquid you can load?5. What is outage?6. What two reasons make special care needed when driving tank vehicles?
These questions may be on the test. If you can't answer them all, reread Section 8.2.

Section 9: Hazardous Materials

Hazardous materials are products that pose a risk to health, safety, and property during transportation. The term often is shortened to HAZMAT, which you may see on road signs, or to HM in government regulations. Hazardous materials include explosives, various types of gas, solids, flammable and combustible liquid, and other materials. Because of the risks involved and the potential consequences these risks impose, the handling of hazardous materials is very heavily regulated by all levels of government.

The Hazardous Materials Regulations (HMRs) are found in parts 171-180 of title 49 of the Code of Federal Regulations. The common reference for these regulations is 49 CFR 171-180.

The Hazardous Materials Table in these regulations contains a list of these items. However, this list is not all-inclusive. Whether or not a material is considered hazardous is based on its characteristics and the shipper's decision on whether or not the material meets a definition of a hazardous material in the regulations.

The regulations require vehicles transporting certain types or quantities of hazardous materials to display diamond-shaped, square-on-point warning signs called placards.

This section is designed to assist you in understanding your role and responsibilities in hauling hazardous materials. Due to the constantly changing nature of government regulations, it is impossible to guarantee absolute accuracy of the materials in this section. An up-to-date copy of the complete regulations is essential for you to have. Included in these regulations is a complete glossary of terms.

You must have a commercial driver's license (CDL) with a hazardous materials endorsement before driving vehicles carrying hazardous materials which require placards. You must pass a written test about the regulations and requirements to get this endorsement.

Everything you need to know to pass the written test is in this section. However, this is only a beginning. Most drivers need to know much more on the job. You can learn more by reading and understanding the federal and state rules applicable to hazardous materials as well as attending hazardous materials training courses. These courses are usually offered by your employer, colleges and universities, and various associations. You can get copies of the Federal Regulations (49 CFR) through your local Government Printing Office bookstore and various industry publishers. Union or company offices often have copies of the rules for driver use. Find out where you can get your own copy to use on the job.

This Section Covers

- The Intent of the Regulations
- Driver Responsibilities
- Communications Rules
- Loading & Unloading
- Bulk Tank Loading, Unloading, and Marking
- Driving and Parking Rules
- Emergencies
- Glossary at the End of Section 9

The regulations require training and testing for all drivers involved in transporting hazardous materials. Your employer or a designated representative is required to provide this training and testing. Hazardous materials employers are required to keep a record of that training on each employee as long as that employee is working with hazardous materials, and for 90 days thereafter. The regulations require that hazardous materials employees be trained and tested at least once every two years by the employers.

The regulations also require that drivers have special training before driving a vehicle transporting certain flammable gas materials or highway route controlled quantities of radioactive materials. In addition, drivers transporting cargo tanks and portable tanks must receive specialized training. Each driver's employer or their designated representative must provide such training.

Some locations require permits to transport certain explosives or bulk hazardous wastes. States and counties also may require drivers to follow special hazardous materials routes. The federal government may require permits or exemptions for special hazardous materials cargo such as rocket fuel. Find out about permits, exemptions, and special routes for places you drive.

9.1 The Intent of the Regulations

- Contain the Material
- Communicate the Risk
- Assure Safe Drivers and Equipment

Transporting hazardous materials can be risky. The regulations are intending to protect you, those around you, and the environment. They tell shippers how to package the materials safely and drivers how to load, transport, and unload the material. These are called "containment rules".

To communicate the risk, shippers must warn drivers and others about the material's hazards. The regulations require shippers to put hazard warning labels on packages, provide proper shipping papers, emergency response information, and placards. These steps communicate the hazard to the shipper, the carrier, and the driver.

In order to get a hazardous materials endorsement on a CDL, you must pass a written test about transporting hazardous materials. To pass the test, you must know how to:

- Identify what is hazardous materials.
- Safely load shipments.
- Properly placard your vehicle in accordance with the rules.
- Safely transport shipments.

Learn the rules and follow them. Following the rules reduces the risk of injury from hazardous materials. Taking shortcuts by breaking rules is unsafe. Rule breakers can be fined and put in jail.

Inspect your vehicle before and during each trip. Law enforcement officers may stop and inspect your vehicle. When stopped, they may check your shipping papers, vehicle placards, the hazardous materials endorsement on your driver's license, and your knowledge of hazardous materials.

The Shipper:

- Sends products from one place to another by truck, rail, vessel, or airplane.
- Uses the hazardous material's regulations to determine the product's:
 - Proper shipping name
 - Hazard class
 - Identification number
 - Correct packaging
 - Correct label and markings
 - Correct placards
- Must package, mark, and label the materials; prepare shipping papers; provide emergency response information; and supply placards.
- Certify on the shipping paper that the shipment has been prepared according to the rules (unless you are pulling cargo tanks supplied by you or your employer).

The Carrier:

- Takes the shipment from the shipper to its destination.
- Prior to transportation, checks that the shipper correctly described, marked, labeled and otherwise prepared the shipment for transportation.
- Refuses improper shipments.
- Reports accidents and incidents involving hazardous materials to the proper government agency.

The Driver:

- Makes sure the shipper has identified, marked, and labeled the hazardous materials properly.
- Refuses leaking packages and shipments.
- Placards his vehicle when loading, if required.
- Safely transports the shipment without delay.
- Follows all special rules about transporting hazardous materials.
- Keeps hazardous materials shipping papers and emergency response information in the proper place.

9.2 Hazardous Materials Transportation-Who Does What

- The Shipper

- The Carrier

- The Driver

9.3 Communication Rules

- Definitions

Some words and phrases have special meanings when talking about hazardous materials. Some of these may differ from meanings you are used to. The words and phrases in this section may be on your test. The meanings of other important words are in the glossary at the end of Section 9.

A material's hazard class reflects the risks associated with it. There are 9 different hazard classes. Figure 9-1 tells the exact meaning of each hazard class. The types of materials included in these 9 classes are on the table below.

Class	Division	Name of Class or Division	Example
1	1.1	Mass Explosives	Dynamite
	1.2	Projection Hazards	Flares
	1.3	Mass Fire Hazards	Display Fireworks
	1.4	Minor Hazards	Ammunition
	1.5	Very Insensitive	Blasting Agents
	1.6	Extremely Insensitive	Explosive Devices
2	2.1	Flammable Gases	Propane
	2.2	Non-Flammable Gases	Helium
	2.3	Poisonous/Toxic Gases	Fluorine, Compressed
3	---	Flammable and Combustible Liquids	Gasoline/Fuel Oil
4	4.1	Flammable Solids	Ammonium Picrate
	4.2	Spontaneously Combustible	White Phosphorus
	4.3	Dangerous When Wet	Sodium
5	5.1	Oxidizers	Ammonium Nitrate
	5.2	Organic Peroxides	Methyl Ethyl Ketone Peroxide
6	6.1	Poison (toxic material)	Potassium Cyanide
	6.2	Infectious Substances	Anthrax Virus
7	---	Radioactive	Uranium
8	---	Corrosives	Battery Fluids
9	---	Miscellaneous Hazardous Materials	Polychlorinated Biphenyls (PCB)
None	---	ORM-D (Other Regulated Materials - Domestic)	Food Flavorings, Medicines

Figure 9-1

Hazardous Materials Hazard Class/Division Table

A **shipping paper** describes the hazardous materials being transported. Shipping orders, bills of lading, and manifests are all shipping papers. Figure 9-6 shows an example shipping paper.

After an accident or hazardous materials spill or leak, you may be injured and unable to communicate the hazards of the materials you are transporting. Fire fighters and police can prevent or reduce the amount of damage or injury at the scene if they know what hazardous materials are being carried. Your life, and the lives of others, may depend on quickly locating the hazardous materials shipping papers. For that reason the rules:

- Require shippers to describe hazardous materials correctly and include an emergency response telephone number on shipping papers.
- Require carriers and drivers to put tabs on hazardous materials shipping papers, or keep them on top of other shipping papers and keep the required emergency response information with the shipping papers.
- Require drivers to keep hazardous materials shipping papers:
 - In a pouch on the driver's door, or
 - In clear view within immediate reach while the seat belt is fastened while driving, or
 - On the driver's seat when out of the vehicle.

Shippers put diamond-shaped hazard warning labels on most hazardous materials packages. These labels inform others of the hazard. If the diamond label won't fit on the package, shippers may put the label on a tag securely attached to the package. For example, compressed gas cylinders that will not hold a label will have tags or decals. Labels look like the example in Figure 9-2.

- Package Labels

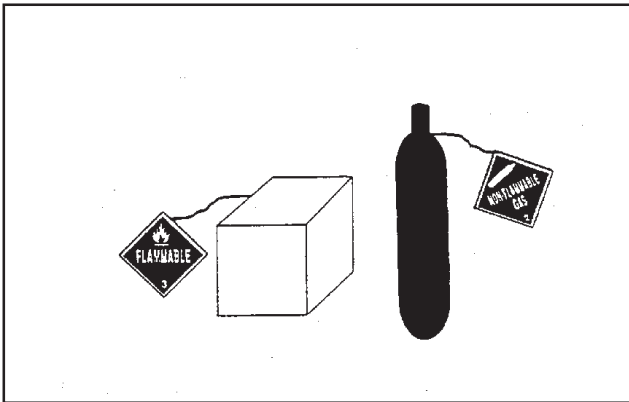


Figure 9-2
Example of Label Package

Placards are used to warn others of hazardous materials. Placards are signs put on the outside of a vehicle which identifies the hazard class of the cargo. A placarded vehicle must have at least 4 identical placards. They are put on the front, rear, and both sides of the vehicle (see Figure 9-3). Placards must be readable from all four directions. They are 10 3/4 inches square, turned upright on a point, in a diamond shape. Cargo tanks and other bulk packaging display the I.D. number of their contents on placards or orange panels or white square-on-point displays that are the same size as placards.

- Lists of Regulates Products

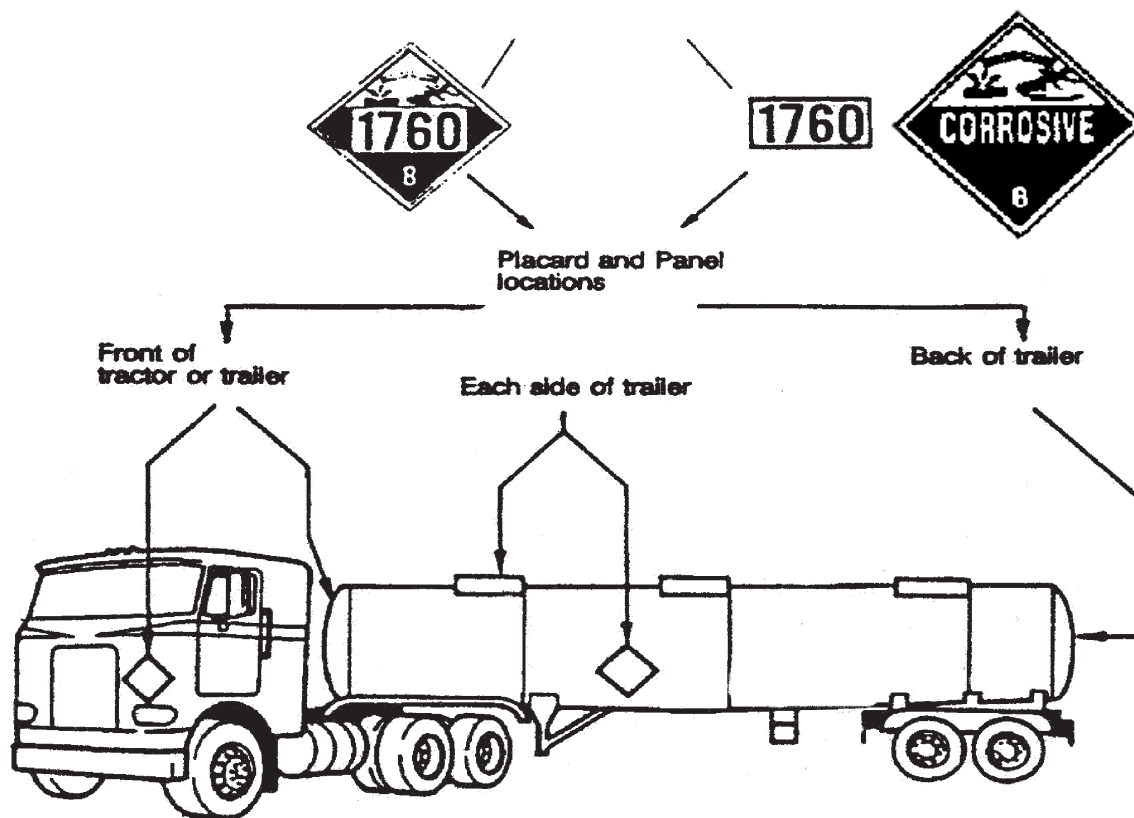


Figure 9-3

Placard and Panel Locations

- Lists of Regulates Products

There are three main lists used by shippers, carriers, and drivers when trying to identify hazardous materials. Before transporting a material, look for its name on three lists. Some materials are on all lists, others on only one. Always check the following lists:

- Hazardous Materials Table in the rules,
- Appendix A in the rules, the List of Hazardous Substances and Reportable Quantities, and
- Appendix B in the rules, the List of Marine Pollutants

The Hazardous Materials Table. Figure 9-4 shows part of the Hazardous Materials Table. Column 1 tells which shipping mode(s) the entry affects and other information concerning the shipping description. The next five columns show each material's shipping name, hazard class, ID number, packaging group and required label.

Five different symbols may appear in Column 1 of the table.

- (+) Shows the proper shipping name, hazard class, and packing group to use, even if the material doesn't match the hazard class definition.
- (A) Means the hazardous material described in Column 2 is subject to the HMR only when offered or intended for transport by air unless it is a hazardous substance or hazardous waste.
- (W) Means the hazardous material described in Column 2 is subject to the HMR only when offered or intended for transportation by water unless it is a hazardous substance, hazardous waste, or marine pollutant.
- (D) Means the proper shipping name is appropriate for describing materials for domestic transportation, but may not be proper for international transportation.
- (I) Identifies a proper shipping name that is used to describe materials in international transportation. A different shipping name may be used when only domestic transportation is involved.

Column 2 lists the proper shipping names and descriptions of regulated materials. Entries are in alphabetical order so you can more quickly find the right entry. The table shows proper shipping names in regular type. The shipping paper must show proper shipping names. Names shown in *italics* are not proper authorized shipping names.

Column 3 shows a material's hazard class or division, or the entry "Forbidden". Never transport a "FORBIDDEN" material. You placard shipments based on the quantity and hazard class. You can decide which placards to use if you know these three things:

- Material's hazard class.
- Amount being shipped.
- Amount of all hazardous materials of all classes on your vehicle.

Column 4 lists the identification number for each proper shipping name. Identification numbers are preceded by the letters "UN" or "NA". The letters "NA" are associated with proper shipping names that are only used within the United States and to and from Canada. The identification number must appear on the shipping paper as part of the shipping description and also appear on the package. It also must appear on cargo tanks and other bulk packaging. Police and firefighters use this number to quickly identify the hazardous materials.

§ 172.101 Hazardous Materials Table									
Symbols (1)	Hazardous materials descriptions and proper shipping names (2)	Hazard class or Division (3)	Identification Numbers (4)	Packing Group (5)	Label(s) Code required (if not excepted) (6)	Special provisions (7)	(8) Packaging authorizations (§ 173.***)		
							Excep- tions (8A)	Non- bulk pack- aging (8B)	Bulk pack- aging (8C)
-----	Potassium Nitrite	5.1	UN1488	11	5.1	AL, A29 (173)	152	212	242

Figure 9-4

Part of the Hazardous Materials Table

Column 5 shows the packing group assigned to a material.

Column 6 shows the hazardous warning label(s) shippers must put on packages of hazardous materials. Some products require use of more than one label, due to a dual hazard being present. No label is needed where the table shows the word NONE.

Column 7 lists the additional (special) provisions that apply to this material. When there is an entry in this column, you must refer to the federal regulations for specific information.

Column 8 is a three-part column showing the section numbers covering the packaging requirements for each hazardous material.

Appendix A to §172.101 - The list of hazardous substances and reportable quantities. The DOT and the EPA want to know about spills of **hazardous substances**. They are named in the List of Hazardous Substances and Reportable Quantities (see Figure 9-5). Column 3 of the list shows each product's reportable quantity (RQ). When these materials are being transported in a reportable quantity or greater in one package, the shipper displays the letter RQ on the shipping paper and package. The letters RQ may appear before or after the basic description. You or your employer must report any spill of these materials which occurs in a **reportable quantity**.

If the words INHALATION HAZARD appear on the shipping paper or package, the rules require display of the POISON or POISON GAS placards, as appropriate. These placards must be used in addition to other placards which may be required by the product's hazard class. Always display the hazard class placard and the POISON placard, even for small amounts.

The name Phosgene is starred (*) because the name also appears in the hazardous materials table.		Spills of 10 pounds or more must be reported.	
LIST OF HAZARDOUS SUBSTANCES AND REPORTABLE		QUANTITIES - Continued	
Hazardous Substance		Reportable Quantity (RQ) Pounds (Kilograms)	
Phenyl mercaptan @		100 (45.4)	
Phenylmercuric acetate		100 (45.4)	
N-Phenylthiourea		100 (45.4)	
Phorate		10 (4.54)	
Phosgene*		10 (4.54)	
Phosphine*		100 (45.4)	
Phosphoric acid*		5000 (2270)	
Phosphoric acid, diethyl			
p-nitophenyl ester		100 (45.4)	
Phosphoric acid, lead salt		1 (0.454)	

Figure 9-5

List of Hazardous Substances

Test Your Knowledge
<ol style="list-style-type: none"> 1. Shippers package in order to <u>(fill in the blank)</u> the material. 2. Drivers placard their vehicle to <u>(fill in the blank)</u> the risk. 3. What three things do, you need to know to decide which placards (if any) you need? 4. A hazardous materials ID number must appear on the <u>(fill in the blank)</u> and on the <u>(fill in the blank)</u>. The identification number must also appear on cargo tanks and other bulk packagings. 5. Where must you keep shipping papers describing hazardous materials?
These questions may be on your test. If you can't answer all, reread Sections 9-1 through 9-9.

The shipping paper shown in Figure 9-6 describes a shipment. A shipping paper for hazardous materials must include:

The Shipping Paper

- Page numbers if the shipping paper has more than one page. The first page must tell the total number of pages. For example, "Page 1 of 4".
- A proper shipping description for each hazardous material.
- A "shipper's certification", signed by the shipper saying they prepared the shipment according to the rules.

If a shipping paper describes both hazardous and non-hazardous products, the hazardous materials will be either:

- The Item Description

- Described first, or
- Highlighted in a contrasting color, or
- Identified by an “X” placed before the shipping name in a column captioned “HM”. The letters “RQ” may be used instead of “X” if a reportable quantity is present in one package.

The basic description of hazardous materials includes the proper shipping name, hazard class or division, the identification number, and the packing group, if any, in that order. The packing group is displayed in Roman numerals and may be preceded by the letters “PG”.

Shipping name, hazard class, and ID number must not be abbreviated unless specifically authorized in the hazardous materials regulations. The description must also show:

- The total quantity and unit of measure, and
- The letter RQ, if a reportable quantity.
- If the letters RQ appear, the name of the hazardous substance.
- For “n.o.s.” and generic description, the technical name of the hazardous material.

“RQ” means that this is a reportable quantity

ID Number from the Hazardous Material Table

SHIPPING PAPER		Page 1 of 1	
TO:	Wafers R US 88 Valley Street Silicon Junction, CA	FROM:	Essex Corporation 5775 Dawson Avenue Coleta, CA 93117
QTY	HM	DESCRIPTION	WEIGHT
1 cyl	RQ	Phosgene, Poison 2.3, UN 1076	25 lbs

This is to certify that the above named materials are properly classified, described, packaged, marked and labeled, and are in proper condition for transportation according to the applicable regulations of the Department of Transportation.

Shipper: Essex Corp
Per: Shultz
Date: 6/27/88

Carrier: Knuckle Bros.
Per:
Date:

Figure 9-6
Example of Shipping Paper
178

Shipping Certification

- Exceptions
 - (1) In a cargo tank supplied by the carrier, or
 - (2) By the shipper as a private carrier except for a hazardous material that is to be reshipped or transferred from one carrier to another.

No certification is required for the return of an empty tank car which previously contained a hazardous material and which has not been cleaned or purged.

- Signature: The certification required by paragraph (a) or (c) of this section:
 - (1) Must be legibly signed by a principal officer, partner, or employee of the shippers or his agent; and
 - (2) May be legibly signed manually, by typewriter, or by other mechanical means.

Shipping papers must also list an emergency response telephone number. The emergency response telephone number is the responsibility of the shipper. It can be used by emergency responders to information about any hazardous materials involved in a spill or fire.

Shippers must also provide emergency response information to the motor carrier for each hazardous material being shipped. The emergency response information must be able to be used away from the motor vehicle and must provide information on how to safely handle incidents involving the material. It must include information on the shipping name of the hazardous materials, risks to health, fire, explosion, and initial methods of handling spills, fire, and leaks of the materials.

Such information can be on the shipping paper or some other document that includes the basic description and technical name of the hazardous material. Or, it may be in a guidance book such as the Emergency Response Guide book (ERG). Motor carriers may assist shippers by keeping an ERG on each vehicle carrying hazardous materials. The driver must provide the emergency response information to any federal, state or local authority responding to a hazardous materials incident or investigating one.

Total quantity must appear before or after the basic description. The packaging type and the unit of measurement may be abbreviated. For example:

10 ctns. Paint, 3, UN1263, PG II 500 lbs.

The shipper of hazardous wastes must put the word WASTE before the name of the material on the shipping paper (hazardous waste manifest). For example:

Waste Acetone, 3, PG II, UN1090.

A non-hazardous material may not be described by using a hazard class or an ID number.

When the shipper packages hazardous materials, he/she certifies that the package has been prepared according to the rules. The signed shipper's certification appears on the original shipping paper. The only exceptions are when a shipper is a private carrier transporting their own product, and when the package is provided by the carrier (for example, a cargo tank). Unless a package is clearly unsafe, you may accept the shipper's certification concerning proper packaging. Some carriers have additional rules about transporting hazardous materials. Follow your employer's rules when accepting shipments.

- Shipper's Certification

- Package Markings and Labels

Shippers print required markings directly on the package, an attached label, or tag. The most important package marking is the name of the hazardous materials. It is the same name as the one on the shipping paper. When required, the shipper will put the following on the package:

- The name and address of shipper or consignee.
- The hazardous material's shipping name and identification number.
- The labels required.

- Recognizing Hazardous Materials

If the rules require it, the shipper also will put RQ or INHALATION-HAZARD on the package. Packages with liquid containers inside will also have package orientation markings with the arrows pointing in the correct upright direction. The labels used always reflect the hazard class of the product. If a package needs more than one label, the labels will be close together, near the proper shipping name.

Learn to recognize shipments of hazardous materials. To find out if the shipment includes hazardous materials, look at the shipping paper. Does it have:

- An entry with a proper shipping name, hazard class, and ID number?
- A highlighted entry, or one with an Z or RQ in the hazardous materials column?

Other clues suggesting hazardous materials:

- What business is the shipper in? Paint dealer? Chemical supply? Scientific supply house? Pest control or agricultural supplier? Explosives, ammunitions, or fireworks dealer?
- Are there tanks with diamond labels or placards on the premises?
- What type of package is being shipped? Cylinders & drums are often used for hazardous materials shipments.
- Is a hazard class label, proper shipping name, or ID number on the package?
- Are there any handling precautions?

- Hazardous Waste Manifest

When transporting hazardous wastes, you must sign and carry a Uniform Hazardous Waste Manifest. The name and EPA registration number of the shippers, carriers, and destination must appear on the manifest. Shippers must prepare, date and sign the manifest. Treat the manifest as a shipping paper when transporting the waste.

Only give the waste shipment to another registered carrier or treatment facility. Each carrier transporting the shipment must sign the manifest. After you deliver the shipment, keep your copy of the manifest. Each copy must have all needed signatures and dates, including those of the person to whom you delivered the waste.

Attach the appropriate placards to the vehicle before you drive it. You are only allowed to move an improperly placarded vehicle during an emergency, in order to protect life or property.

- Placarding

Placards must appear on both sides and ends of the vehicle. Each placard must be:

- Easily seen from the direction it faces.
- Placed so the words or numbers are level and read from left to right.
- At least 3 inches away from any other markings.
- Kept clear of attachments or devices such as ladders, doors, and tarpaulins.
- Kept clean and undamaged so that the color, format, and message are easily seen.

To decide which placards to use, you need to know:

- The hazard class of the materials.
- The amount of hazardous materials shipped.
- The total weight of all hazardous materials in your vehicle.

Always make sure that the shipper shows the correct basic description on the shipping paper and verifies that the proper labels are shown on the packages. If you are not familiar with the material, ask the shipper to contact your office.

- Placard Tables

PLACARD TABLE 1 - ANY AMOUNT

IF YOUR VEHICLE CONTAINS ANY AMOUNT OF...	PLACARD AS...
1.1	Explosive 1.1
1.2	Explosive 1.2
1.3	Explosive 1.3
2.3	Poison Gas
4.3	Dangerous when wet
5.2 (Organic peroxide, Type B, Liquid or solid	Organic Peroxide Temperature Controlled
6.1 (Zone A or B, inhalation hazard only)	Poison, Inhalation Hazard
7 .. (Radioactive Yellow III label only)	Radioactive

There are two placard tables, Table 1 and Table 2. Table 1 materials must be placarded whenever any amount is transported.

Except for bulk packagings, the hazard classes in Table 2 need placards only if the total amount transported is 1,001 lbs or more, including the package. Add the amounts from all shipping papers for all the Table 2 products you have on board. You may use DANGEROUS placards instead of separate placards for each Table 2 hazard class when:

- You have two or more Table 2 hazard classes, requiring different placards that total 1,001 lbs or more, and
- You have not loaded 5,000 lbs or more of any Table 2 hazard class material at any one place. (You must use the specific placard for this material.)

If the words INHALATION HAZARD are on the shipping paper or package, you must display POISON placards in addition to any other placards needed by the product's hazard class.

You need not use EXPLOSIVES 1.5, OXIDIZER, and DANGEROUS placards if a vehicle contains Division 1.1 or 1.2 explosives and is placarded with EXPLOSIVES 1.1 or 1.2 placards. You need not use a Division 2.2 NON-FLAMMABLE GAS placard on a vehicle displaying a Division 2.1 FLAMMABLE GAS or a Division 2.2 OXYGEN placard.

Placards used to identify the primary hazard class of material must have a hazard class or division number displayed in the lower corner of the placard. No hazard class or division number is allowed on placards used to identify a secondary hazard class of a material.

Placards may be displayed for hazardous materials even if not required, so long as placards identify the hazard of the material being transported.

PLACARD TABLE 2 - 1,001 LBS OR MORE

Category of Material (Hazard class or division number and additional description, as appropriate)	Placard Name
1.4	EXPLOSIVES 1.4
1.5	EXPLOSIVES 1.5
1.6	EXPLOSIVES 1.6
2.1	FLAMMABLE GAS
2.2	NON-FLAMMABLE
3	FLAMMABLE
Combustible liquid	COMBUSTIBLE
4.1	FLAMMABLE SOLID
4.2	SPONTANEOUSLY COMBUSTIBLE
4.3	DANGEROUS WHEN WET
5.1	OXIDIZER
5.2	ORGANIC PEROXIDE
6.1 (PG I or II, other than PG I inhalation hazard)	POISON
6.1 (PG III)	KEEP AWAY FROM FOOD
6.2	(NONE)
8	CORROSIVE
9	CLASS 9
ORM-D	(NONE)

Test Your Knowledge
<ol style="list-style-type: none"> 1. What is a shipper's certification? Where does it appear? Who signs it? 2. When may non-hazardous materials be described by hazard class works or ID numbers? 3. Name five hazard classes that require placarding in any amount. 4. A shipment described on the Hazardous Waste Manifest may only be delivered to another <u>(fill in the blank)</u> carrier or treatment facility, which then signs the <u>(fill in the blank)</u> giving you a copy which you must keep. 5. Your load includes 20 lbs of Division 2.3 gas and 1,001 lbs flammable gas. What placards do you need, if any?
These questions may be on your test. If you can't answer all, reread pages 9-7 through 9-9.

9.4 Loading and Unloading

• General Loading Requirements

- Do all you can to protect containers of hazardous materials. Don't use any tools which might damage containers or other packaging during loading. Don't use hooks.
- Before loading or unloading, set the parking brake. Make sure the vehicle will not move.
- Many products become more hazardous when exposed to the heat. Load hazardous materials away from heat sources.
- Watch for signs of leaking or damaged containers: **Leaks spell trouble!** Do not transport leaking packages. Depending on the material, you, your truck and others could be in danger.

Containers of Class 1 (explosives), Class 3 (flammable liquids), Class 4 (flammable solids), Class 5 (oxidizers), Class 8 (corrosives), Class 2 (gases) and Division 6.1 (poisons) must be braced to prevent movement of the packages during transportation.

Smoking or carrying a lighted cigarette, cigar or pipe within 25 feet of a vehicle required to be marked as placarded within any of the following hazard classes is strictly forbidden Re. 387.13.

No Smoking. When loading or unloading hazardous materials, keep fire away. Don't let people smoke nearby. Never smoke around:

Class 1 (EXPLOSIVES)	Division 2.1 (FLAMMABLE GAS)	Class 4 (FLAMMABLE SOLIDS)
Class 5 (OXIDIZERS)	Class 3 (FLAMMABLES)	

Secure Against Movement. Brace containers so they will not fall, slide, or bounce around during transportation. Be very careful when loading containers that have valves or other fittings.

After loading, do not open any package during your trip. Never transfer hazardous materials from one package to another while in transit. You may empty a cargo tank, but do not empty any other package while it is in the vehicle.

Cargo Heater Rules. There are special cargo heater rules for loading:

Class 1 (EXPLOSIVES)	Class 3 (FLAMMABLE LIQUIDS)	Division 2.1 (FLAMMABLE GAS)
-------------------------	--------------------------------	---------------------------------

The rules usually forbid use of cargo heaters, including automatic cargo heater/air conditioner units. Unless you have read all the related rules, don't load the above products in a cargo space that has a heater.

Use closed cargo space. You cannot have overhang or tailgate loads of:

Class 1 (EXPLOSIVES)	Class (FLAMMABLE SOLIDS)	Class 5 (OXIDIZERS)
-------------------------	-----------------------------	------------------------

You must load these hazardous materials into a closed cargo space unless all packages are:

- Fire and water resistant, or
- Covered with a fire and water resistant tarp.

Explosives. Turn your engine off before loading or unloading any explosives. Then check the cargo space. You must:

- Disable cargo heaters. Disconnect heater poser sources and drain heater fuel tanks.
- Make sure there are no sharp points that might damage cargo. Look for bolts, screws, nails, broken side panels, and broken floor boards.
- Use a floor lining with Division 1.1, 1.2 or 1.3 (Class A or B explosives). The floors must be tight and the liner must be either non-metallic material or non-ferrous metal.

- Precautions for Specific Hazards

Use extra care to protect explosives. Never use hooks or other metal tools. Never drop, throw, or roll packages. Protect explosive packages from other cargo that might cause damage.

Do not transfer a Division 1.1, 1.2, or 1.3 (Class A or B explosive) from one vehicle to another on a public roadway except in an emergency. If safety requires an emergency transfer, set out red warning reflectors, flags, or electric lanterns. You must warn others on the road.

Never transport damaged packages of explosives. Do not take a package that shows any dampness or oily stain.

Do not transport Division 1.1 or 1.2 (Class A explosives) in triples or in vehicle combinations if:

- There is a marked or placarded cargo tank in the combination, or
- The other vehicle in the combination contains:
 - Division 1.1 A (initiating explosives)
 - Packages of Class 7 (radioactive) materials labeled "Yellow III",
 - Division 2.3 (poisonous gas) or Division 6.1 (poisonous) materials
 - Hazardous materials in a portable tank, on a DOT Spec 106A or 110A tank.

Class 8 (Corrosive) materials. If loading by hand, load breakable containers of corrosive liquid one by one. Keep them right side up. Do not drop or roll the containers. Load them onto an even floor surface. Stack carboys only if the lower tiers can bear the weight of the upper tiers safely.

Do not load nitric acid above any other product, or stack more than two high.

Load charged storage batteries so their liquid won't spill. Keep them right side up. Make sure other cargo won't fall against or short circuit them.

Never load corrosive liquids next to or above:

- Division 1.4 (Explosives C)
- Class 4 (Flammable Solids)
- Class 5 (Oxidizers)
- Division 2.3, Zone B Gases

Never load corrosive liquids with:

- Division 1.1 or 1.2 (Explosives A)
- Division 1.2 or 1.3 (Explosives B)
- Division 1.5 (Blasting Agents)
- Division 2.3, Zone A, Gases
- Division 4.2 (Spontaneously Combustible Materials)
- Division 6.1, PGI, Zone A (Poison Liquids)

Class 2 (Compressed Gases) Including Cryogenic Liquids. If your vehicle doesn't have racks to hold cylinders, the cargo space floor must be flat. The cylinders must be:

- Held upright or braced laying down flat, or
- In racks attached to the vehicle, or
- In boxes that will keep them from turning over.

Division 2.3 (poisonous gas) or division 6.1 (poisonous) materials. Never transport these materials in containers with interconnections. Never load a package labeled POISON or POISON GAS, in the driver's cab or sleeper or food material for human or animal consumption.

Class 7 (Radioactive) materials. Some packages of Class 7 (radioactive) materials bear a number called the "transport index". The shipper labels these packages Radioactive II or Radioactive III, and prints the packages's transport index on the label. Radiation surrounds each package, passing through all nearby packages's. To deal with this problem, the number of packages you can load together is controlled. Their closeness to people, animals, and unexposed film is also controlled. The transport index tells the degree of control needed during transportation. The total transport index of all packages in a single vehicle must not exceed 50.

Appendix A to this section shows rules for each transport index. It shows how close you can load Class 7 (radioactive) materials to people, animals, or film. For example, you can't leave a package with a transport index of 1.1 within 2 feet of people or cargo space walls.

Mixed loads. The rules require some products to be loaded separately. You cannot load them together in the same cargo space. Figure 9-7 lists some examples. The regulations (the Segregation and Separation Chart) name other materials you must keep apart.

DO NOT LOAD...	IN THE SAME VEHICLE WITH...
Division 6.1 or 2.3 (POISON or poison gas labeled material)	animal or human food unless the poison package is overpacked in an approved way. Foodstuffs are anything you swallow. However, mouthwash, toothpaste, and skin creams are not foodstuff.
Division 2.3 (poisonous) gas Zone A or Division 6.1 (poison) liquids, PGI, Zone A	Division 5.1 oxidizers, Class 3 flammable liquids, Class 8 corrosive liquids, Division 5.2 organic peroxides, Division 1.1, 1.2, 1.3 (Class A or B) explosives, Division 1.5 blasting agents, Division 2.1 flammable gases, Class 4 flammable solids.
Charged storage batteries	Division 1.1 (Class A Explosives).
Class 1 (Detonating primers)	any other explosives unless in authorized containers or packagings.
Division 6.1 (Cyanides or cyanide mixtures)	acids, corrosive materials, or other acidic materials which could release hydrocyanic acid from cyanides. For example: Cyanides, Inorganic, n.o.s. Silver Cyanide Sodium Cyanide
Nitric acid (Class 8)	other materials unless the nitric acid is not loaded above any other materials and not more than two tiers high.

Figure 9-7

Prohibited Loading Combinations

Test Your Knowledge
<ol style="list-style-type: none"> 1. Around which hazard classes must you never smoke? 2. Which three hazard classes should not be loaded into a trailer that has a heater/air conditioner unit? 3. Should the floor liner required for Division 1.1 or 1.2 (Explosives A) be stainless steel? 4. At the shipper's dock you're given a paper for 100 cartons of battery acid. You already have 100 lbs. of dry Silver Cyanide on board. What precautions do you have to take? 5. Name a hazard class that uses transport indexes to determine the amount that can be loaded in a single vehicle.
These questions may be on your test. If you can't answer all, reread Section 9.4.

9.5 Bulk Packaging Marking, Loading & Unloading

The glossary at the end of this section gives the meaning of the word bulk. Cargo tanks are bulk packagings permanently attached to a vehicle. Cargo tanks remain on the vehicle when you load and unload them. Portable tanks are bulk containers which are not permanently attached to a vehicle. The product is loaded or unloaded while the portable tanks are off the vehicle. Portable tanks are then put on a vehicle for transportation. There are many types of cargo tanks in use. The most common cargo tanks are MC306 and the DOT 406 for liquids and MC331 for gases.

You must display the ID number of the hazardous materials in portable tanks and cargo tanks and other bulk packagings (such as dump trucks). ID numbers are in column 4 of the Hazardous Materials Tables. The rules require black 100 mm (3.9 inch) numbers on orange panels, placards, or a white, diamond-shaped background if no placards are required. Specification cargo tanks must show retest date markings.

- Markings

Portable tanks must also show the lessee or owner's name. They must also display the shipping name of the contents on two opposing sides. The letters of the shipping name must be at least 2 inches tall on portable tanks with capacities of more than 1,000 gallons and 1 inch tall on portable tanks with capacities of less than 1,000 gallons. The ID number must appear on each side and each end of a portable tank or other bulk packaging that hold 1,000 gallons or more and on two opposing sides, if the portable tank holds less than 1,000 gallons. The ID numbers must still be visible when the portable tank is on the motor vehicle. If they are not visible, you must display the ID number on both sides and ends of the motor vehicle.

The person in charge of loading and unloading a cargo tank must be sure a qualified person is always watching. This person watching the loading or unloading must:

- Tank Loading
 - Be alert.
 - Have a clear view of the cargo tank.
 - Be within 25 feet of the tank.
 - Know of the hazards of the materials involved.
 - Know the procedures to follow in an emergency, and
 - Be authorized to move the cargo tank and able to do so.

Close all manholes and valves before moving a tank of hazardous materials, no matter how small the amount in the tank or how short the distance. Manholes and valves must be closed to prevent leaks.

- Flammable Liquids

Turn off your engine before loading or unloading any flammable liquids. Only run the engine if needed to operate a pump. Ground a cargo tank correctly before filling it through an open filling hole. Ground the tank before opening the filling hold, and maintain the ground until after closing the filling hole.

Keep liquid discharge valves on a compressed gas tank closed except when loading and unloading. Unless your engine runs a pump for product transfer, turn it off when loading or unloading. If you use the engine, turn it off after product transfer, before you unhook the hose. Unhook all loading/unloading connections before coupling, uncoupling, or moving a chlorine cargo tank. Always chock trailers and semi-trailers to prevent motion when uncoupled from the power unit.

- Compressed Gas

Test Your Knowledge
<ol style="list-style-type: none"> 1. What are cargo tanks? 2. How is a portable tank different from a cargo tank? 3. Your engine runs a pump used during delivery of compressed gas. Should you turn off the engine before or after unhooking hoses after delivery?
These questions may be on your test. If you can't answer them all, reread Sections 9.5.

Never park with Division 1.1, 1.2, or 1.3 (Class A or B) explosives within 5 feet of the traveled part of the road. Except for short periods of time needed for vehicle operation necessities (e.g., fueling), do not park within 300 feet of:

- A bridge, tunnel, or building.
- A place where people gather, or
- An open fire.

9.6 Hazardous Materials - Driving & Parking Rules

- Parking with Division 1.1, 1.2 or 1.3 (Class A or B) Explosives

If you must park to do your job, do so only briefly.

Don't park on private property unless the owner is aware of the danger. Someone must always watch the parked vehicle. You may let someone else watch it for you only if your vehicle is:

- On the shipper's property, or
- On the carrier's property, or
- On the consignee's property.

You are allowed to leave your vehicle unattended in a safe haven. A safe haven is an approved place for parking unattended vehicles loaded with explosives. Designation of authorized safe havens are usually made by local authorities.

You may park a placarded vehicle (not laden with explosives) within 5 feet of the traveled part of the road only if your work requires it. Do so only briefly. Someone must always watch the vehicle when parked on a public roadway or shoulder. Do not uncouple a trailer and leave it with hazardous materials on a public street. Do not park within 300 feet of an open fire.

- Parking A Placarded Vehicle Not Transporting Division 1.1, 1.2 or 1.3 (Explosives A or B)

- Attending Parked Vehicles

The person attending a placarded vehicle must:

- Be in the vehicle, awake, and not in the sleeper berth, or within 100 feet of the vehicle and have it within clear view.
- Be aware of the hazards of the materials being transported.
- Know what to do in emergencies, and
- Be able to move the vehicle if needed.

- No Flares!

You might break down and have to use stopped vehicle signals. Use reflective triangles or red electric lights. Never use burning signals, such as flares or fuses, around a:

- Tank used for Class 3 (flammable liquids) or division 2.1 (flammable gas) whether loaded or empty.
- Vehicle loaded with Division 1.1, 1.2 or 1.3 (Class A or B) explosives.

- Route Restrictions

Some states and counties require permits to transport hazardous materials or wastes. They may limit the routes you can use. Local rules about routes and permits change often. It is your job as driver to find out if you need permits or must use special routes. Make sure you have all needed papers before starting.

If you work for a carrier, ask your dispatcher about route restrictions or permits. If you are an independent trucker and are planning a new route, check with state agencies where you plan to travel. Some localities prohibit transportation of hazardous materials through tunnels, over bridges, or other roadways. Check before you start.

Whenever placarded, avoid heavily populated areas, crowds, tunnels, narrow streets, and alleys. Take other routes, even if inconvenient, unless there is no other way. Never drive a placarded vehicle near open fires unless you can safely pass without stopping.

If transporting Division 1.1, 1.2 or 1.3 (Class A or B) explosives, you must have a written route plan and follow that plan. Carriers prepare the route plan in advance, and give the driver a copy. You may plan the route yourself if you pick up the explosives at a location other than your employer's terminal. Write out the plan in advance. Keep a copy of it with you while transporting the explosives. Deliver shipments of explosives only to authorized persons or leave them in locked rooms designed for explosive storage.

A carrier must choose the safest route to transport placarded radioactive materials. After choosing the route, the carrier must tell the driver about the radioactive materials, and show the route plan.

Do not smoke within 25 feet of a placarded cargo tank used for Class 3 (flammable liquids) or Division 2.1 (gases). Also do not smoke or carry a lighted cigarette, cigar, or pipe within 25 feet of any vehicle which contains:

- No Smoking

Class 1
EXPLOSIVES

Class 3
FLAMMABLE LIQUIDS

Class 4
FLAMMABLE SOLIDS

Class 5
OXIDIZERS

Turn off your engine before fueling a motor vehicle containing hazardous materials. Someone must always be at the nozzle, controlling fuel flow.

- Refuel With Engine Off

The power unit of placarded vehicles must have a fire extinguisher with a UL rating of 10 B:C or more.

- 10 B:C Fire Extinguisher

Making sure your tires are properly inflated. Check placarded vehicles with dual tires at the start of each trip and when you park. You must stop and check the tires every 2 hours or 100 miles, whichever is less. The only acceptable way to check tire pressure is to use a tire pressure gauge.

- Check Tires Every 2 Hours/100 Miles

Do not drive with a tire that is leaking or flat except to the nearest safe place to fix it. Remove any overheated tire. Place it a safe distance from your vehicle. Don't drive until you correct the cause of the overheating. Remember to follow the rules about parking and attending placarded vehicles. They apply even when checking, repairing, or replacing tires.

Do not accept a hazardous materials shipment without a properly prepared shipping paper. A shipping paper for hazardous materials must always be easily recognized. Other people must be able to find it quickly after an accident.

- Where to Keep Shipping Papers and Emergency Response Information

- Clearly distinguish hazardous materials shipping papers from others by tabbing them or keeping them on top of the stack of papers.
- When you are behind the wheel, keep shipping papers within your reach (with your seat belt on), or in a pouch on the driver's door. They must be easily seen by someone entering the cab.
- When not behind the wheel, leave shipping papers in the driver's door pouch or on the driver's seat.
- Emergency response information must be kept in the same location as the shipping paper.

A carrier must give each driver transporting Division 1.1, 1.2 or 1.3 (Class A or B) explosives a copy of Federal Motor Carrier Safety Regulations (FMCSR), Part 397. The carrier must also give written instructions on what to do if delayed or in an accident. The written instructions must include:

- Papers for Division 1.1, 1.2 or 1.3 (Class A or B) Explosives

- Names and telephone numbers of people to contact (including carrier agents or shippers).
- The nature of the explosives transported.
- The precautions to take in emergencies such as fires, accidents, or leaks.

Drivers must sign a receipt for these documents.

You must be familiar with, and have in your possession while driving, the:

- Shipping papers.
- Written emergency instructions.
- Written route plan.
- A copy of FMCSR, Part 397.

- Equipment for Chlorine

A driver transporting chlorine in cargo tanks must have an approved gas mask in the vehicle. The driver must also have an emergency kit for controlling leaks in dome cover plate fitting on the cargo tank.

- Stop Before
Railroad Crossings

Stop before a railroad crossing if your vehicle:

- Is placarded, or
- Carries any amount of chlorine, or
- Has cargo tanks, whether loaded or empty, used for hazardous materials.

You must stop 15 to 50 feet before the nearest rail. Proceed only when you are sure no train is coming. Don't shift gears while crossing the tracks.

No Smoking
Warn Others
Keep People Away
Avoid Contact or Inhaling

9.7 Hazardous Materials -Emergencies

The Department of Transportation has a guidebook for fire fighters, police, and industry workers on how to protect themselves and the public from hazardous materials. The guide is indexed by proper shipping name and hazardous materials identification number. Emergency personnel look for these things on the shipping paper. That is why it is vital that the proper shipping name, ID number, label, and placards are correct.

As a professional driver, your job at the scene of an accident is to:

- Keep people away from the scene.
- Limit the spread of material, **only if you can safely do so.**
- Communicate the danger of the hazardous materials to emergency response personnel.
- Provide emergency responders with the shipping papers and emergency response information.

Follow this checklist:

- Check to see that your driving partner is OK.
- Keep shipping papers with you.
- Keep people far away & upwind.
- Warn others of the danger.
- Send for help.
- Follow your employer's instructions.

You might have to control minor truck fires on the road. **However, unless you have the training and equipment to do so safely, don't fight hazardous materials fires.** Dealing with hazardous materials fires requires special training and protective gear.

When you discover a fire, send for help. You may use the fire extinguisher to keep minor truck fires from spreading to cargo before fire fighters arrive. Feel trailer doors to see if they are hot before opening them. If hot, you may have a cargo fire and should not open the doors. Opening doors lets air in and may make the fire flare up. Without air, many fires only smolder until firemen arrive, doing less damage. If your cargo is already on fire, it is not safe to fight the fire. Keep the shipping papers with you to give to emergency personnel as soon as they arrive. **Warn other people of the danger and keep them away.**

- Emergency Response Guidebook (ERG)

- Accidents/Incidents

- Fires

If you discovered a cargo leak, identify the hazardous materials leaking by using shipping papers, labels, or package location. **Do not touch any leaking material - many people injure themselves by touching hazardous materials.** Do not try to identify the material or find the source of a leak by smell. Toxic gases can destroy your sense of smell, and can injure or kill you even if they don't smell. Never eat, drink, or smoke around a leak or spill.

If hazardous materials are spilling from your vehicle, do not move it any more than safety requires. You may move off the road and away from places where people gather, if doing so serves safety. Only move your vehicle if you can do so without danger to yourself or others.

Never continue driving with hazardous materials leaking from your vehicle in order to find a phone booth, truck stop, help or similar reason. Remember, the carrier pays for the cleanup of contaminated parking lots, roadways, and drainage ditches. The costs are enormous, so don't leave a lengthy trail of contamination. If hazardous materials are spilling from your vehicle:

- Park it.
- Secure the area.
- Stay there.
- Send someone else for help.

When sending someone for help, give that person:

- A description of the emergency.
- Your exact location and direction of travel.
- Your name, the carrier's name, and the name of the community or city where your terminal is located.
- The proper shipping name, hazard class, and ID number of the hazardous materials, if you know them.

This is a lot for someone to remember. It is a good idea to write it all down for the person you send for help. The emergency response team must know these things to find you and to handle the emergency. They may have to travel miles to get to you. This information will help them to bring the right equipment the first time, without having to go back for it.

Never move your vehicle, if doing so will cause contamination or damage the vehicle. Keep downwind and away from roadside rests, truckstops, cafes, businesses. Never try to repack leaking containers. Unless you have the training and equipment to repair leaks safely, don't try it. Call your dispatcher or supervisor for instructions, and, if needed, emergency personnel.

Class 1 (Explosives). If your vehicle has a breakdown or accident while carrying explosives, warn others of the danger. Keep bystanders away. Do not allow smoking or open fire near the vehicle. If there is a fire, warn everyone of the danger of explosion.

Remove all explosives before separating vehicles involved in a collision. Place the explosives at least 200 feet from the vehicles and occupied buildings. Stay a safe distance away.

Class 2 (Compressed Gases). If compressed gas is leaking from your vehicle, warn others of the danger. Only permit those involved in removing the hazard or wreckage to get close. You must notify the shipper if compressed gas is involved in any accident.

Unless you are fueling machinery used in road construction or maintenance, do not transfer a flammable compressed gas from one tank to another on any public roadway.

Class 3 (Flammable Liquids). If you are transporting a flammable liquid and have an accident or your vehicle breaks down, prevent bystanders from gathering. Warn people of the danger. Keep them from smoking.

Never transport a leaking cargo tank farther than needed to reach a safe place. Get off the roadway if you can do so safely. Don't transfer flammable liquid from one vehicle to another on a public roadway except an emergency.

Class 4 (Flammable Solids) and Class 5 (Oxidizing Materials). If a flammable solid or oxidizing material spills, warn others of the fire hazard. Do not open smoldering packages of flammable solids. Remove them from the vehicle if you can safely do so. Also remove unbroken packages if it will decrease the fire hazard.

Division 2.3 (Poison Gases) or Division 6.1 (Poisons). It is your job to protect yourself, other people, and property from harm. Remember that many products classed as poison are also flammable. If you think a leaking poison liquid or gas might be flammable, take the added precautions needed for flammable liquids or gases. Do not allow smoking, open flame, or welding. Warn others of the hazards of fire, of inhaling vapors, or coming in contact with the poison.

A vehicle involved in a leak of Division 2.3 (Poison Gases) or Division 6.1 (Poisons) must be checked for stray poison before being used again.

Class 7 (Radioactive Materials). If radioactive material is involved in a leak or broken package, tell your dispatcher or supervisor as soon as possible. If there is a spill, or if an internal container might be damaged, do not touch or inhale the material. Do not use the vehicle until it is cleaned and checked with a survey meter.

Class 8 (Corrosive Materials). If corrosives spill or leak during transportation, be careful to avoid further damage or injury when handling the containers. Parts of the vehicle exposed to a corrosive liquid must be thoroughly washed with water. After unloading, wash out the interior as soon as possible, before reloading.

If continuing to transport a leaking tank would be unsafe, get off the road. If safe to do so, try to contain any liquid leaking from the vehicle. Keep bystanders away from the liquid and its fumes. Do everything possible to prevent injury to others.

- Required Notification

The National Response Center helps coordinate emergency response to chemical hazards. It is a resource to the local police and fire fighters. It maintains a 24-hour toll-free line. You or your employer must phone when any of the following occur **as a direct result of a hazardous materials incident:**

- A person is killed.
- An injured person requires hospitalization.
- Estimated property damage exceeds \$50,000.
- The general public is evacuated for one or more hours.
- One or more major transportation arteries or facilities are closed or shut down for one hour or more.
- Fire, breakage, spillage or suspected contamination occurs involving shipment of etiologic agents (bacteria or toxins).

**NATIONAL RESPONSE
CENTER
(800) 424-8801**

Persons telephoning the National Resource Center should be ready to give:

- Their name.
- Name and address of the carrier they work for.
- Phone number where they can be reached.
- Date, time, and location of incident.
- The extent of injuries, if any.
- Classification, name, and quantity of hazardous materials involved, if such information is available.
- Type of incident and nature of hazardous materials involvement and whether a continuing danger to life exists at the scene.

If a reportable quantity of hazardous substance was involved, the caller should give the name of the shipper and the quantity of the hazardous substance discharged.

Be prepared to give your employer the required information as well. Carriers must make detailed written reports within 30 days of an incident.

The Chemical Transportation Emergency Center (CHEMTREC) in Washington also has a 24-hour toll-free line. CHEMTREC was created to provide emergency personnel with technical information about the physical properties of hazardous materials. The National Response Center and CHEMTREC are in close communication. If you call either one, they will tell the other about the problem when appropriate.

CHEMTREC
(800) 424-9300

Test Your Knowledge
<ol style="list-style-type: none">1. If your placarded trailer has dual tires, how often should you check the tires?2. What is a safe haven?3. How close to the travelled part of the roadway can you park with Division 1.2 or 1.3 (Explosive B)?4. How close can you park to a bridge, tunnel or building with the same load?5. What type of fire extinguisher must placarded vehicles carry?6. You're hauling 100 lbs of Division 4.3 (Dangerous When Wet) material. Do you need to stop before railroad crossings?7. At a rest area you discover your hazardous materials shipments slowly leaking from the vehicle. There's no phone around. What should you do?8. What is the Emergency Response Guide (ERG)?
These questions may be on your test. If you can't answer all, reread Sections 9.6 and 9.7.

Appendix A

Radioactive Separation Table

Do not leave radioactive yellow - II or yellow - III labeled packages near people, animals, or film longer than shown in this table.

TOTAL TRANSPORT INDEX	MINIMUM DISTANCE IN FEET TO NEAREST UNDEVELOPED FILM					TO PEOPLE OR CARGO COMPARTMENT PARTITIONS
	0-2 Hours	2-4 Hours	4-8 Hours	8-12 Hours	Over 12 Hours	
None	0	0	0	0	0	0
0.1 to 1.0	1	2	3	4	5	1
1.1 to 5.0	3	4	6	8	11	2
5.1 to 10.0	4	6	9	11	15	3
10.1 to 20.0	5	8	12	16	22	4
20.1 to 30.0	7	10	15	20	29	5
30.1 to 40.0	8	11	17	22	33	6
40.1 to 50.0	9	12	19	24	36	7

The total transport index must not exceed 50 of all radioactive materials packages in a single vehicle.

Appendix B

Table of Hazard Class Definitions

Kinds of Hazardous Materials

Hazardous materials are categorized into nine major hazard classes and additional categories for consumer commodities and combustible liquids. The classes of hazardous materials are as follows:

CLASS	CLASS NAME	EXAMPLE
1	Explosives	Ammunition, Dynamite, Fireworks
2	Gases	Propane, Oxygen, Helium
3	Flammable	Gasoline Fuel, Acetone
4	Flammable Solids	Matches, Fuses
5	Oxidizers	Ammonium Nitrate, Hydrogen Peroxide
6	Poisons	Pesticides, Arsenic
7	Radioactive	Uranium, Plutonium
8	Corrosives	Hydrochloric Acid, Battery Acid
9	Miscellaneous Hazardous Materials	Formaldehyde, Asbestos
None	ORM-D (Other Regulated Material-Domestic)	Hair Spray or Charcoal
None	Domestic Combustible Liquids	Fuel Oils, Lighter Fluid

The glossary presents definitions of certain terms used in this section. A complete glossary of terms can be found in the federal Hazardous Materials Rules (49 CFR 171.8). You should have an up-to-date copy of these rules for your reference.

(Note: You will not be tested on this glossary).

Sec. 171.8 Definitions and abbreviations.

Bulk packaging: means a packaging, other than a vessel, or a barge, including a transport vehicle or freight container, in which hazardous materials are loaded with no intermediate form of containment and which has:

- (1) A maximum capacity greater than 450L (119 gallons) as a receptacle for a liquid;
- (2) A maximum net mass greater than 400 kg (882 pounds) or a maximum capacity greater than 450L (119 gallons) as a receptacle for a solid; or
- (3) A water capacity greater than 454 kg (1,000 pounds) as receptacle for a gas as defined in Section 173.115.

Cargo tank: means a bulk packaging which:

- (1) Is a tank intended primarily for the carriage of liquids or gases and includes appurtenances, reinforcements, fittings and closures (for “tank”, see 49 CFR 178.345-1(c), 178.337-1, or 178.338-1, as applicable);
- (2) Is permanently attached to or form a part of a motor vehicle, or is not permanently attached to a motor vehicle but which, by reason of its size, construction or attachment to a motor vehicle is loaded or unloaded without being removed from the motor vehicle; and
- (3) Is not fabricated under a specification for cylinders, portable tanks, tank cars or multi-unit tank car tanks.

Carrier: means a person engaged in the transportation of passengers or property by:

- (1) Land or water, as a common, contract, or private carrier, or
- (2) Civil aircraft.

Consignee: means the business or person to whom a shipment is delivered.

Division: means a subdivision of a hazard class.

EPA: means U.S. Environmental Protection Agency.

FMCSR: means the Federal Motor Carrier Safety Regulations.

Freight container: means a reusable container having a volume of 64 cubic feet or more, designed and constructed to permit being lifted with its contents intact and intended primarily for containment of packages (in unit form) during transportation.

Fuel tank: means a tank other than a cargo tank, used to transport flammable or combustible liquid, or compressed gas for the purpose of supplying fuel for propulsion of the transport vehicle to which it is attached, or for the operation of other equipment on the transport vehicle.

Gross weight or gross mass: means the weight of a packaging plus the weight of its contents.

Hazard class: means the category of hazard assigned to a hazardous material under the definitional criteria of Part 173 and the provisions of the Sec. 172.101 Table. A material may meet the defining criteria for more than one hazard class but is assigned to only one hazard class.

Hazardous materials: means a substance or material, which has been determined by the Secretary of Transportation to be capable of posing an unreasonable risk to health, safety, and property when transported in commerce, and which has been so designated. The term includes hazardous substances, hazardous wastes, marine pollutants, and elevated temperature materials as defined in this section, materials designated as hazardous under the provisions of Sec. 172.101 and 172.102, and materials that meet the defining criteria for hazard classes and divisions in Part 173.

Hazardous substance: means a material, including its mixtures and solutions, that:

- (1) Is listed in Appendix A to Sec. 172.101;
- (2) Is in a quantity, in one package, which equals or exceeds the reportable quantity (RQ) listed in Appendix A to Sec. 172.101; and
- (3) When in a mixture or solution -
 - (i) For radionuclides, conforms to paragraph 6 of Appendix A to Sec. 172.101.
 - (ii) For other than radionuclides, is in a concentration by weight which equals or exceeds the concentration corresponding to the RQ of the material, as shown in the following table:

RQ POUNDS (KILO-GRAMS)	CONCENTRATION BY WEIGHT	
	Percent	PPM
5,000 (2270)	10	100,000
1,000 (454)	2	20,000
100 (45.4)	.02	2,000
10 (4.54)	0.02	200
1 (0.454)	0.002	20

This definition does not apply to petroleum products that are lubricants or fuels (see 40 CFR 300.6).

Hazardous waste: For the purposes of this chapter, means any material that is subject to the Hazardous Waste Manifest Requirements of the U.S. Environmental Protection Agency specified in 40 CFR Part 262.

Limited quantity: When specified as such in a section applicable to a particular material, means the maximum amount of a hazardous materials for which there may be specific labeling or packaging exception.

Marking: means the descriptive name, identification number, instructions, cautions, weight, specification, or UN marks or combinations thereof, required by this subchapter on outer packagings of hazardous materials.

Mixture: means a material composed of more than one chemical compound or element.

Name of contents: means the proper shipping name as specified in Sec. 172.101.

N.O.S.: means not otherwise specified.

Outage or ullage: means the amount by which a packaging falls short of being liquid full, usually expressed in percent by volume.

Portable tank: means a bulk packaging (except a cylinder having a water capacity of 1,000 pounds or less) designed primarily to be loaded onto, or on, or temporarily attached to a transport vehicle or ship and equipped with skids, mountings, or accessories to facilitate handling of the tank by mechanical means. It does not include a cargo tank, tank car, multi-unit tank car tank, or trailer carrying 3AX, 3AAX, or 3T cylinders.

Proper shipping name: means the name of the hazardous materials shown in Roman print (not italics) in Sec. 172.101.

P.S.I. or psi: means pounds per square inch.

P.S.I.A or psia: means pounds per square inch absolute.

Reportable quantity (RQ): means the quantity specified in Column 3 of the Appendix to Sec. 172.101 for any material identified in Column 1 of the Appendix.

RSPA: means the Research and Special Programs Administration, U.S. Department of Transportation, Washington, DC 20590.

Shipper's certification: means a statement on a shipping paper, signed by the shipper, saying he/she prepared the shipment properly according to law.

“This is to certify that the above named materials are properly classified, described, packaged, marked and labeled, and are in proper condition for transportation according to the applicable regulations or the Department of Transportation.” or

“I hereby declare that the contents of this consignment are fully and accurately described above the proper shipping name and are classified, packed, marked and labeled, and are in all respects in proper condition for transport by * according to applicable international and national government regulations.”

*Words may be inserted here to indicate mode of transportation (rail, aircraft, motor vehicle, vessel).

Shipping paper: means a shipping order, bill of lading, manifest or other shipping document serving a similar purpose and containing the information required by Sec. 172.202, 172.203 and 172.204.

Technical name: means a recognized chemical name or microbiological name currently used in scientific and technical handbooks, journals, and texts.

Transport vehicle: means a cargo-carrying vehicle such as an automobile, van, tractor, truck, semi-trailer, tank car or rail car used for the transportation of cargo by any mode. Each cargo-carrying body (trailer, rail car, etc.) is a separate transport vehicle.

UN standard packaging: means a specification packaging conforming to the requirements in Subpart L and M of Part 178.

UN: means United Nations.

Notes

Notes